

Symbio™ Runner and Symbio™ Home Runner

Assembly Instructions



Corporate Headquarters

Columbia Centre III, 9525 Bryn Mawr Avenue, Rosemont, IL 60018 • U.S.A.
847.288.3300 • FAX: 847.288.3703
Service phone number: 800.351.3737 (toll-free within U.S.A., Canada)
Global Website: www.lifefitness.com

International Offices

AMERICAS

North America

Life Fitness, LLC

Columbia Centre III
9525 Bryn Mawr Avenue
Rosemont, IL 60018 U.S.A.
Telephone: (847) 288 3300
Service Email:
customersupport@lifefitness.com
Sales/Marketing Email:
commercialsales@lifefitness.com

Brazil

Life Fitness Brasil

Av. Rebouças, 2315
Pinheiros
São Paulo, SP 05401-300
BRAZIL
SAC: 0800 773 8282 option 2
Telephone: +55 (11) 3095 5200 option 2
Service Email: suportebr@lifefitness.com
Sales/Marketing Email:
vendasbr@lifefitness.com

Latin America and Caribbean*

Life Fitness, LLC

Columbia Centre III
9525 Bryn Mawr Avenue
Rosemont, IL 60018 U.S.A.
Telephone: (847) 288 3300
Service Email:
customersupport@lifefitness.com
Sales/Marketing Email:
commercialsales@lifefitness.com

EUROPE, MIDDLE EAST, and AFRICA (EMEA)

Belgium, Netherlands, and Luxemburg

Life Fitness Atlantic BV

Bijdorpplein 25-31
2992 LB Barendrecht
THE NETHERLANDS
+3118064666
Service Email:
service.benelux@lifefitness.com
Sales/Marketing Email:
marketing.benelux@lifefitness.com

United Kingdom

Life Fitness UK LTD

Unit 109^a
Lancaster Way Business Park
Ely, Cambs, CB6 3NX
Telephone: General Office (+44)
1353.666017
Customer Support (+44) 1353.665507
Service Email: uk.support@lifefitness.com
Sales/Marketing Email: life@lifefitness.com

Germany, Austria, and Switzerland

Life Fitness Europe GMBH

Neuhofweg 9
85716 Unterschleißheim
GERMANY
Telephone:
+49 (0) 89 / 31775166 Germany
+43 (0) 1 / 6157198 Austria
+41 (0) 848 / 000901 Switzerland
Service Email:
kundendienst@lifefitness.com
Sales/Marketing Email:
vertrieb@lifefitness.com

Spain

Life Fitness IBERIA

C/Frederic Mompou 5,1^a
08960 Sant Just Desvern Barcelona
SPAIN
Telephone: (+34) 93.672.4660
Service Email:
servicio.tecnico@lifefitness.com
Sales/Marketing Email:
info.iberia@lifefitness.com

All Other EMEA Countries and Distributor Business EMEA*

Life Fitness Atlantic BV

Bijdorpplein 25-31
2992 LB Barendrecht
THE NETHERLANDS
+3118064666
Service Email:
emeaservicesupport@lifefitness.com

ASIA PACIFIC (AP)

Japan

Life Fitness Japan, Ltd

4-17-33 Minami Aoyama 1F/B1F
Minato-ku - Tokyo 107-0062
Japan
Telephone: (+81) 0120.114.482
Fax: (+81) 03-5770-5059
Service Email: service.lfj@lifefitness.com
Sales/Marketing Email:
sales@lifefitnessjapan.com

Hong Kong

Life Fitness Asia Pacific LTD

26/F, Global Trade Square
21 Wong Chuk Hang Road
Wong Chuk Hang
Hong Kong
Telephone: (+852) 25756262
Fax: (+852) 25756894
Service Email: service.hk@lifefitness.com
Sales/Marketing Email:
marketing.hk.asia@lifefitness.com

All Other Asia Pacific countries and distributor business Asia Pacific*

Life Fitness Asia Pacific LTD

26/F, Global Trade Square
21 Wong Chuk Hang Road
Wong Chuk Hang
Hong Kong
Telephone: (+852) 25756262
Fax: (+852) 25756894
Service Email: service.ap@lifefitness.com
Sales/Marketing Email:
marketing.hk.asia@lifefitness.com

*Also check www.lifefitness.com for local representation or distributor/dealer

User and Service Documents Link

<https://lfn.fit/KnowledgeBase>

<https://lfn.fit/SupportDocuments>

Additional information is available online using the links above.

تتوفر معلومات إضافية على الإنترنت باستخدام الرابط أعلاه.

点击上面的链接可在线获取更多信息。

Flere oplysninger er tilgængelige online gennem linket ovenfor.

Bijkomende informatie is online beschikbaar via bovenstaande link.

Vous trouverez plus d'informations en ligne à l'aide du lien ci-dessus.

Zusätzliche Informationen finden Sie online über den oben angegebenen Link.

Ulteriori informazioni sono disponibili online utilizzando il link sopra riportato.

追加情報は上記リンクを使用してオンラインで利用可能です。

상기 링크를 통해 온라인에서 추가 정보를 볼 수 있습니다.

Informações adicionais estão disponíveis on-line, através do link acima.

Дополнительная информация доступна в интернете по ссылке, указанной выше.

Mediante el enlace anterior podrá acceder a información adicional en línea.

Ytterligare information finns online genom att använda länken ovan.

İnternet üzerinden daha fazla bilgi edinmek için yukarıdaki bağlantıyı kullanabilirsiniz.

هناك معلومات إضافية متاحة على الإنترنت باستخدام الرابط أعلاه.

Informazio osagarria eskuragarri dago goiko estekaren bidez.

Допълнителна информация можете да намерите онлайн, като използвате връзката по-горе.

Mitjançant l'enllaç anterior podreu accedir a informació addicional en línia.

使用上面的連結線上提供額外資訊。

Dodatne informacije možete pronaći na internetu sljedeći vezu iznad.

ከላይ የተቀመጠውን አገናኝ(ሊንክ) በመጠቀም መረጃዎች አንላይን ያገኛሉ።

Lisätietoja on saatavissa verkosta käyttämällä yllä olevaa linkkiä.

Wubetumi anya nsem afoforo aka ho wo websait so denam asem a ewo atifi ho a wubemia so so.

Πρόσθετες πληροφορίες είναι διαθέσιμες online χρησιμοποιώντας το σύνδεσμο παραπάνω.

מידע נוסף אפשר לקבל באינטרנט באמצעות הקישור לעיל.

További információ elérhető online, a fenti hivatkozás segítségével.

Viðbótarupplýsingar eru fáanlegar á netinu með því að smella á tengilinn hér fyrir ofan.

Plus indicium per superum situm potes invenire.

മുകളിലുള്ള ലിങ്ക് ഉപയോഗിച്ച് ഓൺലൈനിൽ കൂടുതൽ വിവരങ്ങൾ ലഭ്യമാണ്.

Ytterligere informasjon er tilgjengelig på nettet via linken ovenfor.

Dodatkowe informacje są dostępne online pod powyższym odnośnikiem.

Informações adicionais estão disponíveis online a usar o link acima.

Informații suplimentare sunt disponibile online, utilizând link-ul de mai sus.

Dodatne informacije dostupne su na mreži putem gornjeg linka.

Ďalšie informácie sú dostupné online na vyššie uvedenom odkaze.

Table of Contents

Additional Information

Link to Additional Information Online.....	4
--	---

Getting Started

Safety Instructions.....	5
Consignes de Sécurité.....	7
Immobilization Method	9
Electrical Power Requirements.....	11
Grounding Instructions.....	11
How to Position and Stabilize the Unit.....	12
Safety Clearances	12
Turning the Unit On / Off.....	14
Stride Sensor+ Auto-Shutoff System.....	14

Product Overview

Product Features.....	15
Connections.....	16
Mounting and Dismounting the Unit.....	17
User Position.....	17
Using the Emergency Stop System.....	17
How To Adjust Smart Lighting.....	18
Qi® Wireless Induction Charger.....	20

Assembly Procedure

Link to Additional Information Online.....	21
Hardware and Required Tools.....	22
Attach Motor Side Shrouds to Base Frame.....	23
Attach Uprights to Base.....	23
Attach Top Bridge Assembly to Uprights.....	24
Snap Top Bridge Covers on Bridge.....	25
Attach Outer Castings to Uprights.....	26
Tightening Sequence for Uprights Bolts.....	27
Place Motor Cover Over Motor Pan.....	32
Attach Console Mount to Bridge.....	33
Attach Grounding Braid Cable to Console Mounting Bracket.....	34
Secure Top Bridge Covers to Bridge.....	35
Tightening Sequence for Upright Outer Casting Bolts.....	36
Route Cables.....	37
Attach LF LED Bug to Uprights.....	38
Attach Lower Bridge Plastic to Bridge.....	39
Place Console on Console Mount.....	40
Base to Console Cable Connections.....	41
Secure Console to Console Mount.....	41
Attach Power Cord and Make I/O Panel Connections.....	42
Test Unit For Proper Operation.....	42
Attach Console Rear Cover.....	43

Attach L-Shaped Shroud Covers to Upright

Outer Castings.....	43
Tighten Motor Side Shrouds Screws.....	43
Attach Motor Cover.....	44
Attach Grommets to Bridge.....	44
Attach Inner Shrouds to Uprights.....	44
Fit and Finish Guidelines.....	45

Specifications

Specifications.....	46
---------------------	----

Service and Technical Data

Preventive Maintenance Tips.....	48
Approved and Compatible Cleaners.....	48
Preventive Maintenance Schedule.....	48
Troubleshooting the Treadmill.....	49
Troubleshooting - Smart Lighting.....	51
Troubleshooting - Wireless Charger.....	52
Troubleshooting the Polar® Heart Rate Chest Strap.....	52
Mobility Wheel	54
How To's.....	56

Warranty

What is Covered.....	60
Who is Covered.....	60
How Long It is Covered.....	60
Who Pays Transportation and Insurance For Service.....	60
What We Will Do To Correct Covered Defects.....	60
What is Not Covered.....	60
What You Must Do.....	60
How to Get Parts and Service.....	60
Exclusive Warranty.....	60
Changes in Warranty Not Authorized.....	61
Effects of State Laws.....	61
Terms of Warranty Coverage.....	61

Life Fitness® is a registered trademark.

Gym Wipes® is a registered trademark of the 2XL Corporation. PureGreen 24 is a trademark of Pure Green.

© Copyright 2025, Life Fitness, LLC. All Rights Reserved. Life Fitness, Hammer Strength, Cybex, ICG and SCIFIT are registered trademarks of Life Fitness, LLC and its affiliated companies and subsidiaries. Disclaimer: Images and specifications are current as of the date of publication and are subject to change.

Columbia Center III - 9525 Bryn Mawr Ave., Rosemont, IL 60018 • 847-288-3300

www.lifefitness.com • 1022782-0001 AF • 2025

1. Additional Information

Link to Additional Information Online

In addition to the content provided in this manual, please scan the QR code for further and updated information.

Commercial

Life Fitness Symbio Runner Commercial Install Information



<https://lfn.fit/SymbioRunnerInstall>

Home


Life Fitness Symbio Runner Home Install Information



<http://lfn.fit/SymbioRunnerHomeInstall>

2. Getting Started

Safety Instructions

 Read all instructions before use.



CAUTION: Any changes or modifications to this equipment could void the product warranty.



CAUTION: Risk of injury to persons – to avoid injury, use extreme caution when stepping onto or off of a moving belt. Read assembly instruction manual before using.



WARNING: Health-related injuries may result from incorrect or excessive use of exercise equipment. Life Fitness STRONGLY recommends seeing a physician for a complete medical exam before undertaking an exercise program, particularly if the user has a family history of high blood pressure or heart disease, is over the age of 45, smokes, has high cholesterol, is obese, or has not exercised regularly in the past year. If, at any time while exercising, the user experiences faintness, dizziness, pain, or shortness of breath, he or she must stop immediately.



WARNING: To reduce the risk of burns, fire, electric shock, or injury, it is imperative to connect each product to a properly grounded electrical outlet.



WARNING: Heart rate monitoring systems may be inaccurate. Over exercising may result in serious injury or death. If you feel faint, stop exercising immediately.



WARNING: Do not use for stretching and do not attach straps or other devices.



WARNING: Keep batteries out of reach of children.

Some chest straps may contain a removable battery.

- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
- If you suspect your child has swallowed a battery, immediately call your local poison control for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Tell others about the risk associated with button batteries and how to keep their children safe.



WARNING: Keep the area 6.5 ft. / 2 m by 3 ft. / 0.9 m behind the treadmill clear of any obstructions, including walls, furniture, and other equipment. Contact Customer Support Services for an optional longer power cord if necessary.



WARNING: Be sure the emergency stop lanyard is clipped to the user and in proper position on the treadmill before beginning any workout.



WARNING: The belt centering adjustment must be performed if the belt is not between the marks indicating the maximum allowed lateral positions. Refer to Treadmill Assembly Instructions.



WARNING: This product can expose you to chemicals including 1,3-butadiene, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.





DANGER: To reduce the risk of electrical shock or injury from moving parts, always unplug product before cleaning or attempting any maintenance activity.


- Life Fitness does not warrant nor guarantee that component parts used in the manufacture of products offered under the Life Fitness are latex-free. Users of these products must take all necessary precautions to prevent accidental contact that could lead to an adverse latex reaction.
- Never operate the product if it has a damaged power cord or electrical plug, or if it has been dropped, damaged, or even partially immersed in water. Contact Customer Support Services.
- Position the product so that the power cord plug to the wall is accessible to the user. Make sure that the power cord is not knotted or twisted and that it is not trapped under any equipment or other objects.
- If the electrical supply cord is damaged, it must be replaced by the manufacturer, an authorized service agent, or a similarly qualified person to avoid a hazard.
- Always follow the console instructions for proper operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge unless they have supervision or been given instruction concerning the use of the appliance by a person responsible for their safety.
- Do not use this product outdoors, near swimming pools or in areas of high humidity.


- Never operate the product with the air openings blocked. Keep air openings free of lint, hair, or any other obstructing material.
- Never insert objects into any opening in these products. If an object should drop inside, turn off the power, unplug the power cord from the outlet, and carefully retrieve it. If the item cannot be reached, contact Customer Support Services.
- Never place liquids of any type directly on the unit, except in an accessory tray or holder. Containers with lids are recommended.
- Do not use these products in bare feet. Always wear shoes. Wear shoes with rubber or high-traction soles. Do not use shoes with heels, leather soles, cleats or spikes. Make sure no stones are embedded in the soles.
- Keep all loose clothing, shoelaces, and towels away from moving parts.
- Do not reach into, or underneath, the unit or tip it on its side during operation.
- This equipment is not intended for use by children. Keep children under the age of 14 away from the machine.
- Do not allow other people to interfere in any way with the user or equipment during a workout.
- Allow LCD consoles to “normalize” with respect to temperature for one hour before plugging the unit in and using.
- When the product is not in use, Life Fitness recommends unplugging the product. Disconnect from the electrical outlet when not in use, and before putting on or taking off parts. To disconnect, turn power OFF at the ON/OFF switch, then remove plug from electrical outlet.
- Keep the power cord away from heated surfaces. Do not pull the equipment by the power cord or use the cord as a handle. Do not run the power cord on the floor under or along the side of the treadmill.
- Handrails may be held to enhance stability as needed, but are not for continuous use.
- Never mount or dismount the treadmill while the running belt is moving. Use the handrails whenever additional stability is required. In case of an emergency, such as tripping, grasp the handrails, and place the feet on the side platforms.
- Never walk or jog backwards on the treadmill.
- Do not use this product in areas where aerosol spray products are being used or where oxygen is being administered. Such substances create the danger of combustion and explosion.
- Use these products for their intended use as described in this manual. Do not use attachments that have not been recommended by the manufacturer.
- In conformity with the European Union Machinery Directive 2006/42/EC, this equipment unloaded runs at sound pressure levels below 70 dB (A) at the average operating speed of 12 km/hr (commercial units) and 8 km/hr (home units). Noise emission under load is higher than without load.
- Free standing equipment shall be installed on a stable and leveled surface.
- Read all warnings on each product prior to starting a workout.
- If warnings are missing or damaged, please contact Customer Support Services immediately for replacement warning labels. Warning labels are shipped with every product and should be installed before product is used. Life Fitness is not responsible for missing or damaged warning labels.


Consignes de Sécurité


 Veuillez lire toutes les instructions avant usage.

 **AVERTISSEMENT :** Des problèmes de santé peuvent survenir en cas d'une utilisation incorrecte ou excessive de l'équipement. Life Fitness Recommande VIVEMENT aux utilisateurs de passer un examen médical complet avant d'entamer un programme d'entraînement, et tout particulièrement dans les cas suivants : antécédents familiaux d'hypertension (pression sanguine trop élevée) ou de pathologies cardiaques, utilisateurs de 45 ans ou plus, tabagisme, hypercholestérolémie (taux de cholestérol sanguin trop élevé), obésité, absence d'exercice physique depuis un an ou plus. Si, pendant l'usage de l'appareil, l'utilisateur éprouve un malaise, des vertiges, des douleurs ou des difficultés à respirer, il doit s'arrêter immédiatement.

 **ATTENTION :** Toute modification apportée à cet équipement pourrait en annuler la garantie.

 **DANGER :** Pour réduire les risques de chocs électriques ou de blessures en raison des pièces mobiles, débranchez toujours les produits avant de les nettoyer ou de procéder aux tâches d'entretien.

 **AVERTISSEMENT :** Pour réduire les risques de brûlures, d'incendies, de décharges électriques ou de blessures, il est essentiel de brancher chaque appareil sur une prise électrique correctement mise à la terre.


 **AVERTISSEMENT :** Les systèmes de surveillance de la fréquence cardiaque peuvent être inexacts. Un exercice trop intensif peut entraîner des blessures graves, voire mortelles. En cas de malaise, interrompez immédiatement la séance d'entraînement.


 **AVERTISSEMENT :** Ne pas utiliser pour des étirements et ne pas y attacher des sangles ou autres dispositifs.


 **AVERTISSEMENT :** Tenir les piles hors de portée des enfants.


Certaines sangles de poitrine peuvent contenir une pile jetable.

- L'ingestion de la pile peut provoquer des blessures graves voire la mort en moins de 2 heures en raison du risque de brûlures chimiques et de perforation de l'œsophage.
- Si vous pensez que votre enfant a avalé une pile, contactez immédiatement le centre anti-poison local pour obtenir des conseils spécifiques.
- Contrôlez l'appareil et assurez-vous que le compartiment pour pile est bien fermé, par exemple que la vis ou toute autre fixation mécanique est bien serrée. Ne pas utiliser le produit si le compartiment n'est pas bien fermé.
- Éliminer les piles bouton immédiatement et de manière sûre. Les piles bouton sont une source de danger.
- Informez les tiers des risques associés aux piles bouton et de la manière dont ils doivent agir pour protéger leurs enfants.

 **AVERTISSEMENT :** Laissez un espace de 2 m sur 90 cm (6,5 pieds sur 3 pieds) autour de la machine. Ne placez pas cette dernière près de murs, meubles ou autres équipements qui pourraient en obstruer l'accès. Contactez le service à la clientèle pour obtenir un cordon plus long au besoin.

 **AVERTISSEMENT :** Avant de commencer tout exercice, il convient de s'assurer que le cordon de sécurité est bien fixé à l'utilisateur et correctement placé sur le tapis de course.

 **AVERTISSEMENT :** La surface de course doit être recentrée si elle ne se situe pas entre les marques indiquant les positions latérales maximales autorisées. Consultez les instructions d'assemblage du tapis de course.

 **ATTENTION :** Risque de blessures - pour éviter toute blessure, faire preuve d'extrême prudence pour monter sur un tapis en mouvement, ou pour en descendre. Lisez les instructions d'assemblage avant toute utilisation.


- Ne faites jamais fonctionner le produit dont la fiche ou le cordon d'alimentation sont altérés ni aucun appareil qui serait tombé, aurait été endommagé ou même partiellement plongé dans l'eau. Contactez le service à la clientèle.
- Placez l'appareil de façon à ce que l'utilisateur ait accès à la fiche du cordon d'alimentation. Assurez-vous que le cordon d'alimentation n'est pas noué ou tordu et qu'il n'est pas coincé sous un autre appareil ou sous tout autre objet.
- Si le cordon d'alimentation électrique est endommagé, il doit être remplacé par le fabricant, par un réparateur agréé ou par une personne qualifiée afin d'éviter tout danger.
- Pour un fonctionnement correct, suivez toujours les instructions de la console.
- Cet appareil n'est pas destiné à être utilisé par des personnes ou des enfants présentant des capacités physiques, sensorielles ou mentales réduites, ou un manque d'expérience et de connaissances, sauf en cas de supervision ou d'instructions relatives à son utilisation par une personne responsable de leur sécurité.
- N'utilisez pas ce produit à l'extérieur, près d'une piscine ou dans des endroits très humides.
- N'utilisez jamais le produit avec les ouvertures d'air bloquées. Maintenez les bouches d'aération exemptes de peluches, de cheveux ou de toute autre obstruction.

- N'introduisez jamais d'objet dans les ouvertures de cet appareil. Si un objet tombe dans l'appareil, mettez ce dernier hors tension, débranchez le cordon d'alimentation et récupérez l'objet avec précaution. Si vous ne pouvez pas l'atteindre, contactez le service d'assistance à la clientèle.
- Ne placez jamais de liquides d'aucune sorte directement sur l'appareil, sauf si vous disposez d'un support ou d'un plateau pour accessoires. Nous vous recommandons de n'utiliser que des récipients pourvus d'un couvercle.
- N'utilisez pas ces produits avec les pieds nus. Portez toujours des chaussures. Portez des chaussures à semelles en caoutchouc ou antidérapantes. N'utilisez pas de chaussures à talon, à semelle en cuir, à crampons ou à pointes. Assurez-vous qu'aucun caillou ne s'est incrusté dans les semelles.
- Éloignez les vêtements amples, les lacets de chaussure et les serviettes des parties mobiles de l'appareil.
- Ne placez pas les mains à l'intérieur ou sous l'appareil. Ne le faites pas basculer sur le côté durant son fonctionnement.
- Cet équipement n'est pas destiné à être utilisé par les enfants. Tenez les enfants âgés de moins de 14 ans à l'écart de la machine.
- Ne laissez aucune personne gêner l'utilisateur ou le fonctionnement de l'appareil pendant l'exercice.
- Laissez les consoles LCD s'adapter à la température ambiante pendant une heure avant de brancher l'appareil et de l'utiliser.
- Life Fitness recommande de débrancher le produit quand il n'est pas utilisé. Débranchez-le systématiquement après son utilisation et avant l'ajout et le retrait de pièces. Pour débrancher l'appareil, placez l'interrupteur de marche/arrêt sur ARRÊT et ôtez la prise électrique du mur.
- Maintenez le cordon d'alimentation à l'écart des surfaces chauffées. Ne tirez pas l'appareil par son cordon et n'utilisez pas celui-ci comme une poignée. Ne faites pas passer le cordon sur le sol, sous le tapis de course, ni le long de l'appareil.
- Les barres d'appui latérales peuvent servir à améliorer la stabilité, le cas échéant, mais elles ne sont pas conçues pour être utilisées de façon continue.
- Ne montez ni ne descendez jamais du tapis de course lorsque celui-ci est en mouvement. Le cas échéant, utilisez les barres latérales pour renforcer votre stabilité. En cas d'urgence, si vous trébuchez par exemple, saisissez les barres latérales et placez les pieds sur les plates-formes latérales.
- Ne reculez jamais sur le tapis, que ce soit en marchant ou en courant.
- N'utilisez pas l'appareil en présence d'aérosols ou en cas d'administration d'oxygène. Ces substances pourraient entraîner des risques d'incendie et d'explosion.
- Le système provoque une immobilisation du tapis de course lorsqu'une séquence de touches de clavier prédéfinie est activée. Cette séquence est activée en appuyant 3 fois sur la touche **ARRÊT** puis 3 fois sur la **TOUCHE FLÉCHÉE RALENTIR**. Pour éviter un basculement accidentel de la fonctionnalité d'immobilisation, cette séquence doit être effectuée dans une période comprise entre 5 et 10 secondes.
- Utilisez cet équipement uniquement aux fins auxquelles il est destiné et de la manière décrite dans le présent manuel. N'utilisez pas d'accessoires non recommandés par le fabricant.
- Conformément à la directive Machines 2006/42/EC de l'Union européenne, à vide, cet équipement sans charge fonctionne à des niveaux de pression acoustique inférieurs à 70 dB(A) à une vitesse de fonctionnement moyenne de 12 km/h (gamme commerciale) et 8 km/h (gamme domestique). L'émission de bruit sous charge est plus élevée qu'à vide.
- L'appareil utilisé de manière autonome doit être installé sur une surface stable et plane.
- Lisez les avertissements sur chaque produit avant de commencer à vous entraîner.
- Si certaines étiquettes d'avertissement sont manquantes ou endommagées, contactez immédiatement le service d'assistance à la clientèle. Nous vous en fournirons de nouvelles. Les étiquettes d'avertissement sont expédiées avec les appareils et doivent être installées avant utilisation de ces derniers. Life Fitness n'est pas responsable des étiquettes manquantes ou endommagées.


Immobilization Method

The purpose of immobilizing the unit is to prevent unauthorized use. The system causes immobilization of the unit when activated.


- 1. Tap the **LANGUAGE** icon on the **ATTRACT SCREEN** to access the **SELECT LANGUAGE** screen. (Language Icon position may vary on consoles.)

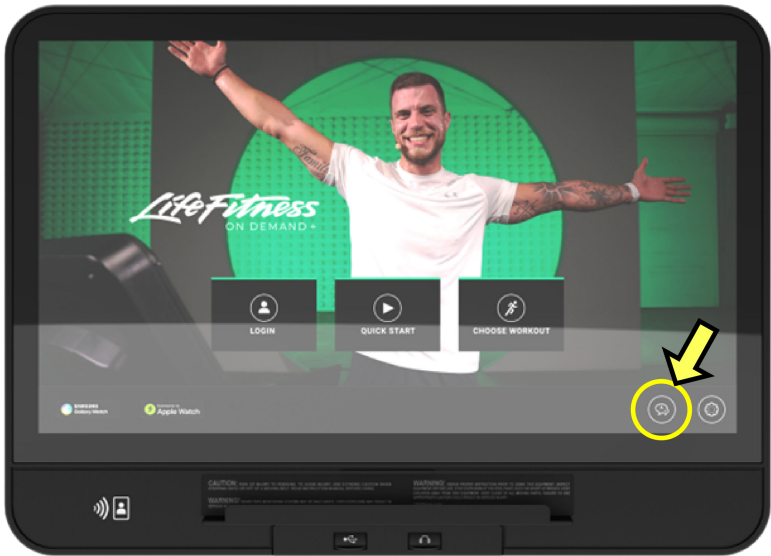

- 2. Tap the lower part of the **SELECT LANGUAGE** screen in the following sequence: **Lower-Left**, **Lower-Right**, **Lower-Left**, and **Lower-Right**.

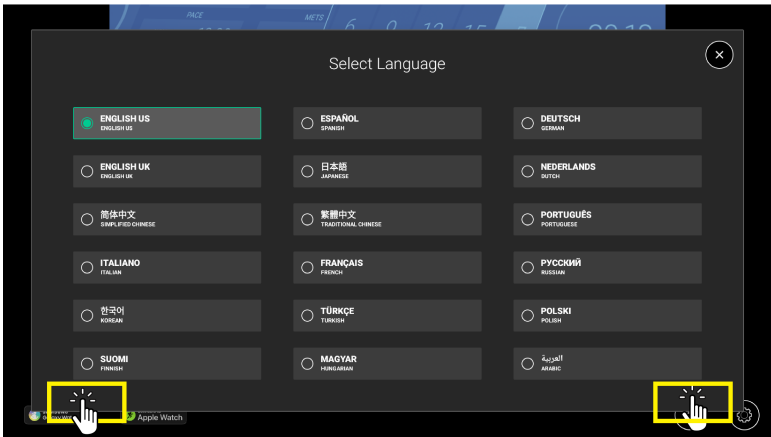


- 3. Tap the **Immobilize Unit** icon. **Enabled** will be displayed.

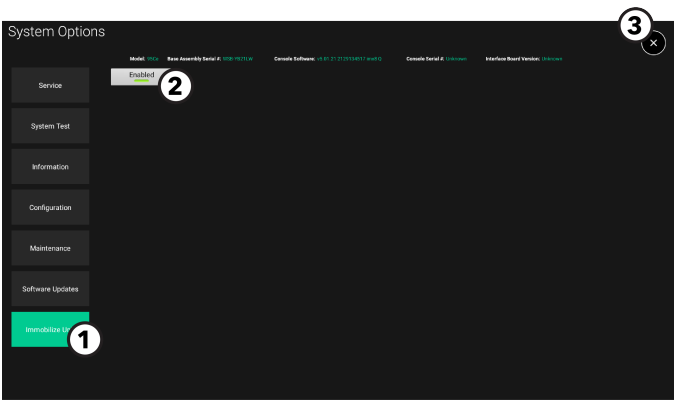



Item	Description
1	Immobilize Unit icon
2	Enabled icon
3	Exit icon

- 4. Tap the exit icon **X** to exit **System Options**.
- 5. Unit will reboot.

6. **UNIT IMMOBILIZED BY MANAGER** message appears on screen.

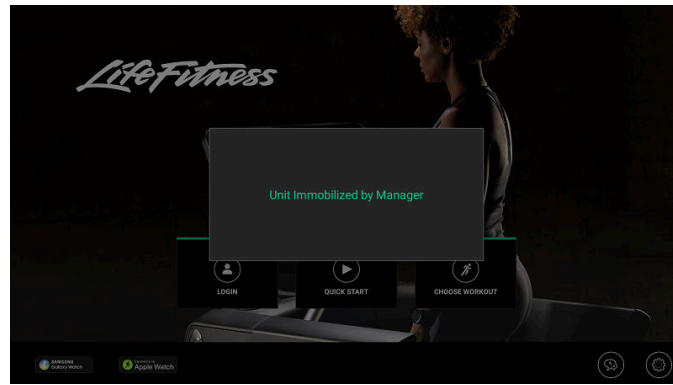

7. Tap the upper part of the **ATTRACT SCREEN** in the following sequence: **Upper-Left**, **Upper-Right**, **Upper-Left**, and **Upper-Right** to enter **SYSTEM OPTIONS**.
8. Tap the **Immobilize Unit** icon to disable.

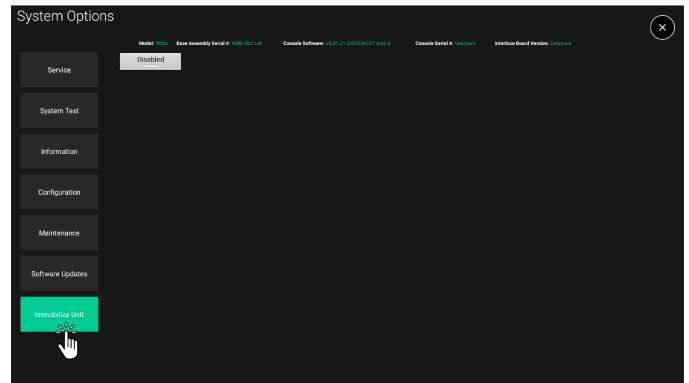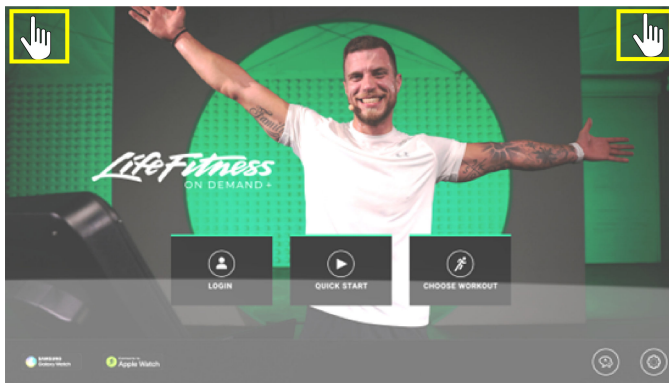

Electrical Power Requirements

The unit requires a dedicated* line with isolated neutral according to the electrical configurations listed in the chart below.


Supply Voltage	Frequency (Hz)	Commercial Units Outlet & Breaker (Amps)	Consumer / Home Units Outlet & Breaker (Amps)
100 / 120	50 / 60	20	20
200 / 220 / 230 / 240	50 / 60	10	10


* **Commercial Units Only:** One individual branch circuit for each unit per NEC article 210-21 (b) (1) and 210-22 (or other appropriate, country specific electrical compliance guidelines). The hot and neutral wires must each be routed independently (not looped or tied to other circuits).


NOTE: Do not modify the plug provided with this product. If the plug does not fit into an available electrical outlet, have a proper outlet installed by a qualified electrician.


Grounding Instructions


This product must be properly grounded. If the unit malfunctions or breaks down, proper grounding provides a path of least resistance for the electric current, which reduces the risk of shock to anyone touching or using the equipment. Each unit is equipped with an electrical cord, which includes an equipment grounding conductor and a grounding plug. The plug must be inserted into an outlet that has been properly installed and grounded in accordance with all local codes and ordinances.


 **WARNING:** A temporary adapter **MUST NOT BE USED** to connect this plug to a two-pole receptacle in North America. If a properly grounded, 20-amp outlet is not available, one must be installed by a qualified electrician. Models drawing 16 amps or more must be installed on a dedicated line. (Commercial Units Only).

 **AVERTISSEMENT :** Si vous êtes aux États-Unis, n'utilisez PAS d'adaptateur temporaire pour raccorder la fiche à un adaptateur bipolaire. Si aucune prise de 20 A correctement mise à la terre n'est disponible, il convient d'en faire installer une par un électricien qualifié. Les modèles utilisant 16 A ou plus doivent être installés sur des lignes qui leur sont réservées. (Gamme commerciale uniquement).

 **WARNING:** A temporary adapter **MUST NOT BE USED** to connect this plug to a two-pole receptacle in North America. If a properly grounded, 15-amp outlet is not available, one must be installed by a qualified electrician. (Consumer Units Only).

 **AVERTISSEMENT :** Si vous êtes aux États-Unis, n'utilisez PAS d'adaptateur temporaire pour raccorder la fiche à un adaptateur bipolaire. Si aucune prise de 15 A correctement mise à la terre n'est disponible, il convient d'en faire installer une par un électricien qualifié. (Gamme grand public uniquement).

 **DANGER:** A risk of electrical shock may result from improper connection of the equipment-grounding conductor. Check with a qualified electrician if in doubt as to proper grounding technique. **DO NOT** modify the plug provided with the product. If it will not fit an electrical outlet, have a proper outlet installed by a qualified electrician. Any modification to the electrical plug will result in a voided warranty.

 **DANGER :** Un branchement incorrect du conducteur de mise à la terre de l'équipement peut entraîner des risques de décharges électriques. Consultez un électricien si des doutes subsistent quant à la technique de mise à la terre. **NE MODIFIEZ PAS** la fiche fournie avec l'appareil. Si cette dernière n'entre pas dans la prise, faites effectuer l'installation par un technicien qualifié. Toute modification de la fiche entraînerait une annulation de la garantie.

How to Position and Stabilize the Unit

Follow all safety instructions. Move the treadmill to the location in which it will be used.


NOTE: See *How to Adjust and Tension the Striding Belt* to center the striding belt.

Safety Clearances


The following information is supplied as regional reference data regarding safety clearances around the exterior of the unit.

- **EU:** The European EN ISO 20957 Safety Standard requires a 6.5 ft. / 2 m minimum from the rear of the unit to any object or surface and at least as wide as the unit.
- **U.S. and other regions:** The ASTM International (ASTM) F2115 - 12 Standard recommends the minimum dimensions to be 1.64 ft. / 0.5 m on each side of the unit and 6.5 ft. / 2 m behind the rearward most portion of the usable moving surface or 6.5 ft. / 2 m behind the furthest rearward obstruction to emergency egress from the unit.

Free Area

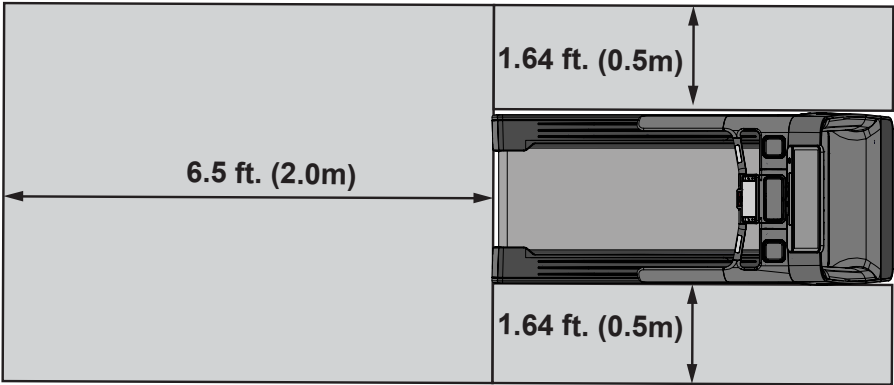


After placing the unit where it will be used, check its stability. If there is even a slight rocking motion or the unit is not stable, determine which stabilizing leg is not resting on the floor. Engage mobility wheel. To adjust, loosen the Jam Nut, and turn the Stabilizing Leg until the rocking motion ceases, and both stabilizing legs rest firmly on the floor. Release mobility wheel. Re-tighten the Jam Nut.

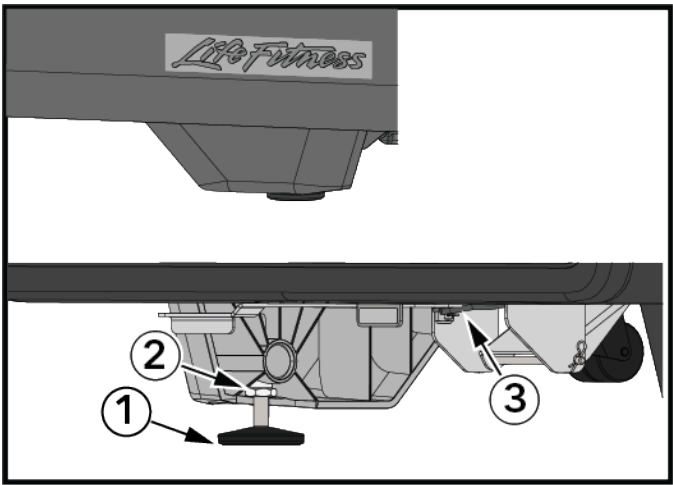


Item	Description
1	Stabilizing Leg
2	Jam Nut
3	Mobility Wheel Lever

NOTE: Do not adjust leveling leg more than 12mm / 0.47 in. from the home position.

Home Position

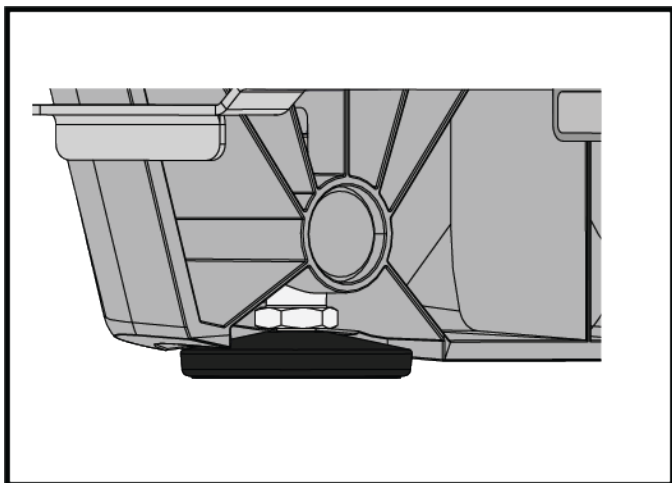

Maximum 12mm / 0.47 in. from Home Position

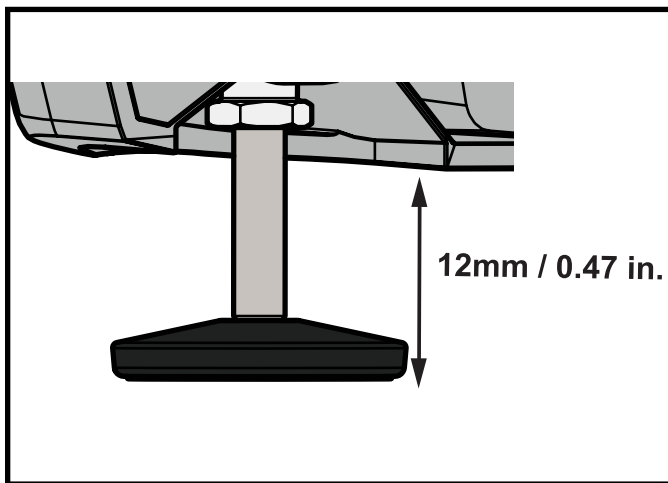


NOTE: When one leveling leg isn't touching the ground, the opposite should be turned in. This will prevent false incline values and the Mobility wheel not able to touch the ground.

NOTE: It is extremely important that the stabilizing leg be correctly adjusted for proper operation. An unbalanced unit may cause striding belt misalignment. A bubble level is recommended to ensure proper leveling.

Turning the Unit On / Off

Located under the unit, the power switch has two positions: "1" (one) for ON and "0" (zero) for OFF.

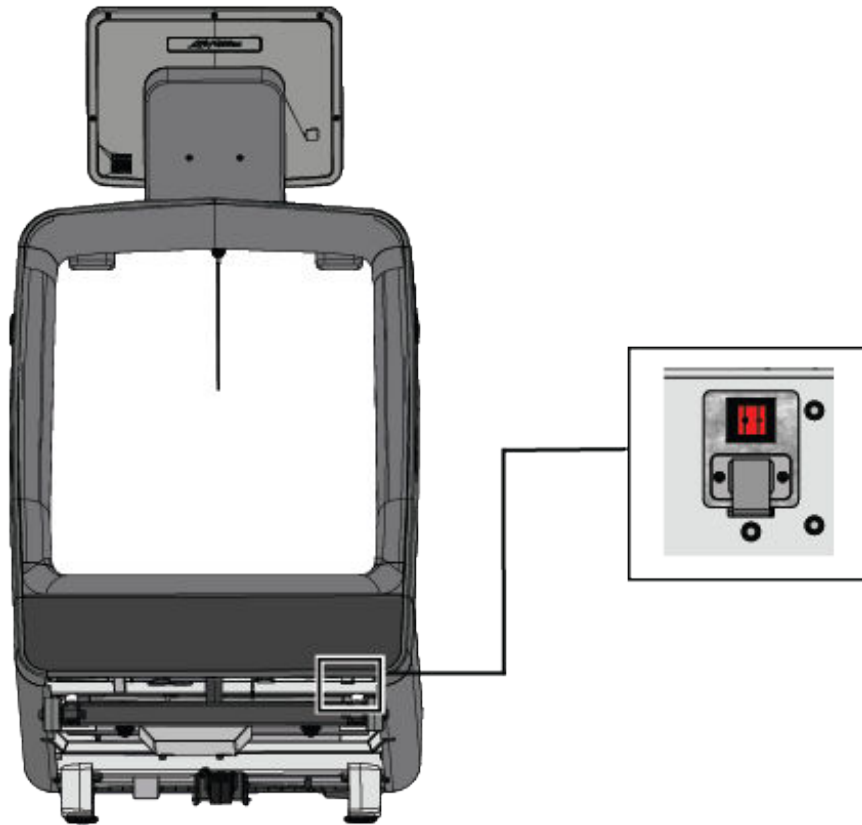


Stride Sensor+ Auto-Shutoff System

The Stride Sensor + auto-shutoff system detects whether a user is on the belt/deck. If the user leaves the belt/deck during a workout, the system is triggered and the belt lighting will animate signaling the belt is still running with no user detected. The following message is then displayed: `User not detected on belt - press OK to continue workout.` If the user presses **OK** during this message and is detected on the belt/deck the workout will continue without interruption.

3. Product Overview


Product Features

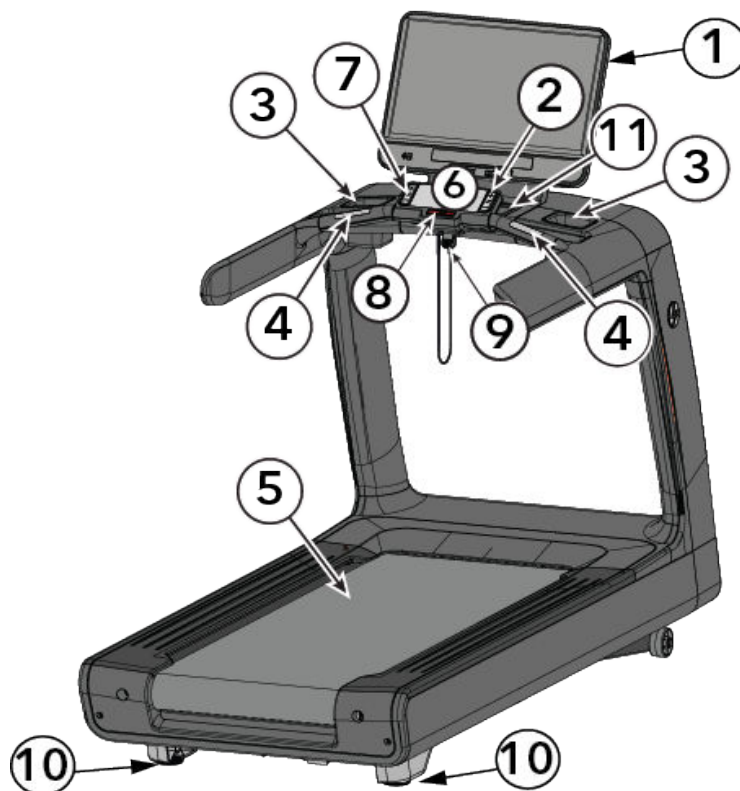

Item	Description	Qty.
1	Console	1
2	Speed Up/Down Arrows	1
3	Cup Holder	2
4	Contact Heart Rate Sensors	2
5	Walking Belt	1
6	Control Pad	1
7	Incline Up/Down Arrows	1
8	Emergency Stop	1
9	Emergency Stop Lanyard	1
10	Leveling Foot	2
11	Wireless Charger	1

Connections

The following connection receptacle is located on the underside of the front of the treadmill.

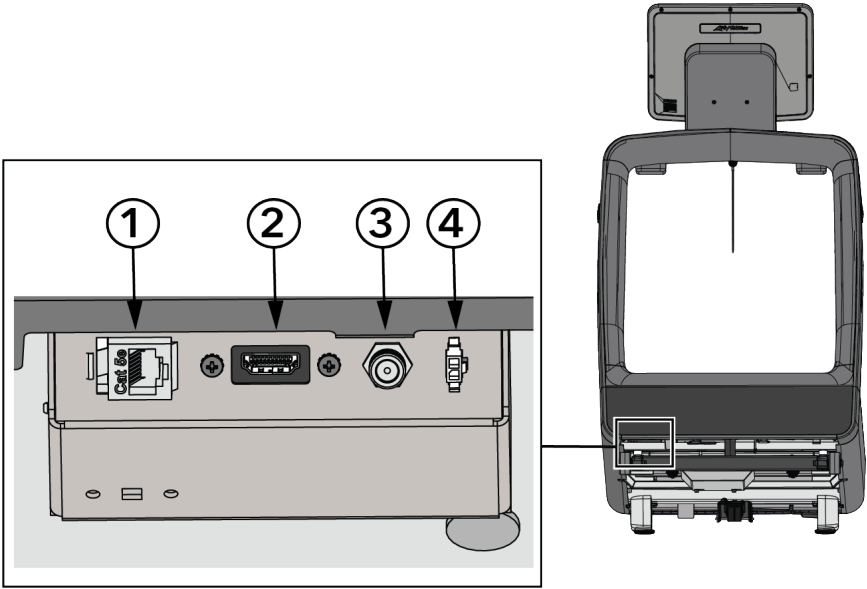

Item	Description	Qty.
1	CAT5e Network / Ethernet	1
2	HDMI Connection	1
3	Coaxial Connection	1
4	IR Connection	1

Mounting and Dismounting the Unit

Use the handrails to enhance stability when mounting or dismounting the unit. Never mount or dismount the unit while the running belt is moving. Use the STOP button on the console to end a workout and stop the running belt. Use the Emergency Stop System to stop the belt immediately.

User Position

The width of the moving walking/running surface is 22 in. / 55 cm. Users must keep their feet within this width while in motion. If standing on the stationary side rails, a user should ensure that his/her feet are completely on the non-moving portion. Never step partially on the moving surface and partially on the non-moving surface simultaneously.


- Users can adjust their fore-aft position on the moving belt as desired for reach to the console and handles, clearance for arm swing and attachment of the safety stop pull cord. Do not step on the rear roller.
- It is recommended that the user run within the length of the side handrails to allow usage of the side arms to dismount the belt if needed.

Using the Emergency Stop System

The treadmill is equipped with a two-function Emergency Stop System.

The system consists of:

- a rectangular stop button (located on the control pad)
- tether with garment clip

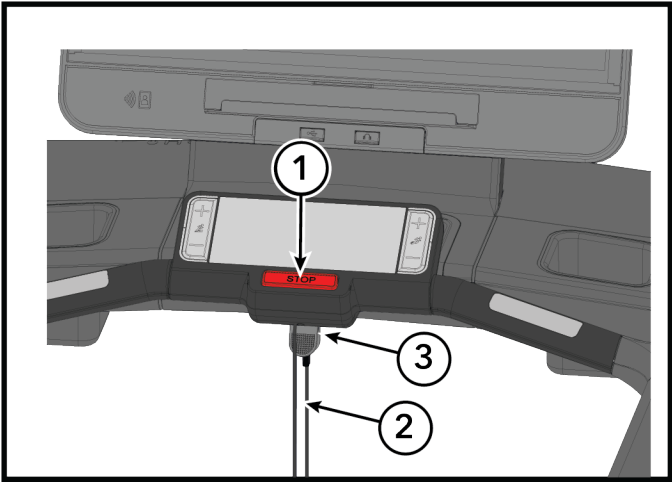

Item	Description	Qty.
1	E-Stop button	1
2	Tether	1
3	Garment Clip	1


Before starting a workout, attach the garment clip to the bottom of the user's shirt. During a workout, pull tether to trigger the emergency stop button to pop up and immediately stop the treadmill belt. A message will be displayed on the console similar to **Please Reset Emergency Stop Switch by Pressing the Stop Button Below**. To reset the Emergency Stop System, push down the stop button to the neutral position. Place the tether back in place. The treadmill will reset and be ready for operation.

The stop button also serves as a pause feature. During a workout, push the stop button once to pause a workout. Push the stop button twice to end workout.


How To Adjust Smart Lighting

The base is equipped with lighting that can be tuned On or Off, has three brightness setting, and 16 colors.

1. Select **Language** icon from Attract Screen to access the **Select Language** screen.

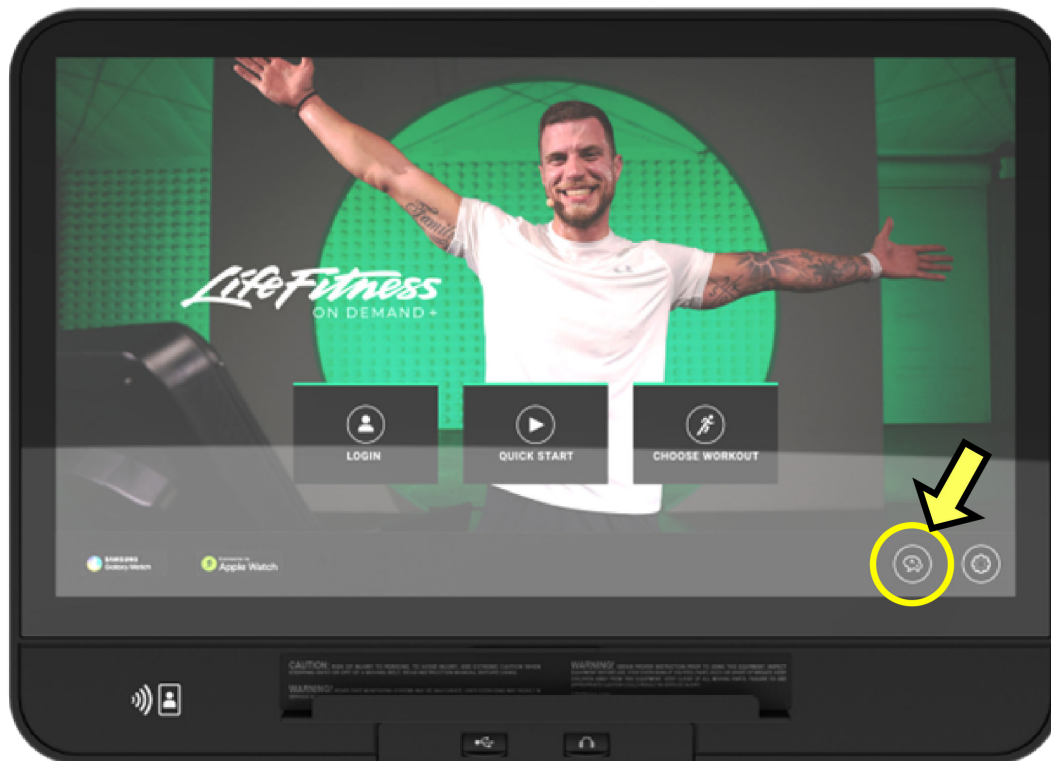


2. Tap the bottom part of the **Select Language** screen in the following sequence: **Lower-Left, Lower-Right, Lower-Left, Lower-Right**.

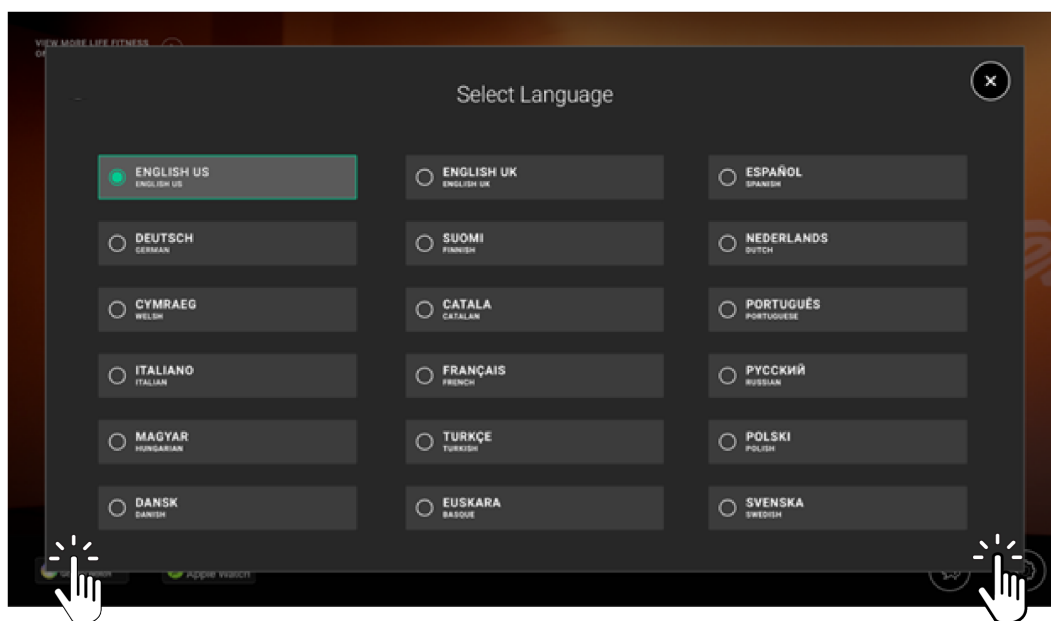

NOTE: Make sure you tap INSIDE the black square!

3. Navigate through the System Options menu to **Configuration > Manager**.

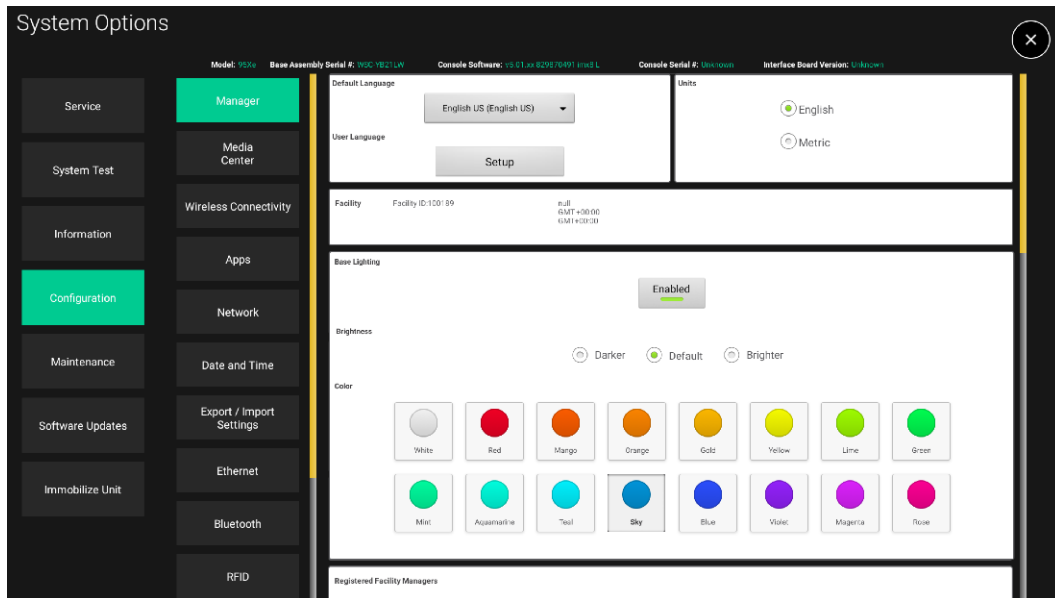


4. Scroll down to **Smart Lighting**.
5. Toggle the **Enabled** button to turn lights On or Off.
6. Adjust the **Brightness** as needed.
7. Adjust the **Color** to your choice of 16 colors.

Qi® Wireless Induction Charger

How to use:

1. Place your device on the wireless rubber charging station indicated with the charging symbol.

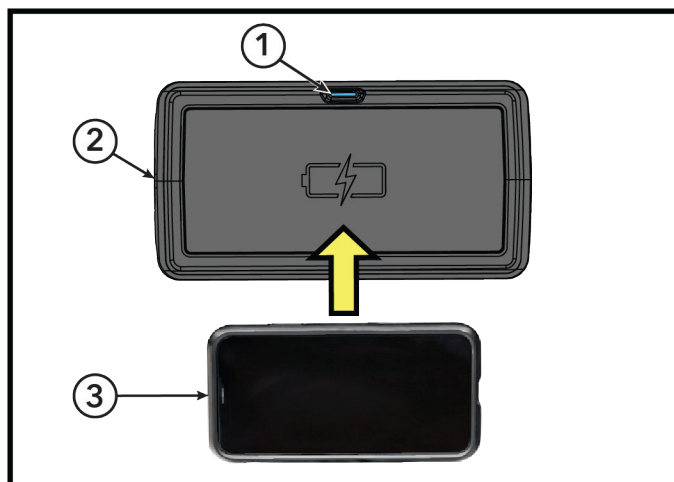

Item	Description	Qty
1	Blue Indicator Light	1
2	Wireless Charging Station	1
3	Phone	1

2. If your device supports Qi Wireless Charging, the blue indicator light will turn blue along with a notification on your mobile phone that the device is charging.

NOTE: See **Product Specifications** for Qi Wireless Induction Charger specifications.

NOTE: For troubleshooting information see [Troubleshooting - Wireless Charger](#).

Disclaimers and Precautions:

- Supports both Android and Apple Devices and their fast charge power profiles.
- The Wireless Charger is designed for phone charging only. It is not guaranteed to charge other peripheral devices like AirPods or Smart watches.
- Do not place the mobile phone on the wireless charger when conductive materials, such as metal objects and magnets, are placed between the mobile phone and the wireless charger. The mobile phone may not charge properly or may overheat, or the mobile phone and the cards may be damaged.
- Do not place the mobile phone on the wireless charger with a credit card or radio frequency identification (RFID) card (such as a transportation card or a key card) placed between the back of the mobile phone and the mobile phone cover.
- Keep credit cards and RFID cards (such as transportation or key cards) away from charging area.
- If a phone case stores credit cards or other RFID based cards, remove phone case before using wireless charger.
- Depending on the location of the mobile phone's wireless charging coil, your mobile phone may not charge properly. Adjust your mobile phone as needed until the charging indicator light is on and / or your mobile phone indicates it is charging.
- Wireless charging may not work properly if you have attached a thick case to your mobile phone. If your case is thick, remove it before placing your mobile phone on the wireless charger.
- If you connect a charger to the mobile phone during wireless charging, the wireless charging feature will be unavailable.
- If you are using your phone with a connected headset, place the phone in the landscape position. Placing your phone in the portrait position may move its charging coil out of position to charge.
- If you are using an attached wireless charging case on your mobile phone, never place just the case on the charging pad. This may overheat the charging pad and / or the case, and has a risk of fire and injury.
- The wireless charger does not have a power switch.

4. Assembly Procedure

Two people will be required for this procedure.

TIP: Read and understand all instructions thoroughly before assembling this unit. Check all items carefully. If there is damage, see the Customer Service section of this manual for proper procedure to return, replace, or reorder parts.

Link to Additional Information Online

In addition to the content provided in this manual, please scan the QR code for further and updated information.

Commercial

Life Fitness Symbio Runner Commercial Install Information



<https://lfn.fit/SymbioRunnerInstall>


Home

Life Fitness Symbio Runner Home Install Information



<http://lfn.fit/SymbioRunnerHomeInstall>

Hardware and Required Tools

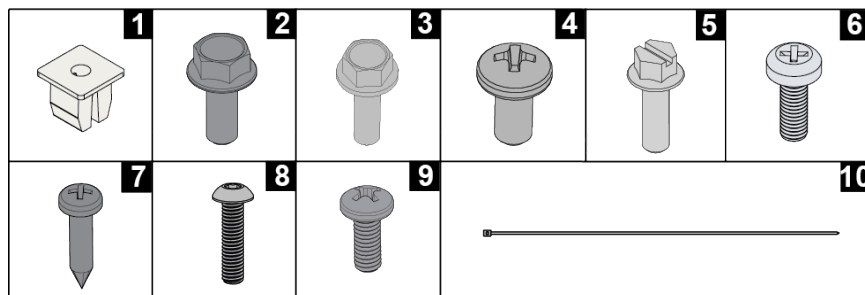

Item	Description	Qty	Tool
1	GROMMET: SCREW, 8 OR 10 (Lower Bridge Plastic)	4	N/A
2	SCREW: M8 X 1.25 6G6H X 20, UNS, HXW, CS, ST (Uprights / Top Bridge Assembly)	16	13 mm socket
3	SCREW: M6 X 1-6G6G X 20, HXS, HXF, FHB, ST (Upright Outer Castings / Console Mount)	12	10 mm socket
4	SCREW: M6 X 1.00-6G6G X 12, DIN, PHL, PAN, MS, ST (Left and Right Top Bridge Covers / Lower Bridge Plastic)	16	#3 Phillips screwdriver
5	SCREW: M5 X 0.8 X 16, SLT, HXF, TT, ST, ZS (Uprights / Grounding Braid Cables)	7	7 mm socket
6	SCREW: M5 X 0.8 X 14, PHL, PAN, MS, ST, BZ (Console and Console Rear Cover)	6	#2 Phillips screwdriver
7	SCREW: M4.2 X 0.7 6G6G X 19, DIN, PHL, PAN, AB, ST, ZB (Motor Side Shrouds / Upright Inner Shroud Assemblies)	4	#1 Phillips screwdriver or #2 Phillips screwdriver
8	SCREW: M3 X 0.5 X 12, HXS, CS, ST (Ergo Bars)	4	2 mm Allen wrench
9	SCREW: M4 X 0.7 X 10, PHL, PH, ST, BZ (Lower Bridge Plastic)	2	#1 Phillips screwdriver
10	ZIP TIES (Cable Routing)	10	N/A

Required Tools:



- Side cutter
- #1 Phillips screwdriver
- #2 Phillips screwdriver
- #3 Phillips screwdriver
- 7 mm socket
- 8 mm socket
- 10 mm socket
- 13 mm socket
- Torque wrench
- 2 mm Allen wrench


NOTE: Do NOT use impact drivers to install screws.

Attach Motor Side Shrouds to Base Frame

- 1. Snap motor shrouds to base frame.
- 2. Attach motor side shrouds to base frame with two screws.

NOTE: DO NOT TIGHTEN SCREWS!

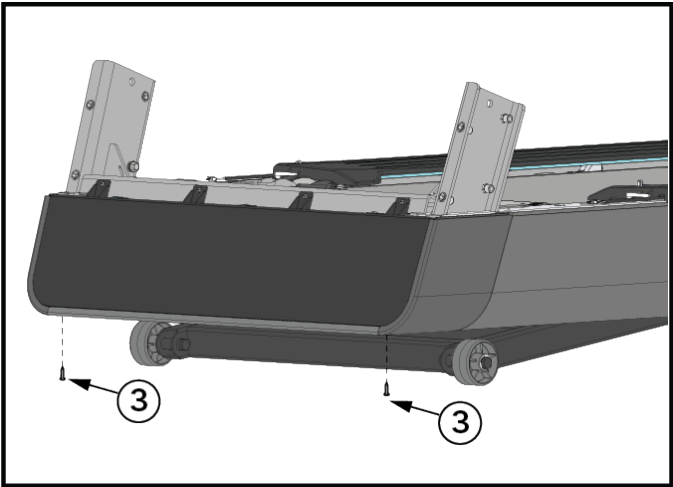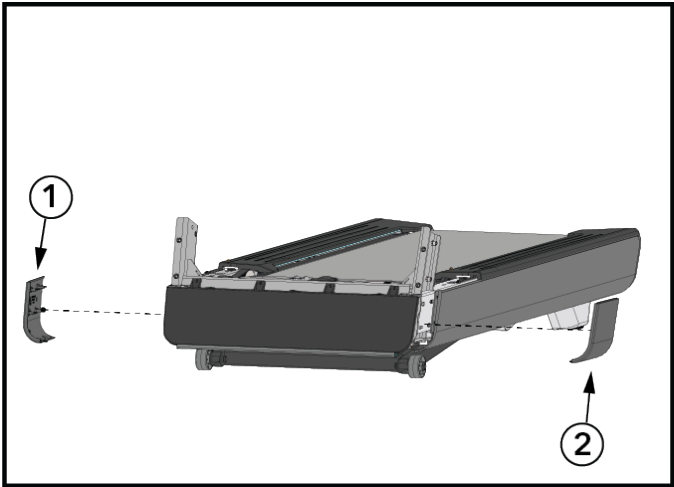

Item	Description	Qty.
1	Motor Side Shroud, Right	1
2	Motor Side Shroud, Left	1
3	Screw: M4.2 X 0.7 6G6G X 19, DIN, PHL, PAN, AB, ST, ZB	2
	LOOSELY INSERT SCREWS (2-3 THREADS) DO NOT TIGHTEN!	

Attach Uprights to Base

NOTE: Remove the outer castings from uprights before installing if packaged together.

NOTE: DO NOT TIGHTEN SCREWS!





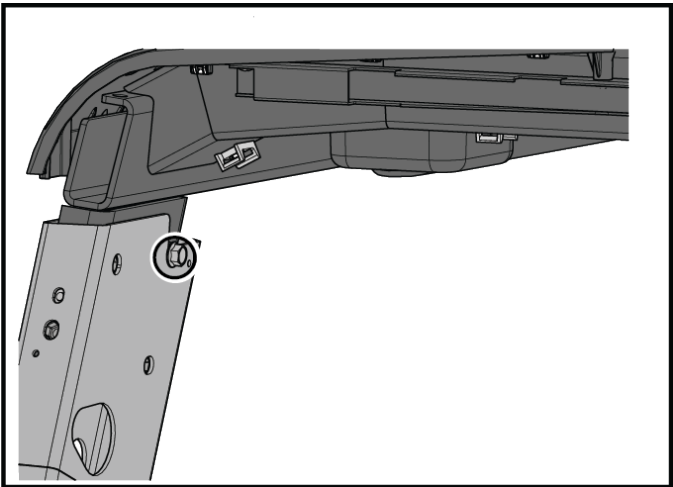
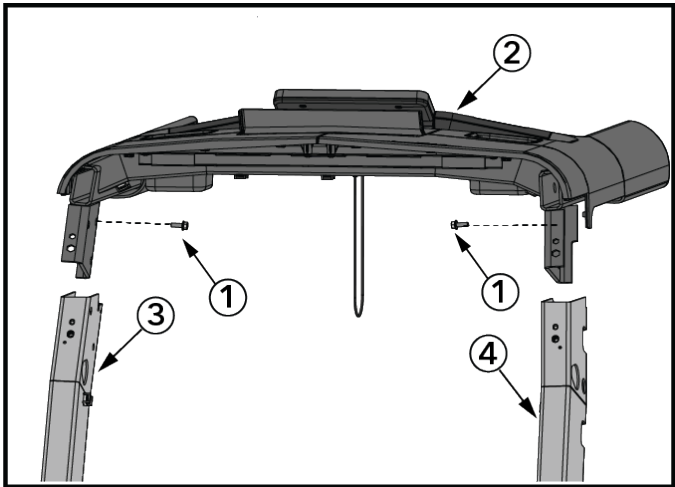
Image shows left upright assembled.

Item	Description	Qty.
1	Right Upright Assembly	1
2	Left Upright Assembly	1
3	Screw: M8 X 1.25 6G6H X 20, UNS, HXW, CS, ST	8
	LOOSELY INSERT SCREWS (2-3 THREADS) DO NOT TIGHTEN!	


Attach Top Bridge Assembly to Uprights

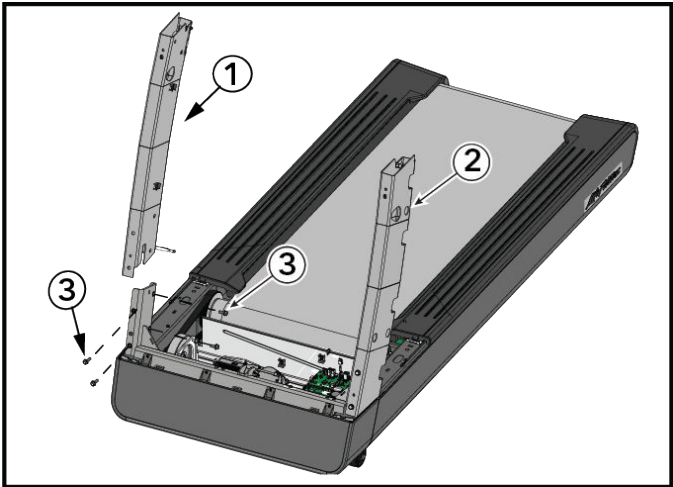

1. Loosely insert one screw into each side of the top bridge assembly weldment before attaching the top bridge assembly to the uprights. This helps hold the top bridge assembly in place.
- NOTE:** DO NOT TIGHTEN SCREWS!



2. Attach top bridge assembly to the uprights.
- NOTE:** DO NOT TIGHTEN SCREWS!

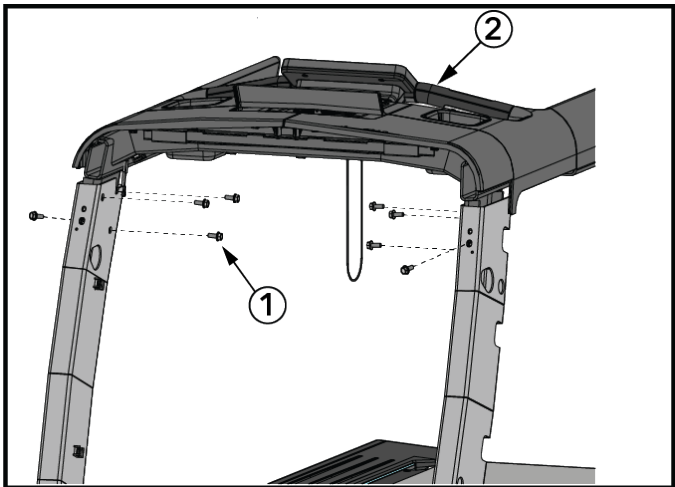


Item	Description	Qty.
1	Screw: M8 X 1.25 6G6H X 20, UNS, HXW, CS, ST	8
	LOOSELY INSERT SCREWS (2-3 THREADS) DO NOT TIGHTEN!	
2	Top Bridge Assembly	1
3	Upright, Right	1
4	Upright, Left	1


Snap Top Bridge Covers on Bridge

Use the clips on each bridge cover to attach to bridge.

FIRST: Left Top Bridge Cover (Front View)


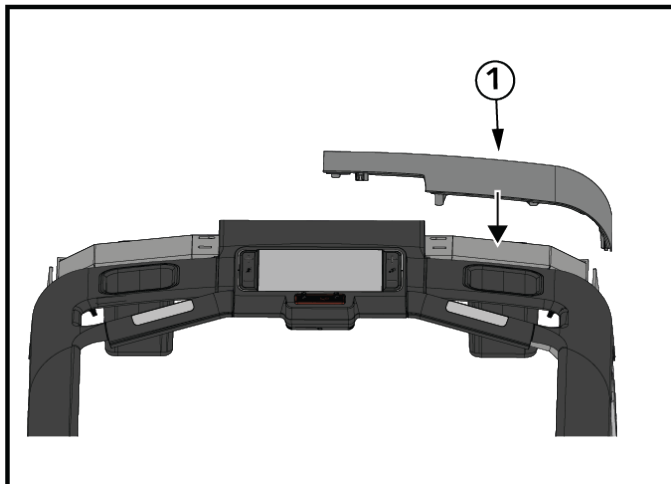



SECOND: Right Top Bridge Cover (Front View)

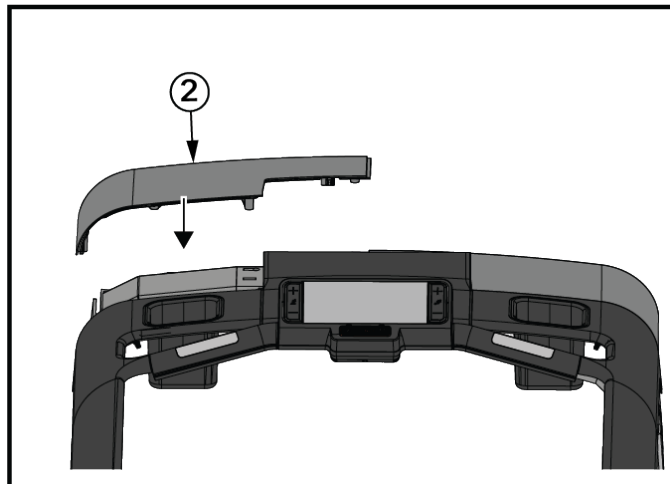

Attach Outer Castings to Uprights

Attach right and left outer castings to right and left uprights. **Loosely** insert screws.

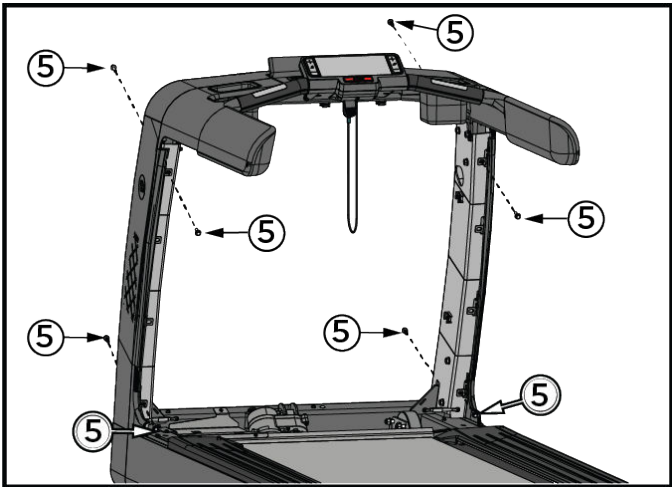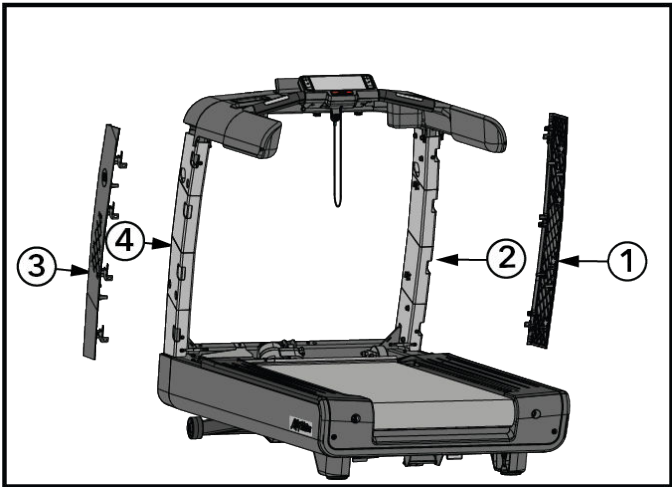


Item	Description	Qty.
1	Upright Outer Casting, Right	1
2	Upright, Right	1
3	Upright Outer Casting, Left	1
4	Upright, Left	1
5	SCREW: M6 X 1-6G6G X 20, HXS, HXF, FHB, ST	8
	LOOSELY INSERT SCREWS (2-3 THREADS)! DO NOT TIGHTEN!	

Tightening Sequence for Uprights Bolts

1. Follow the tightening sequence (1-4).

TIGHTEN TO 21.24 ft. lbs. / 28.8 Nm

Front View

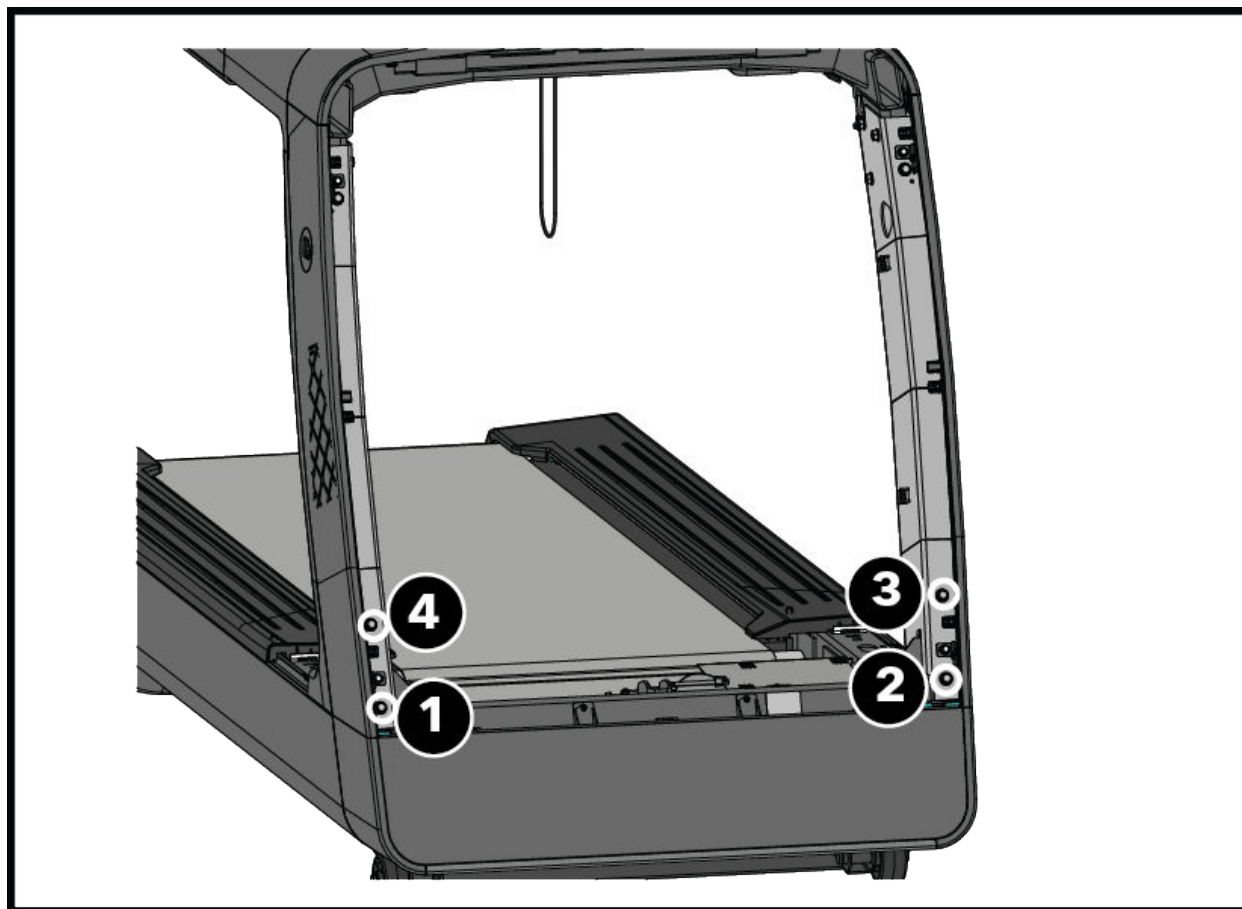


2. Hold and align the top bridge covers with bridge to achieve the correct fit and finish.



Follow the tightening sequence (5-8).

TIGHTEN TO 21.24 ft. lbs. / 28.8 Nm


Front View

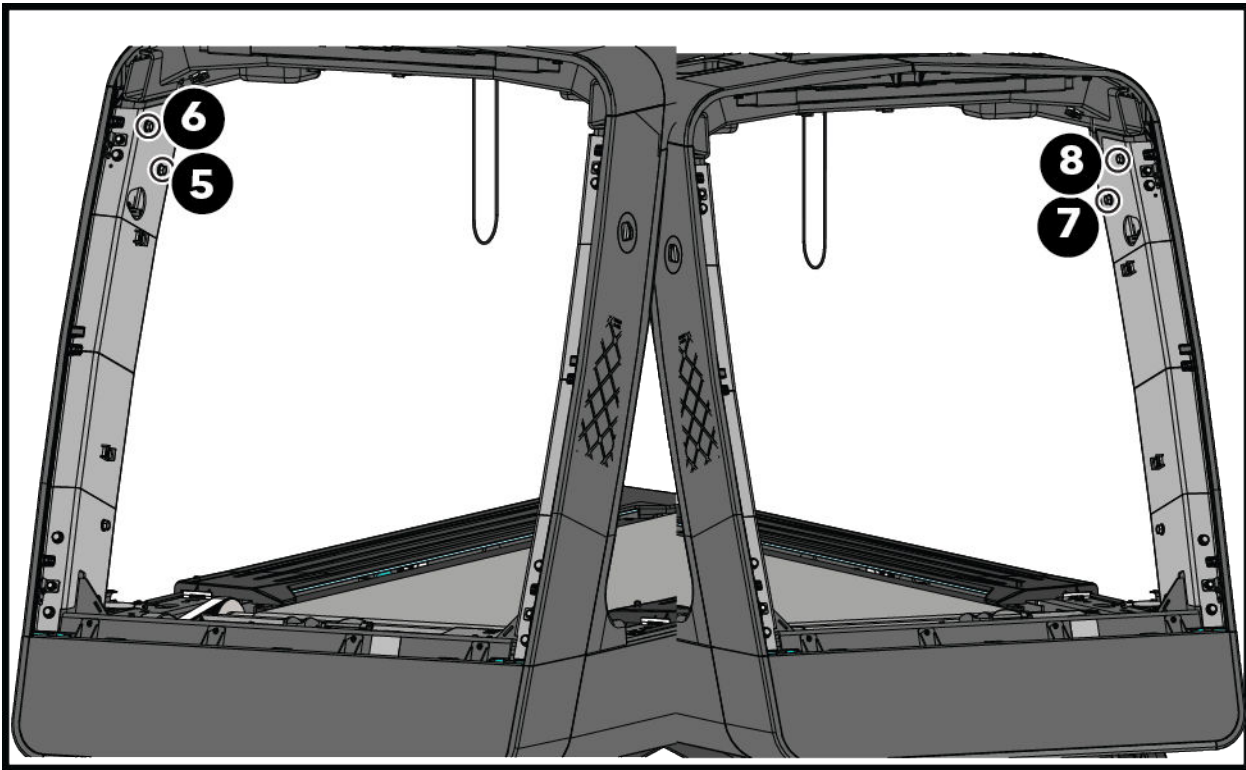

3. Follow the tightening sequence (9-10).

TIGHTEN TO 21.24 ft. lbs. / 28.8 Nm


Front View

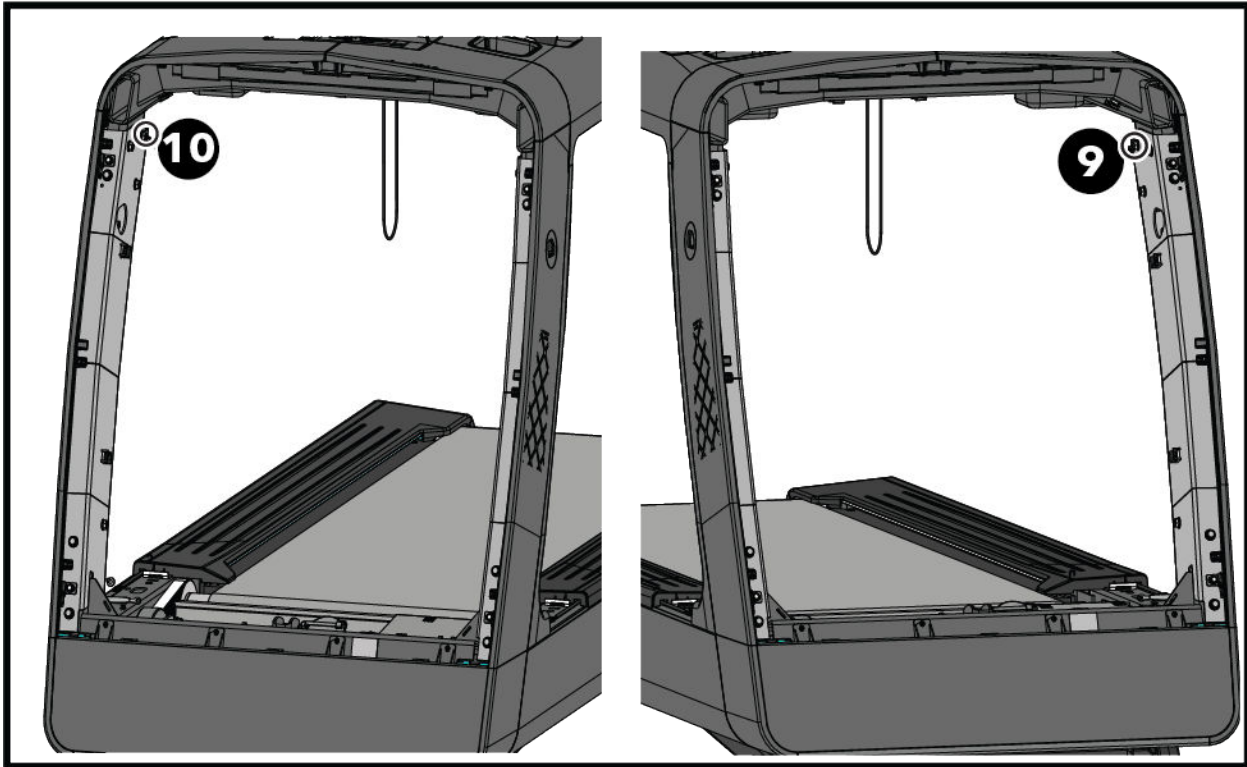


4. Insert screws into inner frames and continue tightening sequence (11-12). Run these two screws in until bottomed out.

NOTE: Do not over-tighten screws! Over-tightening will cause the screws to strip out.


Front View

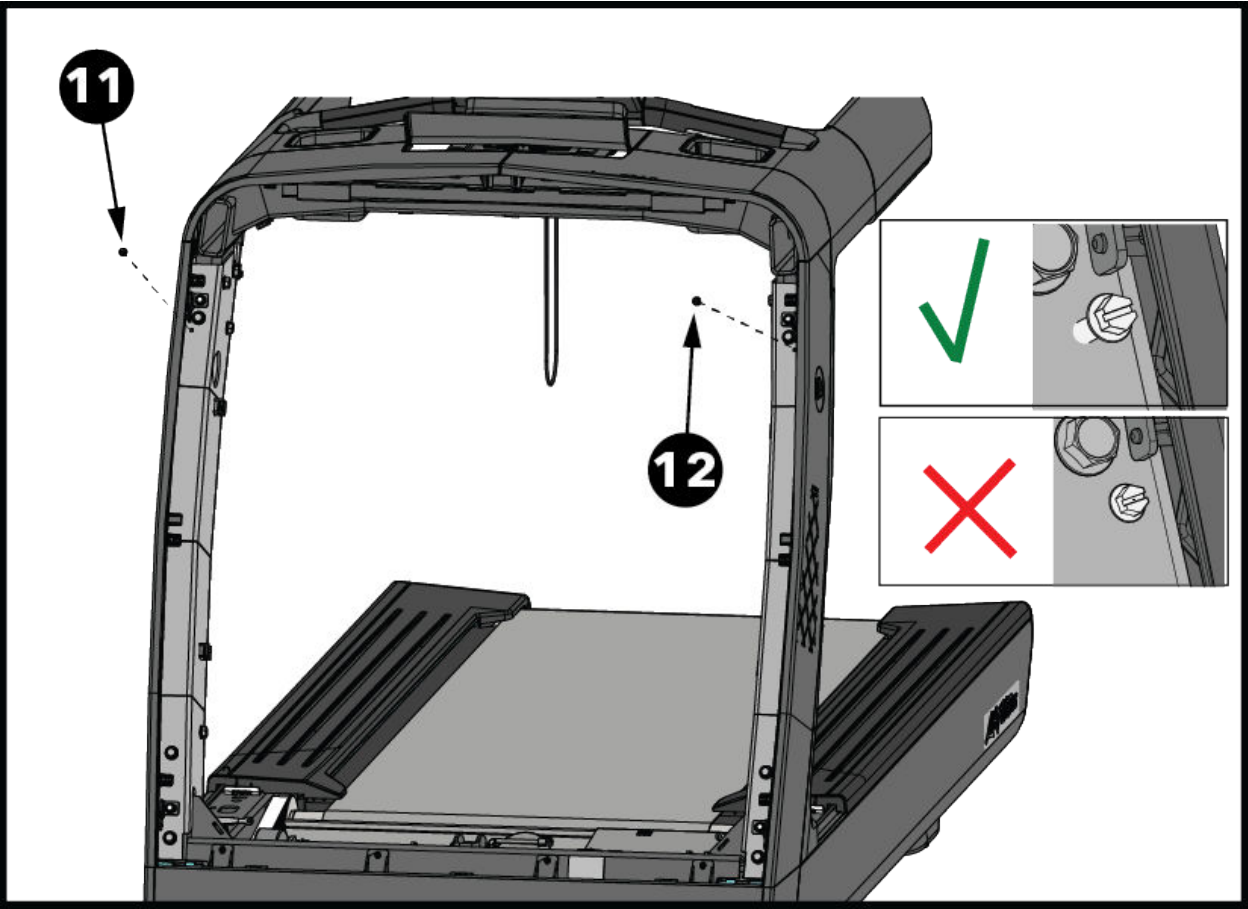


Item	Description	Qty.
11 / 12	Screw: M5 X 0.8 X 16, SLT, HXF, TT, ST, ZS	2
	TIGHTEN TO 29.2 in. lbs. / 3.3 Nm DO NOT OVER-TIGHTEN!	

5. Secure Grounding Braid Cables to Base Frame and Bridge


Upright to Bridge

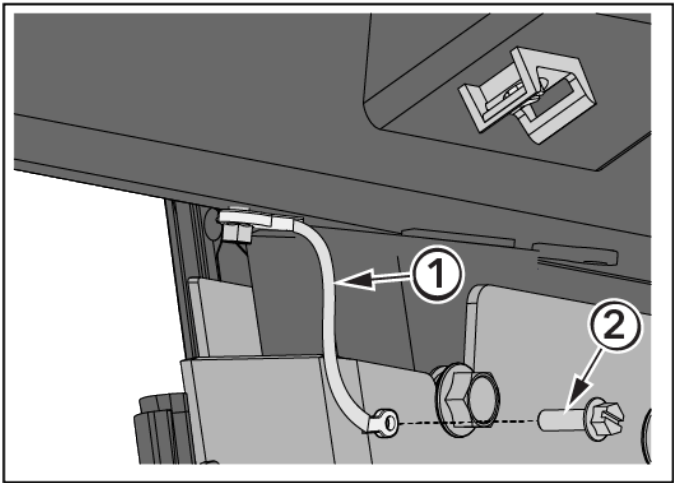

Base Frame

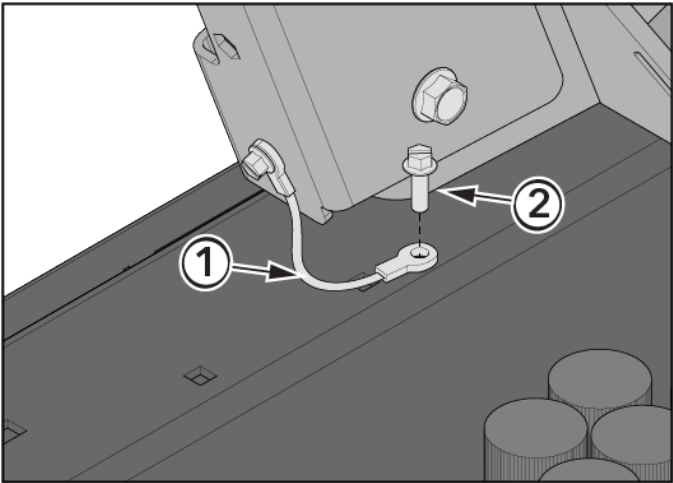


NOTE: Braiding ground cables are on both sides of the treadmill. Secure all four grounding braid cables.

Item	Description	Qty.
1	Grounding Braid Cable	4
2	Screw: M5 X 0.8 X 16, SLT, HXF, TT, ST, Z	4
	3.9 ft. lbs. / 5.3 Nm	

6. Continue tightening sequence (13-18).

TIGHTEN TO 21.24 ft. lbs. / 28.8 Nm


Front View

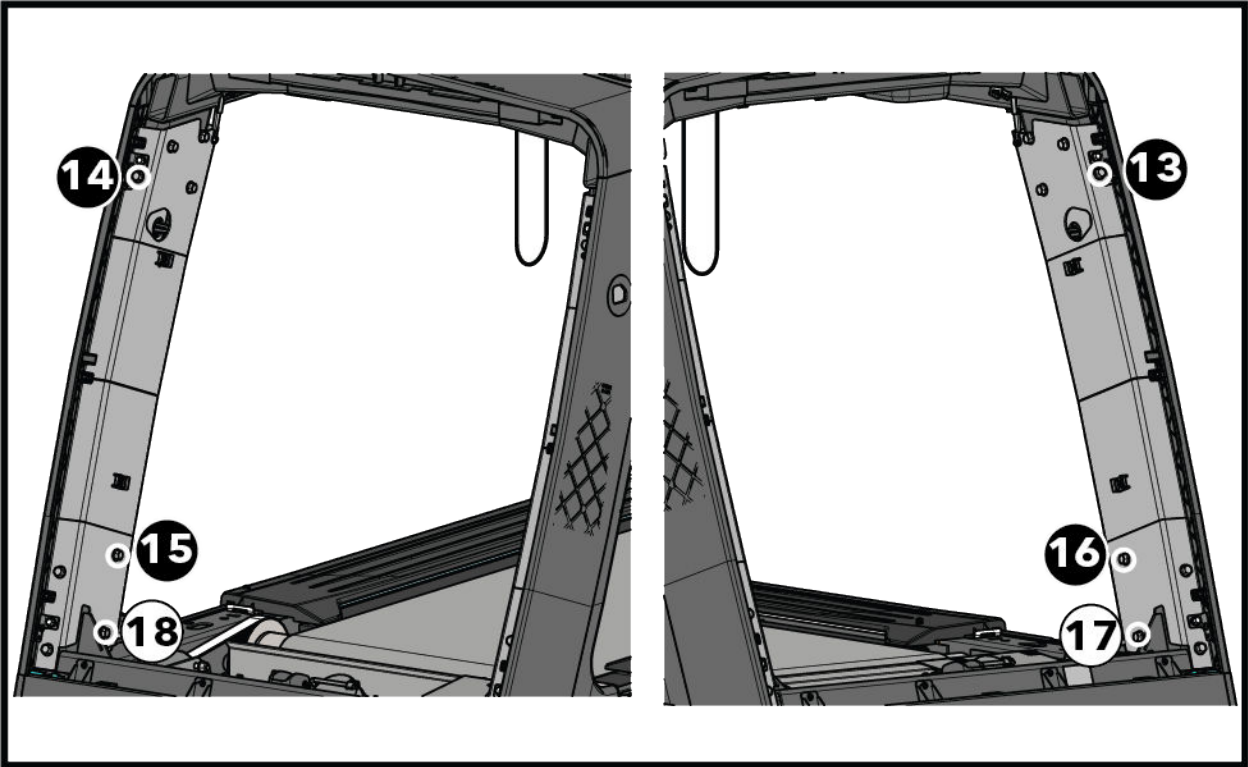

Place Motor Cover Over Motor Pan

Loosely place motor cover over the motor pan to prevent any hardware used in the following assembly steps from falling into the motor pan.

NOTE: DO NOT SNAP MOTOR COVER INTO PLACE!

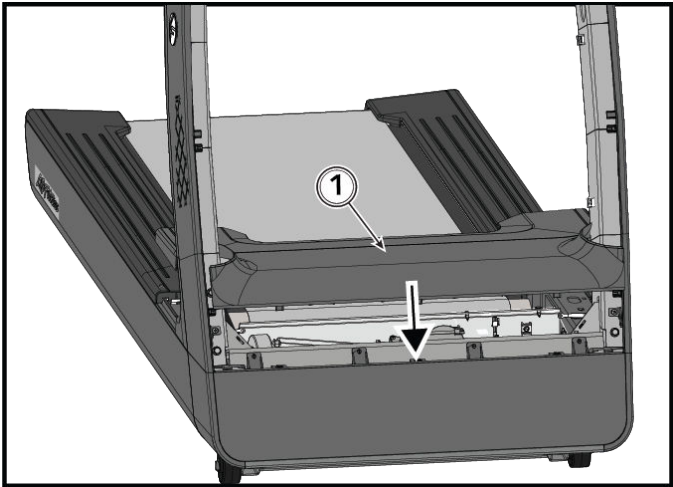


Item	Description	Qty.
1	Motor Cover	1


Attach Console Mount to Bridge

1. Remove the right bridge cover from the bridge. After right bridge cover is removed, then remove the left bridge cover from the bridge.

FIRST: Remove Right Bridge Cover (Front View)

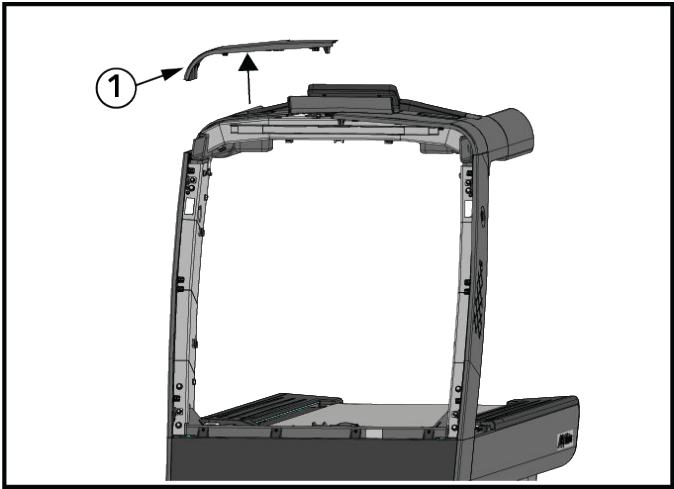

SECOND: Remove Left Bridge Cover (Front View)

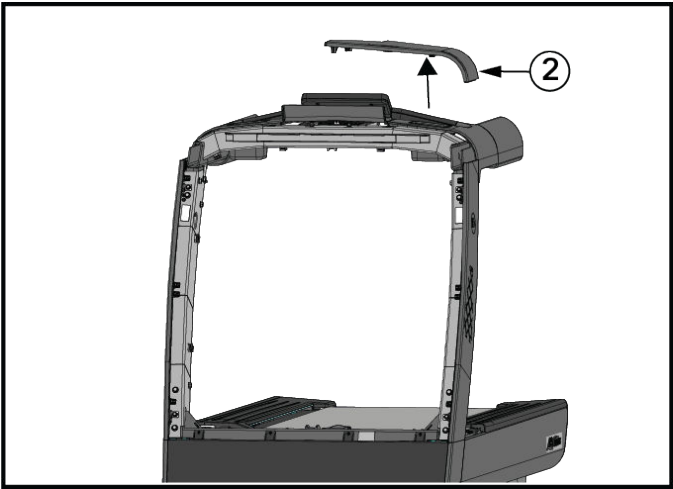


Item	Description	Qty.
1	Bridge Cover, Right	1
2	Bridge Cover, Left	1


2. Attach console mount to bridge.


NOTE: Follow tightening sequence for proper alignment!

FIRST: Tighten screws to the front of the console mount.

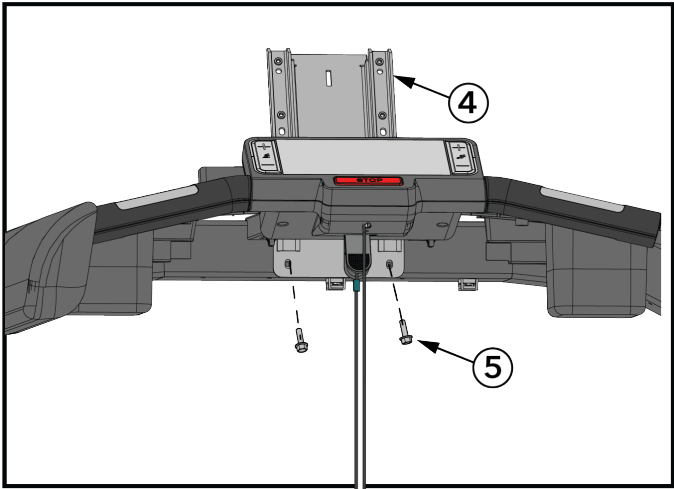



SECOND: Tighten screws to the top of the bridge.

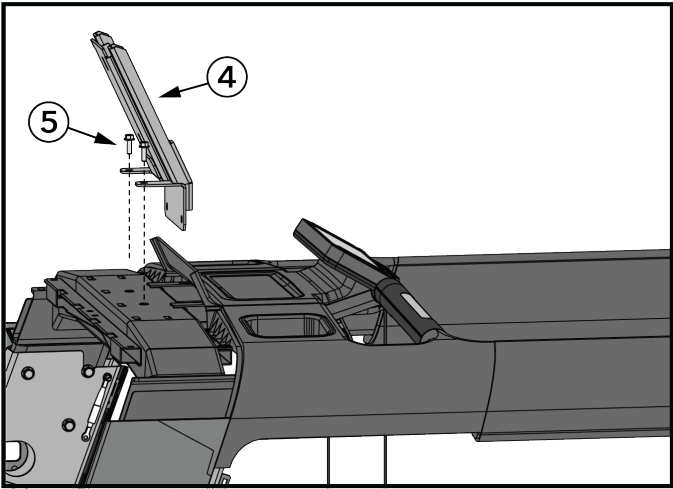

Item	Description	Qty.
4	Console Mount	1
5	Screw: M6 X 1-6G6G X 20, HXS, HXF, FHB, ST	4
	7.37 ft. lbs. / 10 Nm	

Attach Grounding Braid Cable to Console Mounting Bracket

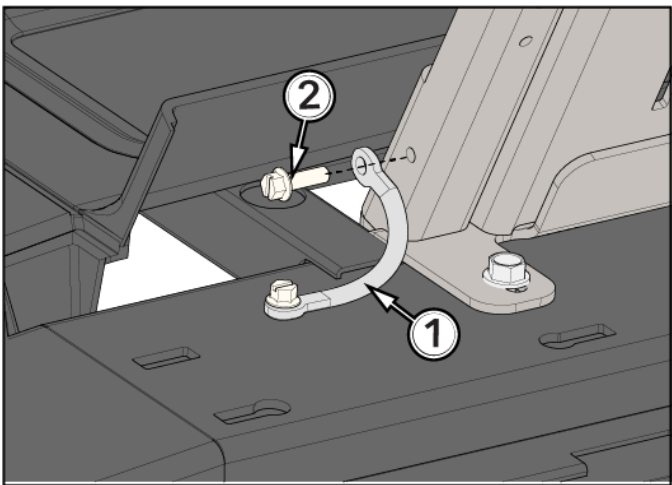


Item	Description	Qty.
1	Grounding Braid Cable	1
2	Screw: M5 X 0.8 X 16, SLT, HXF, TT, ST, ZS	1
	3.9 ft. lbs. / 5.3 Nm	

Secure Top Bridge Covers to Bridge


1. Align the top bridge covers flush with the top bridge shroud.

IMPORTANT: The top bridge covers must be flush with top bridge shroud before securing with the screws!

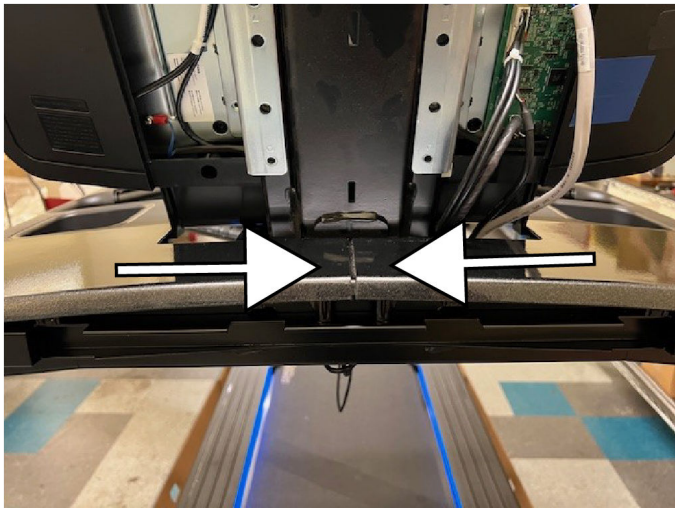



2. Secure the left top bridge cover to the bridge. Then secure the right bridge cover to the bridge.

Left Top Bridge Cover (Front View)

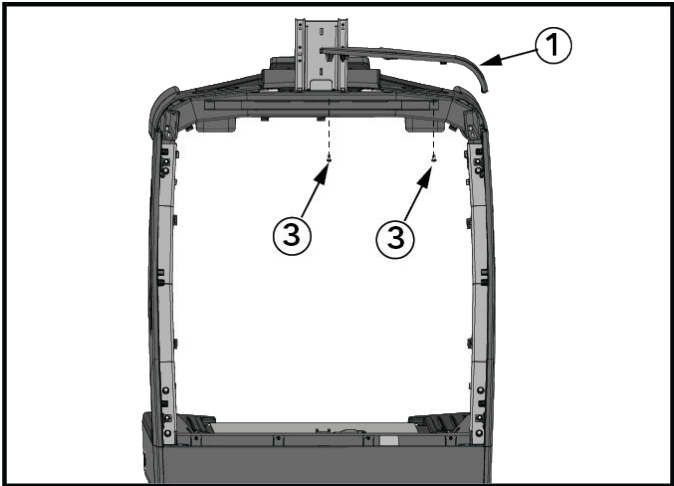

Right Top Bridge Cover (Front View)

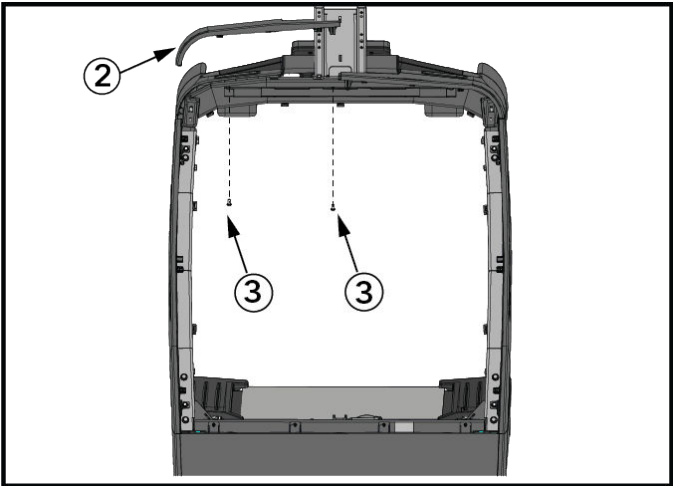

Item	Description	Qty.
1	Bridge Cover, Left	1
2	Bridge Cover, Right	1
3	Screw: M6 X 1.00-6G6G X 12, DIN, PHL, PAN, MS, ST	4
	12.4 in. lbs. / 1.4 Nm	

Tightening Sequence for Upright Outer Casting Bolts

IMPORTANT: Align four corners of the upright casting with top bridge castings.




NOTE: FOLLOW THE TIGHTENING SEQUENCE (1-4)!


NOTE: Tighten USER FRONT bolts first.

TIGHTEN BOLTS to 7.37 ft. lbs. / 10 Nm


LEFT - USER FRONT BOLTS

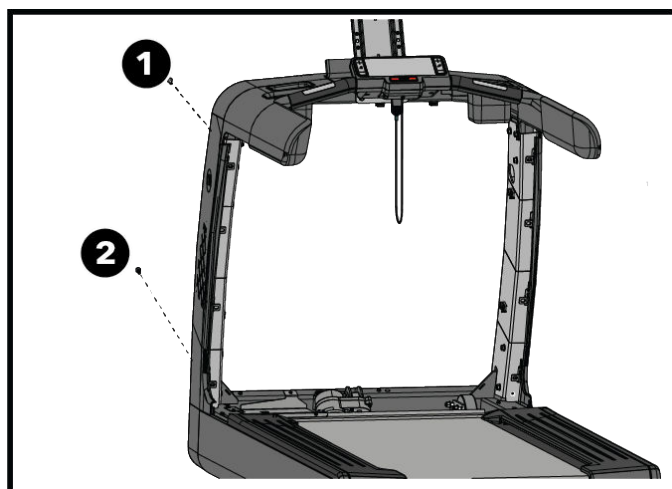


LEFT - USER REAR BOLTS

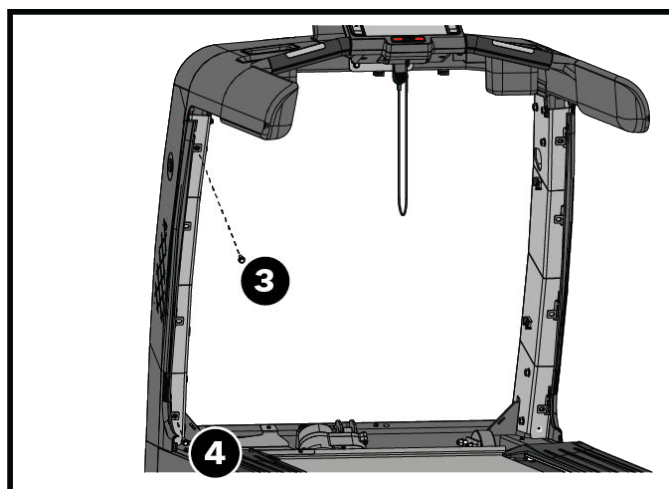

RIGHT - USER FRONT BOLTS

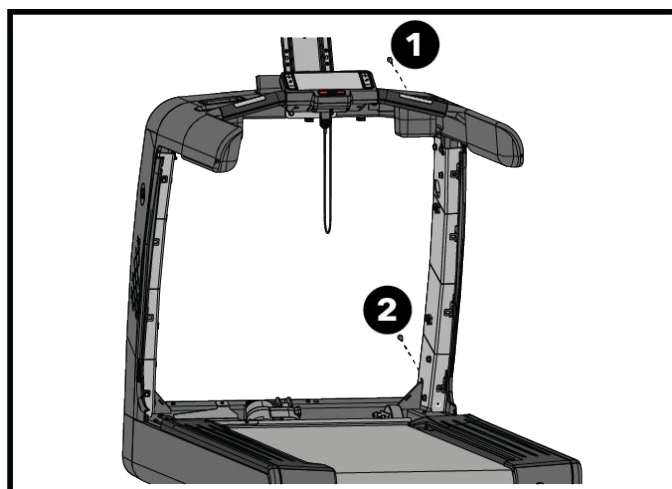

RIGHT - USER REAR BOLTS

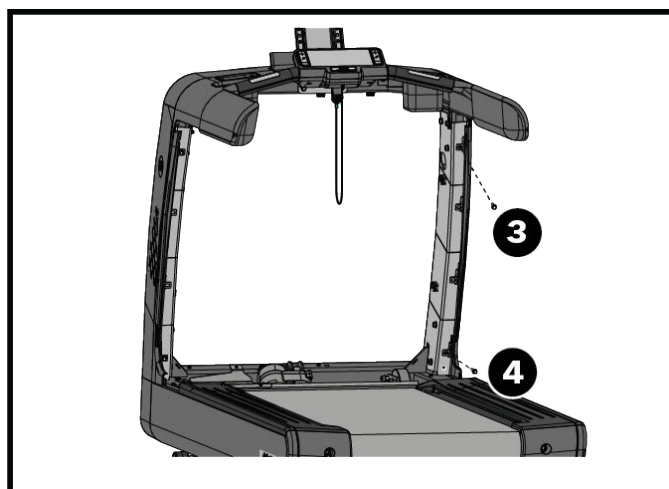

IMPORTANT: If the alignment between castings and uprights do not look parallel after tightening both left and right uprights & castings, loosen bolts and redo the tightening sequence for the castings and uprights to bridge.


Route Cables

Reference the images for cable routing. Use cable ties to secure cables.


NOTE: Trim excess lengths from cable ties.

 **CAUTION:** Do not cut cables!


Cable Tie Locations

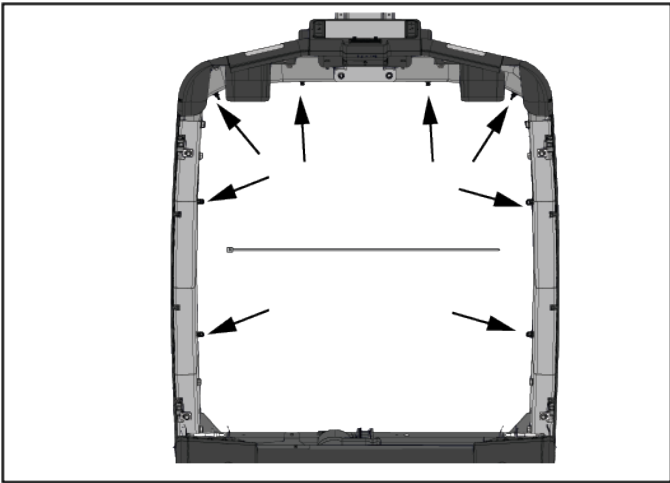

User View: Underneath Bridge

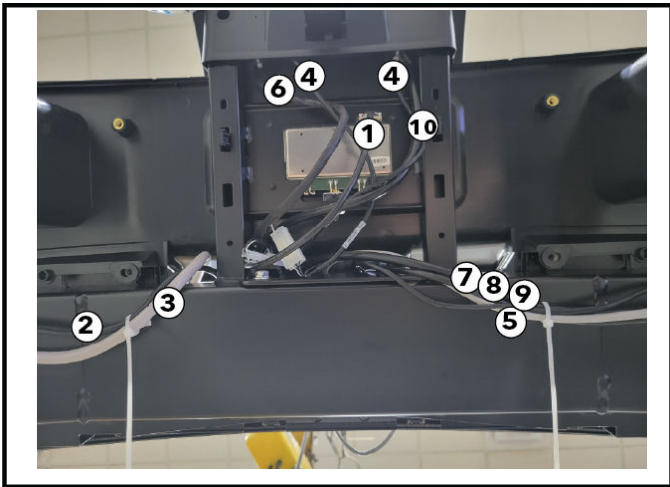


Top View

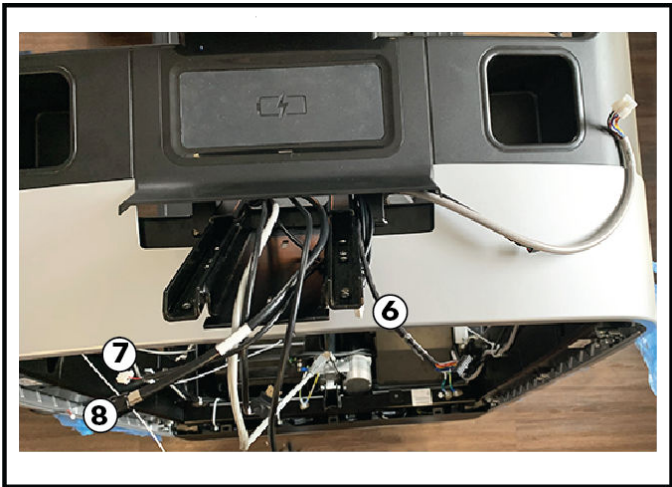

Item	Description
1	Wireless Charger, 12 VDC And UART
2	Base Console Comm
3	Console To Base Power
4	Lifepulse Electrodes
5	Ethernet (CAT5E, STP)
6	Control Pad (MIPI)
7	Coax, RG6
8	IR
9	HDMI
10	Cable Assembly: ELSE & LP

Attach LF LED Bug to Uprights

- 1. Peel the adhesive backer off the back off the LF LED Bug.
- 2. Make cable connection from the cable assembly through the upright opening to LF LED Bug.
- 3. Adhere LF LED Bug to the upright.

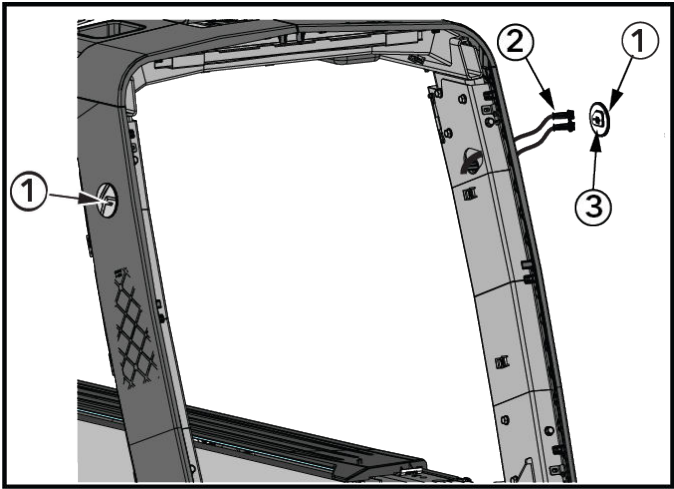


Item	Description	Qty.
1	LF Led Bug	2
2	Cable Assembly	2
3	Adhesive Backer	2

Attach Lower Bridge Plastic to Bridge



1. Remove the two screws attaching the control pad shroud to the control pad. Set aside the hardware.

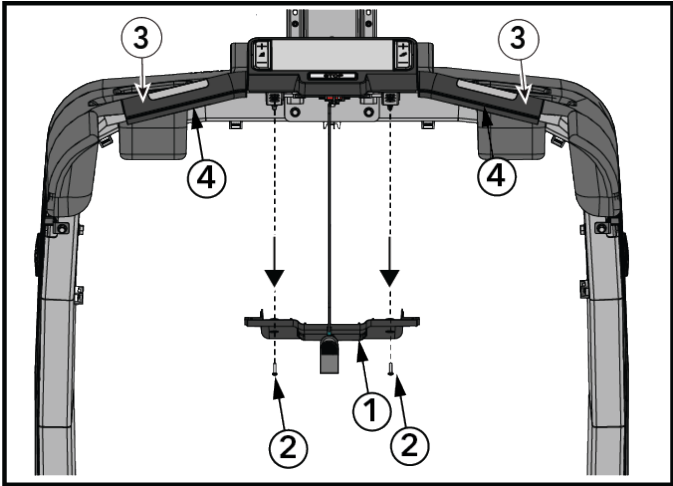

NOTE: Remove the tape holding the top and bottom ergo bars together.




Item	Description	Qty
1	Control Pad Shroud	1
2	Control Pad Screws	2
3	Ergo Bar, Top	2
4	Ergo Bar, Bottom	2

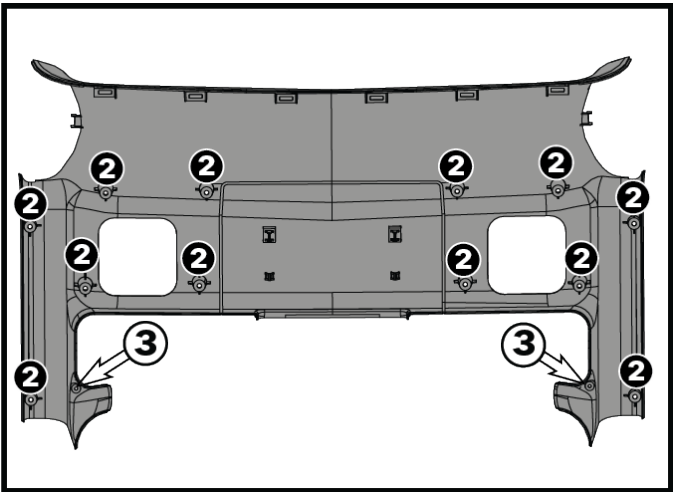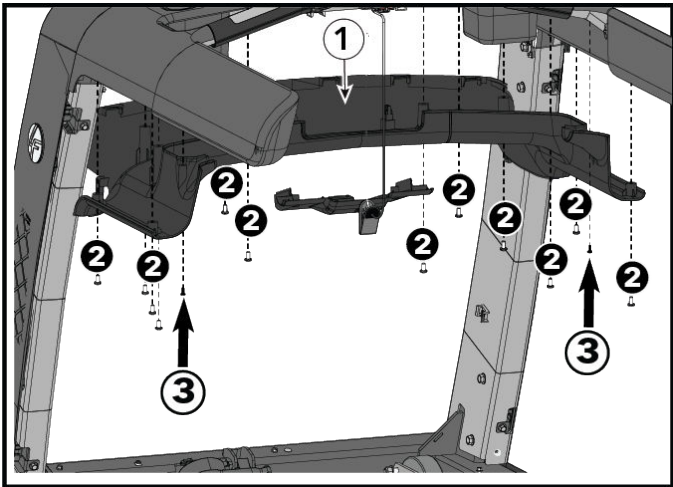2. Attach lower bridge plastic to bridge with tinnerman clips. Insert and start all screws in and then tighten.



Item	Description	Qty.
1	Lower Bridge Plastic	1
2	SCREW: M6 X 1.00-6G6G X 12, DIN, PHL, PAN, MS, ST	12
	12.4 in. lbs. / 1.4 Nm	
3	M4 X 0.7 X 10, PHL, PH, ST, BZ	2
	12.4 in. lbs. / 1.4 Nm	



3. Secure the control pad shroud with the previously removed hardware. Secure lower ergo bars to top ergo bars with four screws.

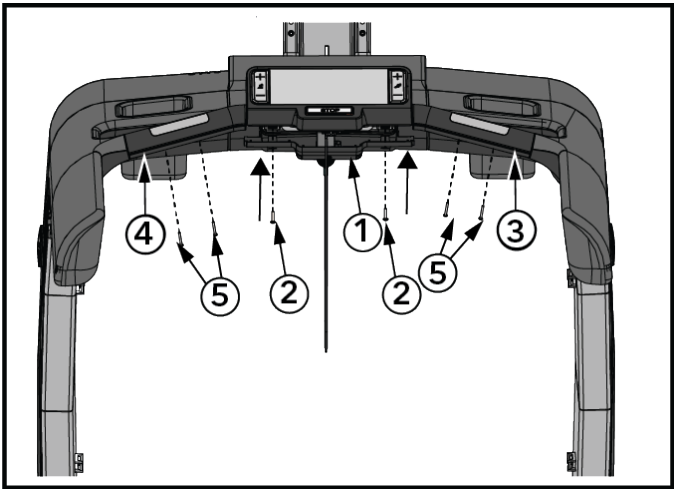

Item	Description	Qty
1	Control Pad Shroud	1
2	Control Pad Screws (<i>previously removed</i>)	2
	12.4 in. lbs. / 1.4 Nm	
3	Ergo Bar, Lower, Right	1
4	Ergo Bar, Lower, Left	1
5	SCREW: M3 X 0.5 X 12, HXS, CS, ST	4
	7.9 in. lbs. / 0.9 Nm	


Place Console on Console Mount

Stand in front of the treadmill and slide the console down over tabs on the console weldment.

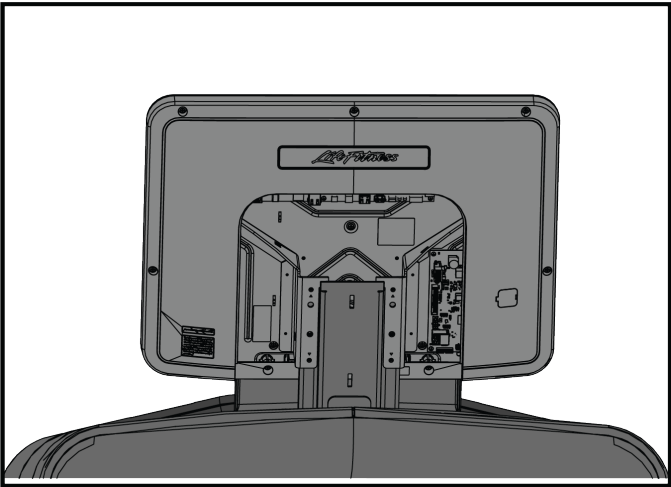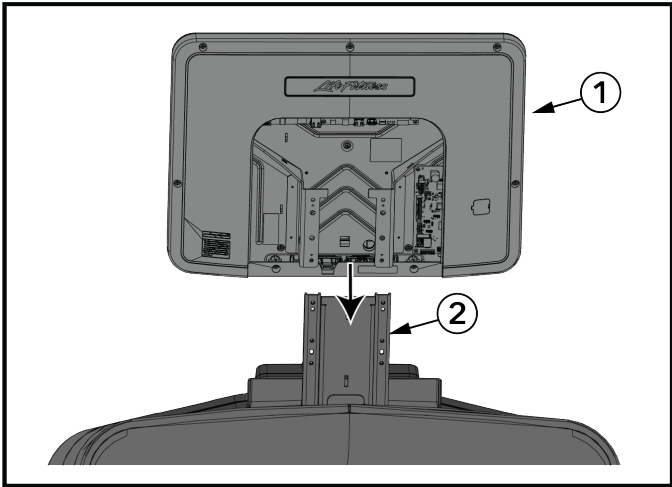


Item	Description
1	Console
2	Console Mount


Base to Console Cable Connections

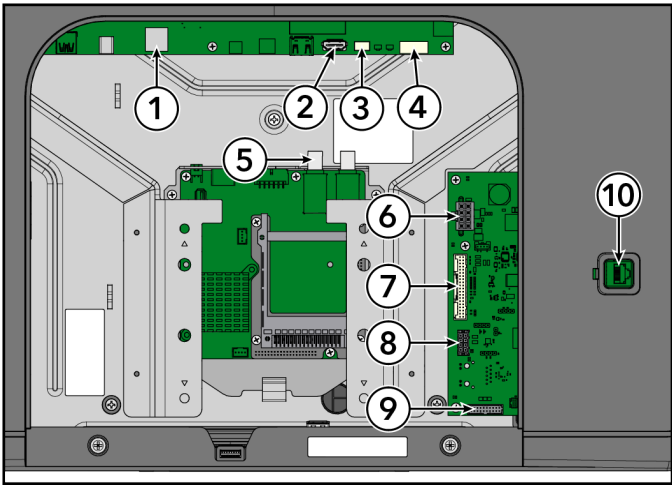

Item	Description
1	Ethernet
2	HDMI
3	IR
4	Wireless Charger
5	Coax
6	Power
7	Control Pad / Lifepulse / Handlebars
8	Base Com
9	Control Pad
10	CSAFE

Secure Console to Console Mount

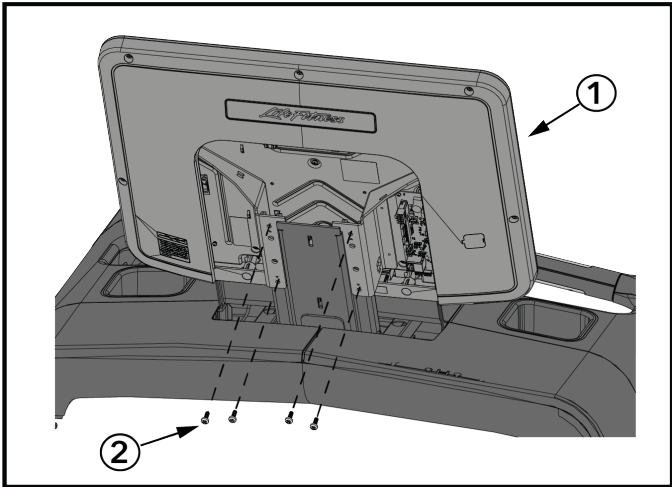



Item	Description	Qty.
1	Console	1
2	Screw: M5 X 0.8 X 14, PHL, PAN, MS, ST, BZ	4
	16.8 in. lbs. / 1.9 Nm	

Attach Power Cord and Make I/O Panel Connections


Follow these steps if power cord is not already installed:

- 1. Plug power cord into power source.
- 2. Incline the treadmill.
- 3. Unplug power cord from power source.
- 4. Grab the line cord end and insert into receptacle on base frame assembly.
- 5. Use an 8mm socket to tighten the screw securing cable support bracket and power cord to base frame assembly.

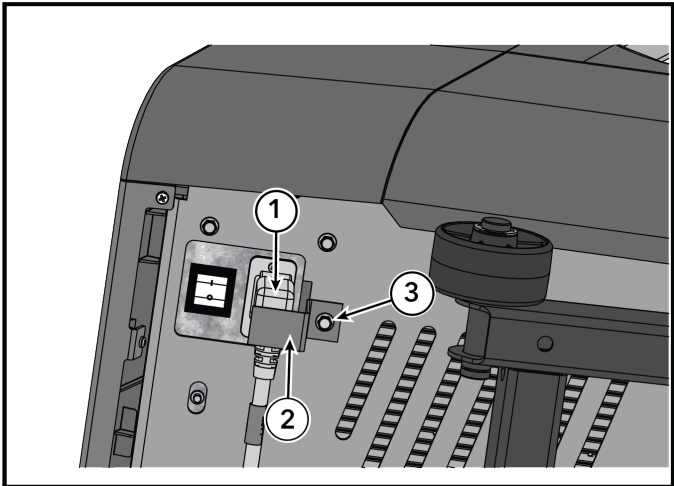

Item	Description	Qty.
1	Line Cord	1
2	Cable Support Bracket	1
3	Screw	1
	5.3 Nm (3.9 ft. lbs.)	

- 6. Make the cable connections to the I/O panel.

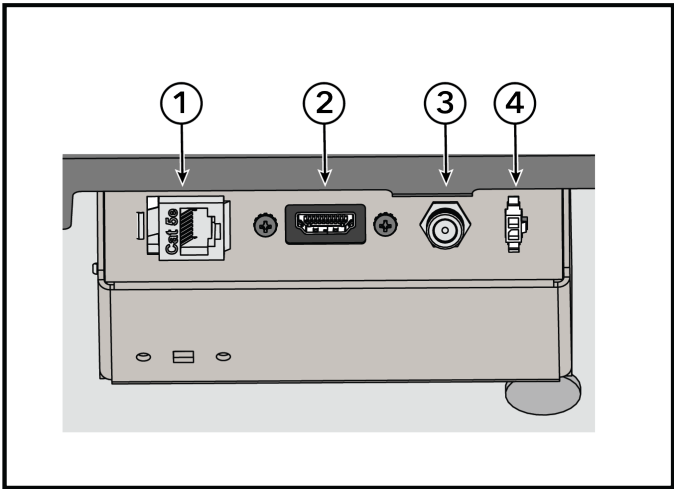



Item	Description	Qty.
1	CAT5e Network / Ethernet	1
2	HDMI Connection	1
3	Coaxial Connection	1
4	IR Connection	1

Test Unit For Proper Operation

IMPORTANT: Do not step on base or running belt while powering up the unit!


Attach Console Rear Cover

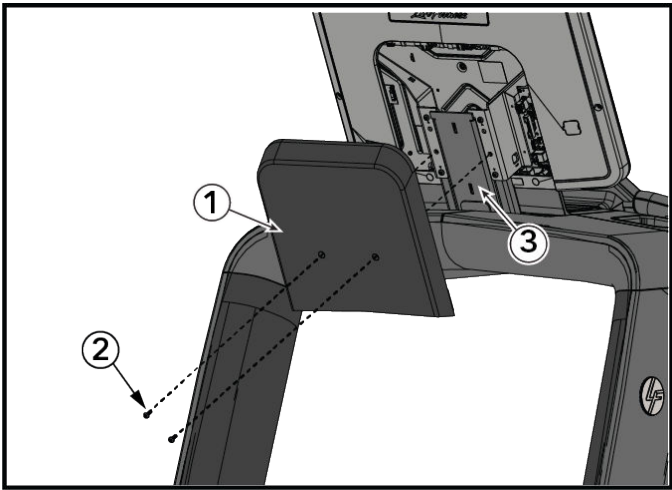

Item	Description	Qty.
1	Rear Cover	1
2	Screw: M5 X 0.8 X 14, PHL, PAN, MS, ST, BZ	2
3	Console Mounting Bracket	1
	16.8 in. lbs. / 1.9 Nm	

Attach L-Shaped Shroud Covers to Upright Outer Castings


Slide the L-shape shroud covers in between the upright outer castings and upright.

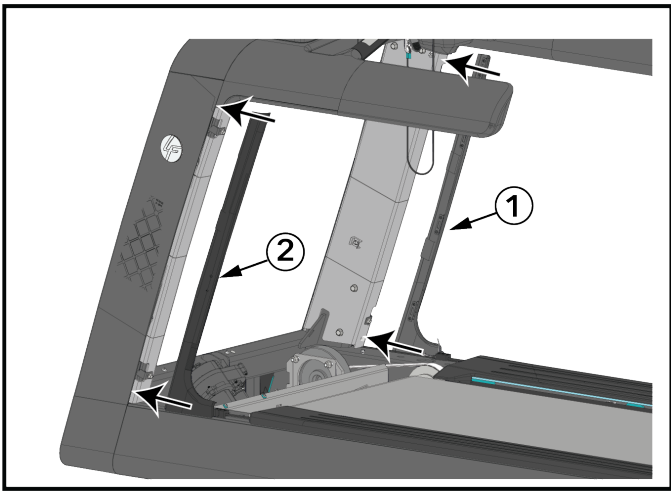


Item	Description	Qty.
1	Upright Cover (L-Shaped), Right	1
2	Upright Cover (L-Shaped), Left	1

Tighten Motor Side Shrouds Screws


Incline the treadmill to easily access the motor casting screws. Secure motor side shrouds to base frame with the two screws previously hand tightened in the beginning of the assembly procedure.

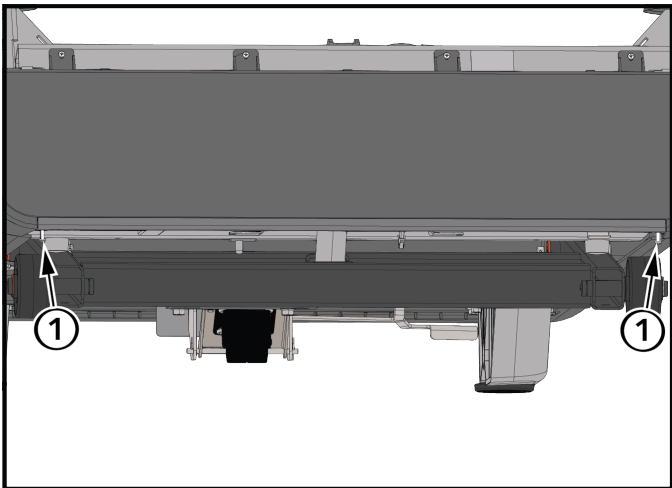

Item	Description	Qty.
1	Screw: M4.2 X 0.7 6G6G X 19, DIN, PHL, PAN, AB, ST, ZB	2
	12.4 in. lbs. / 1.4 Nm	


Attach Motor Cover

Snap motor cover into place.

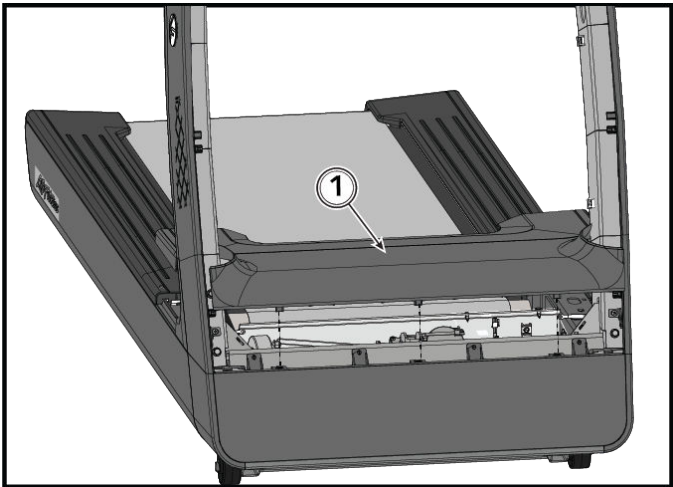

Item	Description	Qty.
1	Motor Cover	1



Attach Grommets to Bridge

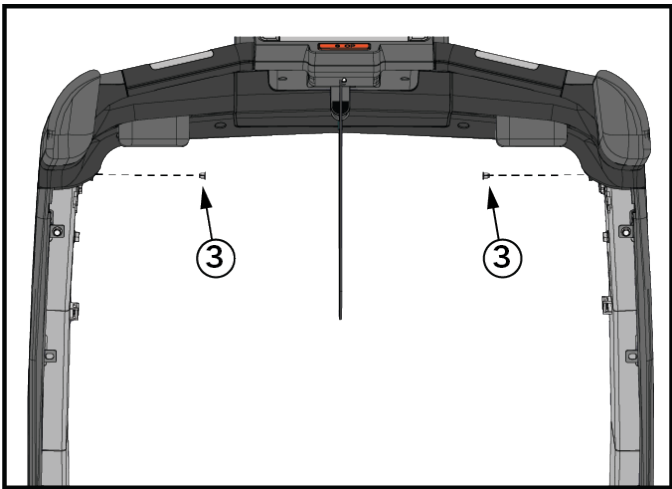

Item	Description	Qty.
1	GROMMET: SCREW, 8 OR 10	2



Attach Inner Shrouds to Uprights

1. Snap the front of the inner shroud into the tinnerman clips on the upright casting.

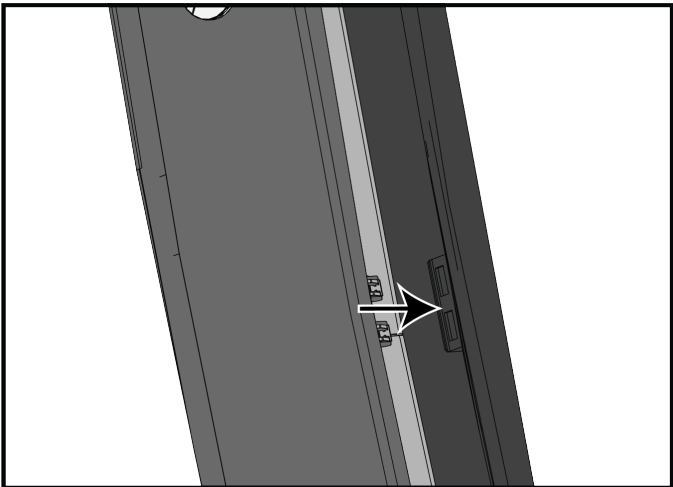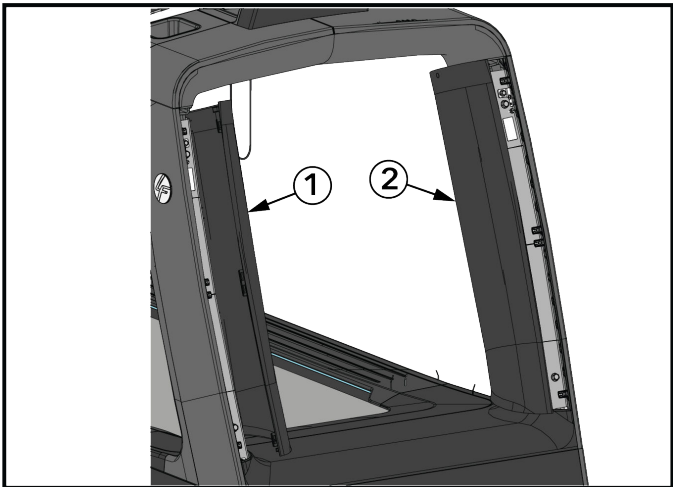



Item	Description	Qty.
1	Upright Inner Shroud, Right	1
2	Upright Inner Shroud, Left	1

2. Snap the tinnerman clips on the rear of the inner shroud into the plates on the L-shaped shroud covers.

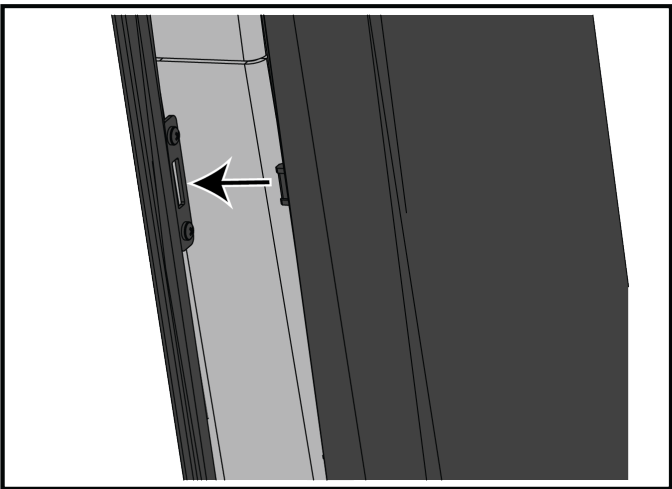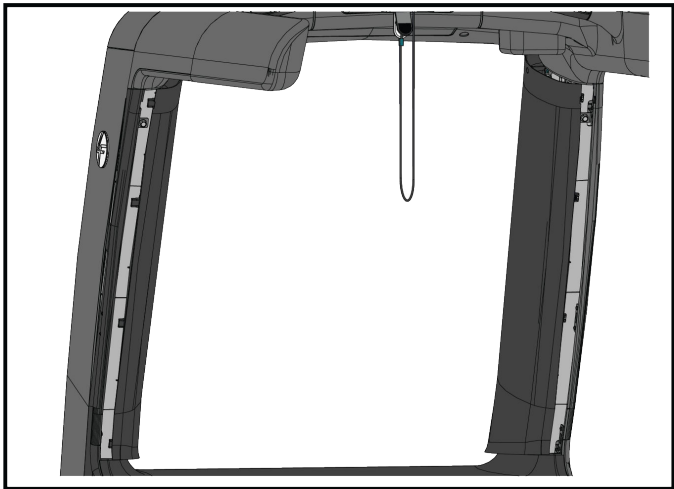

3. Secure with screw.

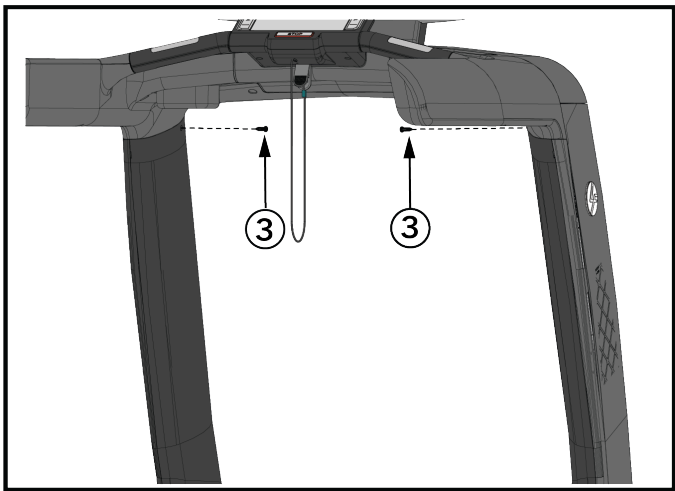

Item	Description	Qty.
3	Screw: M4.2 X 0.7 6G6G X 19, DIN, PHL, PAN, AB, ST, ZB	2
	12.4 in. lbs. / 1.4 Nm	

Fit and Finish Guidelines

IMPORTANT: In addition to the importance of alignment called out when assembling the product, please scan the QR code to ensure the product follows appropriate fit and finish guidelines.



<https://lfn.fit/SymbioRunnerFitFinish>

5. Specifications

Specifications

Designed Use	Heavy / Commercial EN ISO 20957 Class S (Symbio Runner)
	Home EN ISO 20957 Class H (Symbio Home Runner)
Maximum User Weight	400 lbs. / 181 kg
Speed Range	0.5 - 16.0 MPH (0.8 - 25 KPH) in 0.1 increments
Incline	0% - 15%
Drive Motor	Eco-Life High Efficiency Motor (*Max Power - 4 HP DC Brushless) *Rated Power - 2.7 HP
Incline Motor	HIIT DC Brushless Motor (frequent changes)
Power Requirements	See <i>Electrical Requirements</i> for requirements outside the U.S.
	Dedicated 120 volt, 20 amp (U.S)
Rollers	3.5" (9 cm) diameter, precision-crowned, front and back
Striding Belt	60" Length x 22" Width (152 cm Length x 55 cm Width)
Waxing System	Lubricant-infused Striding Belt
Deck Type	1" medium density reversible fiberboard
Cushioning	Electronically adjustable with 5 settings and auto-terrain mode
Mobility	Mobility wheel included
Quick Keys	1-Touch 3" x 8" LCD
Lighting	Running lights, keypads, LF emblem, back of console
Lighting Colors	16 colors; 3 brightness levels
Running Metrics	Cadence, step length, left/right balance, flight time, ground contact time
Stop Systems	<ul style="list-style-type: none"> Two-function emergency stop system (rectangular stop button and safety pull cord with lanyard) Stride Sensor+
Heart Rate Monitoring Systems	Patented Lifepulse™ digital contact heart rate and Polar® telemetry compatible heart rate monitoring system Compatible with ANT+ and BT heart rate monitoring devices
Wireless Charging	Qi wireless induction charging <ul style="list-style-type: none"> Charging area: 50mm x 80mm (approximately 2 in. x 3 in.) Charging response time: less than 3 seconds Maximum output: 10W Charging protocol compatibility: Qi Fast Charging
Wireless Communication	BT, NFC, Apple & Samsung watch compatibility, ANT+, RFID, Wireless Connectivity

Treadmill Dimensions

	Physical Dimensions
Length	84.85 in. / 215.52 cm
Width	36.5 in. / 92.71 cm
Height	65.73 in. / 166.95 cm (with console) 55.73 in. / 141.55 cm (without console)
Step-Up Height	11 in. / 27.9 cm
Weight	579 lbs. / 263 kg (without console)

Console Dimensions

	Physical Dimensions
Depth	3.4 in. / 8.6 cm
Width	22.76 in. / 57.8 cm
Height	16.4 in. / 41.6 cm
Weight	24 lbs. / 10.9 kg

6. Service and Technical Data

Preventive Maintenance Tips

NOTE: Safety of the equipment can be maintained only if the equipment is examined regularly for damage or wear. Keep the equipment out of use until defective parts are repaired or replaced. Pay special attention to parts that are subject to wear, as outlined below.

REMARQUE : Pour assurer la sécurité du matériel, il convient de l'inspecter régulièrement afin de détecter tout signe d'usure ou d'endommagement. N'utilisez pas l'appareil avant d'avoir réparé ou remplacé les pièces défectueuses. Portez une attention toute particulière aux pièces qui s'usent, comme indiqué ci-dessous.

The following preventive maintenance tips will keep the product operating at peak performance:

- Locate the product in a cool, dry place.
- Clean the display console and all exterior surfaces with an approved or compatible cleaner (see Approved and Compatible Cleaners) and a microfiber cloth.
- Long fingernails may damage or scratch the surface of the console; use the pad of the finger to press the selection buttons on the console.
- Check operation of the emergency stop system once a week.
- Inspect and vacuum the area directly surrounding and under the unit regularly.
- Vacuum around the striding belt regularly to keep debris from accumulating.
- Inspect exterior parts regularly for wear, particularly the striding belt, deck and line cord.
- Check to make sure the unit is properly leveled.
- Check the position (centering) of the striding belt.

NOTE: Normal belt operating position is for the belt to be located within the belt travel indicators on the rear roller guards. Refer to *Tracking (Centering) A Striding Belt* or contact Customer Support Services for proper alignment instructions.

Approved and Compatible Cleaners

Two preferred cleaners have been approved by reliability experts: PureGreen 24 and Gym Wipes. Both cleaners will safely and effectively remove dirt, grime and sweat from equipment. PureGreen 24 and the Antibacterial Force formula of Gym Wipes are both disinfectants that are effective against MRSA and H1N1.

PureGreen 24 is available in a spray which is convenient for gym staff to use. Apply the spray to a microfiber cloth and wipe down the equipment. Use PureGreen 24 on the equipment for at least 2 minutes for general disinfection purposes and at least 10 minutes for fungus and viral control.

Gym Wipes are large, durable pre-moistened wipes to use on the equipment before and after workouts. Use Gym Wipes on the equipment for at least 2 minutes for general disinfection purposes.

Contact Customer Support Services to order these cleaners (1-800-351-3737 or email: customersupport@lifelitness.com).

Mild soap and water or a mild non-abrasive household cleaner can also be used to clean the display and all exterior surfaces. Use a soft microfiber cloth only. Apply the cleaner to the microfiber cloth before cleaning. DO NOT use ammonia or acid based cleaners. DO NOT use abrasive cleaners. DO NOT use paper towels. DO NOT apply cleaners directly to the equipment surfaces.

Preventive Maintenance Schedule

Item	Weekly	Monthly	Biannually
Bottle Holders / Accessory Trays	Clean	Inspect	
Console Mounting Bolts			Inspect
Console Overlays	Clean		Inspect
Drive Belt			Inspect
Ergo™ Front Handlebar	Clean		Inspect
Frame	Clean		Inspect
Front and Rear Rollers			Inspect

Item	Weekly	Monthly	Biannually
Hardware			Inspect
Leg Levelers		Inspect / Adjust	
Lifepulse Sensors	Clean / Inspect		
Motor Cover	Clean	Vacuum / Clean	
Motor Electronic Compartment			Inspect
Plastic Covers	Clean	Inspect	
Side Hand Rails	Clean		Inspect
Side Step Area	Clean	Inspect	
Striding Belt Centered	Inspect		

Troubleshooting the Treadmill

No power

Probable Cause	Corrective Action
ON / OFF switch is not in proper position.	Turn the switch to the ON position.
Power source is insufficient.	Plug treadmill into an appropriate circuit. Refer to Grounding Instructions. NOTE: In North America use a dedicated 20 amp circuit for Commercial Units or a 15 amp circuit for Consumer Units. Using a voltmeter, verify power at outlet. If no power exists, reset circuit breaker at panel.
Line cord is damaged.	Replace line cord. Contact Life Fitness Customer Support.
Line cord is improperly seated in socket.	Inspect power connections at wall outlet and at machine for proper contact.

Striding belt slips off- center.

Probable Cause	Corrective Action
Floor surface is uneven.	Check levelers and level treadmill. Check striding belt & re-tension as necessary. Refer to <i>How to Adjust and Tension the Striding Belt</i> .

Maximum speed is reduced.

Probable Cause	Corrective Action
User is pushing striding belt. This occurs when the runner is running faster than the striding belt will travel, with the result of the striding belt being pushed with the runner's feet.	Instruct users not to push striding belt in either direction.
User is stalling striding belt. This occurs with heavier users at lower striding belt speeds. The striding belt will "stall" if the user is traveling slower than the striding belt.	
Striding belt/deck malfunctions. The deck laminate is worn through or the underside of striding belt is glazed over (hard, glossy).	Replace belt and deck.

Probable Cause	Corrective Action
Power source is insufficient.	Plug treadmill into an appropriate circuit. Refer to Grounding Instructions. NOTE: In North America use a dedicated 20 amp circuit for Commercial Units or a 15 amp circuit for Consumer Units.

Rubbing sound comes from underneath machine.

Probable Cause	Corrective Action
Foreign objects may be stuck underneath the machine.	Power down the unit and disconnect AC power. Inspect underneath striding belt and machine. Remove any debris or objects that may cause interference with the treadmill.

Display does not illuminate when machine is powered on.

Probable Cause	Corrective Action
<ul style="list-style-type: none"> No power. Loose connection(s). Incorrect console or power supply. 	Check all electrical connections for proper attachment. <ul style="list-style-type: none"> AC outlet and line cord Line cord at treadmill Power switch All console connections All lower electronics connections Contact Life Fitness Customer Support.


Unit resets randomly or pauses.

Probable Cause	Corrective Action
Power source is insufficient.	Plug treadmill into an appropriate circuit. Refer to Grounding Instructions. NOTE: In North America use a dedicated 20 amp circuit for Commercial Units or a 15 amp circuit for Consumer Units.
Damaged ground prong is on line cord.	Replace line cord.
Line cord improperly seated in electrical outlet.	Inspect power connection at electrical outlet and at machine for proper contact.
Towel or other item may be making contact with stop switch while user is running.	Move all possible obstructions off display console and handlebar.
Stop switch is activated with very light pressure or returns slowly after being pressed.	Contact Life Fitness Customer Support.
Stop switch cable is not making proper contact.	
Main wire harness is pinched.	
Ground path is open.	


Troubleshooting - Smart Lighting

The base is equipped with lighting that can be tuned On or Off, has three brightness setting, and 16 colors.

1. Select **Language** icon from Attract Screen to access the **Select Language** screen.

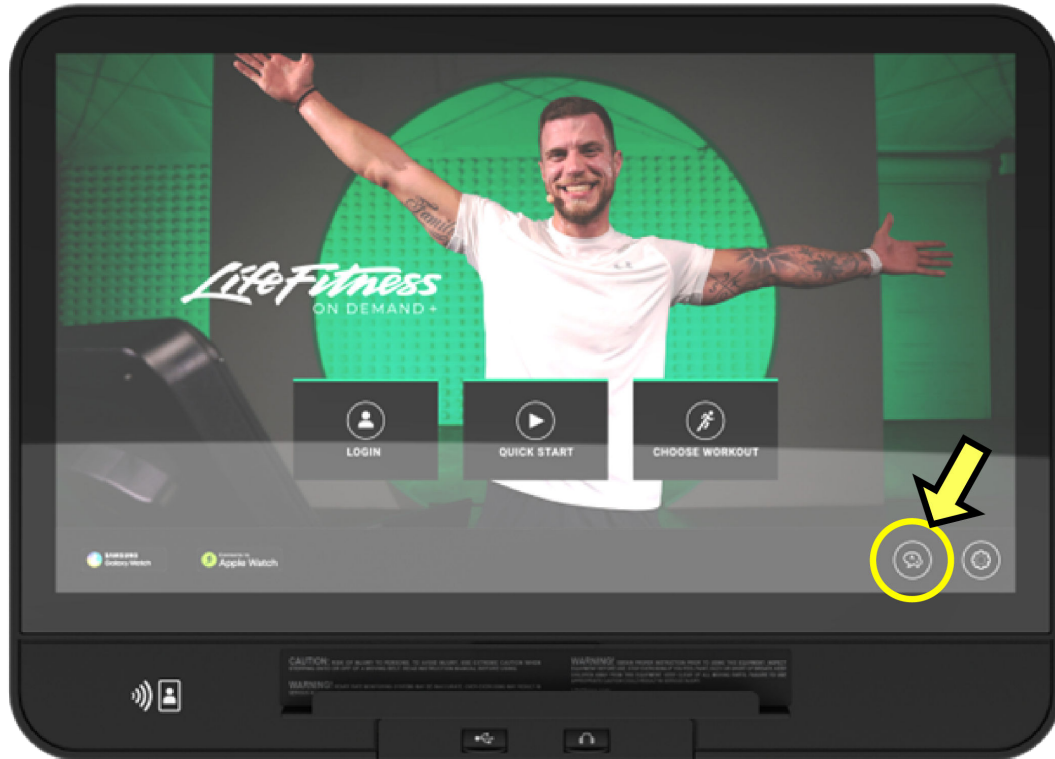


2. Tap the bottom part of the **Select Language** screen in the following sequence: **Lower-Left, Lower-Right, Lower-Left, Lower-Right**.

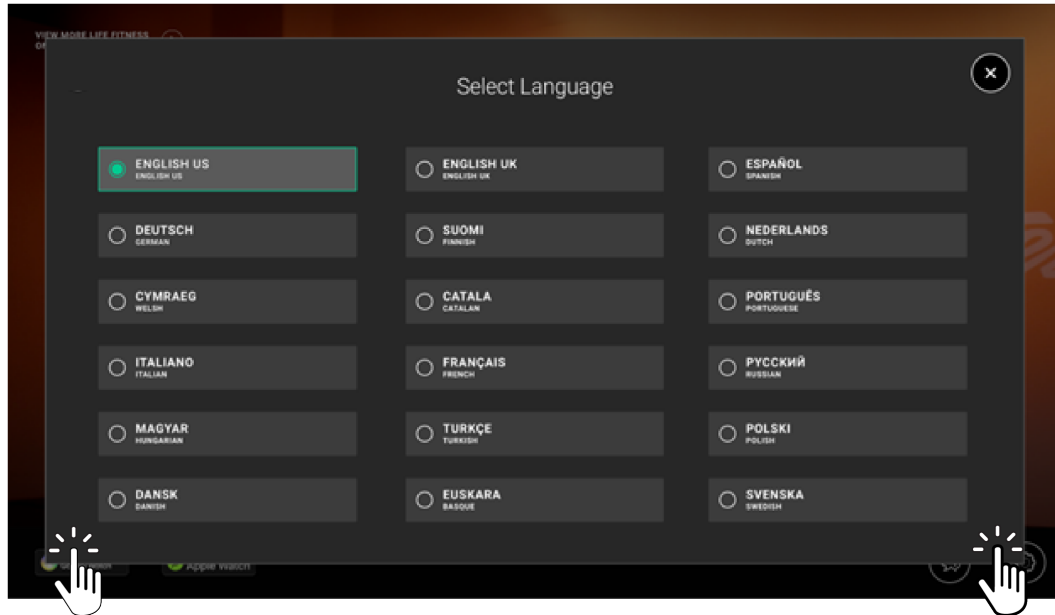

NOTE: Make sure you tap INSIDE the black square!

3. Navigate through the System Options menu to **Configuration > Manager**.

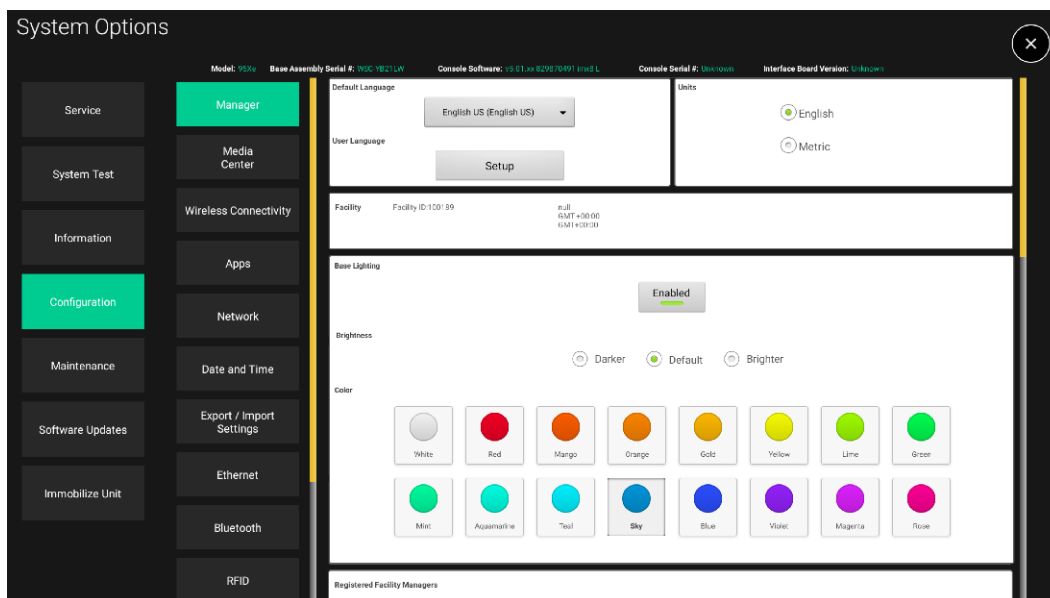

4. Scroll down to **Smart Lighting**.
5. Toggle the **Enabled** button to ensure the lights are turned on.
6. Adjust the **Brightness** setting to test visibility.
7. Adjust the **Color** to test the light color options.

Troubleshooting - Wireless Charger

A blue LED indicator is located on the front of the wireless charger rack. Reference the table below for description and LED indicator status.

Status	Description		LED Indicator
Start Up	Console is powered ON.		ON
Standby	Charger is waiting for a device to be placed on.		OFF
Charging	Charger is currently charging a correctly placed device.		ON
Charge Complete	Charger completed charging a device.		ON
Charging Error	Possible Errors: <ol style="list-style-type: none"> 1. A foreign object (RFID card, magnets, metal objects, etc.) is detected on the charger coils. 2. The phone case is too thick. 3. Wireless charger is damaged. 	Corrective Actions: <ol style="list-style-type: none"> 1. Remove foreign object from wireless charger. Reposition your phone. 2. Remove the phone case. Place phone on wireless charger. 3. Contact Life Fitness Customer Support Services. 	OFF

Troubleshooting the Polar® Heart Rate Chest Strap

Heart rate reading is erratic or absent entirely

Probable Cause	Corrective Action
Belt transmitter electrodes are not wet enough to pick up accurate heart rate readings.	Wet the belt transmitter electrodes.

Probable Cause	Corrective Action
Belt transmitter electrodes are not laying flat against the skin.	Ensure the belt transmitter electrodes are laying flat against the skin.
Belt transmitter needs cleaning.	Wash the belt transmitter with mild soap and water.
Belt transmitter not properly set up.	Setup of the belt transmitter is accomplished by initially bringing it with in 1 foot / 30.5 cm of the receiver. The receiver is in the console. After the heart rate is displayed on the console the range is extended to 3 feet / 91.4 cm.
Chest strap battery is depleted.	Contact Customer Support Services for instructions on how to have the chest strap replaced.

Abnormally elevated heart rate readings

Probable Cause	Corrective Action
<p>Electromagnetic interference from:</p> <ul style="list-style-type: none"> • Television sets and / or antennas • Cell phones • Computers • Cars • High voltage power lines • Motor driven exercise equipment 	Move the exercise equipment a few inches away from the probable cause, or move the probable cause a few inches away from the exercise equipment, until the heart rate readings are accurate.

Mobility Wheel

A mobility wheel lever is located at the rear end of the unit. This lever will engage a wheel and elevate the rear end of the unit. The treadmill can then be easily moved for cleaning or servicing.




WARNING: Shock and electrocution hazard.

- Unplug unit and let sit 10 minutes before cleaning or performing maintenance.
- Electrical charge can remain in unit after unplugging.
- Keep water and liquids away from electrical parts.


Engage Mobility Wheel

- 1. Unplug power cord from power outlet.
- 2. Grasp the mobility wheel lever and slide to the right and lift up to lock in place.

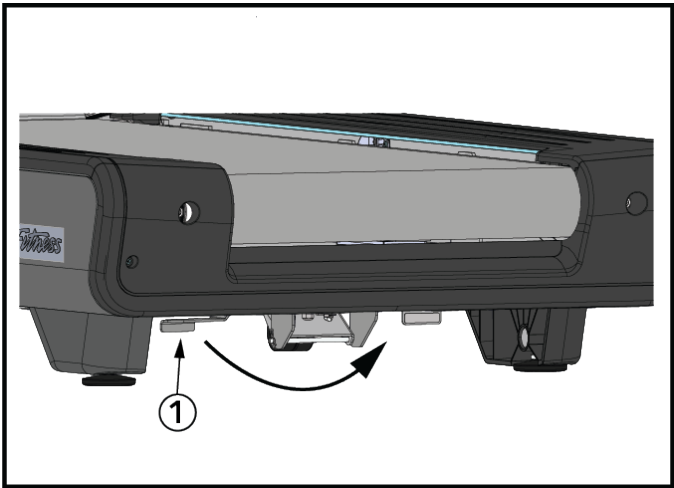

Item	Description	Qty.
1	Mobility wheel lever	1


The mobility wheel will lower and raise the rear feet off the floor.

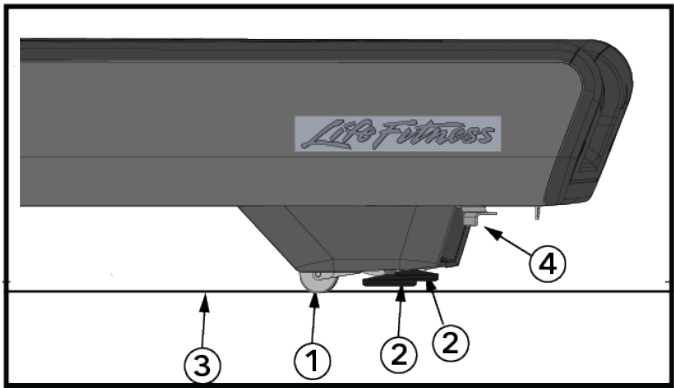

Item	Description	Qty.
1	Mobility wheel	1
2	Rear feet	2
3	Floor	1
4	Mobility wheel lever	1


- 3. Move treadmill as needed.

Disengage Mobility Wheel

 **WARNING:** Trip and fall hazard.

To avoid injury, make sure mobility wheel lever is not engaged prior to use.

- 1. Grasp the mobility wheel lever and slide to the right, push down, and slide to the left.

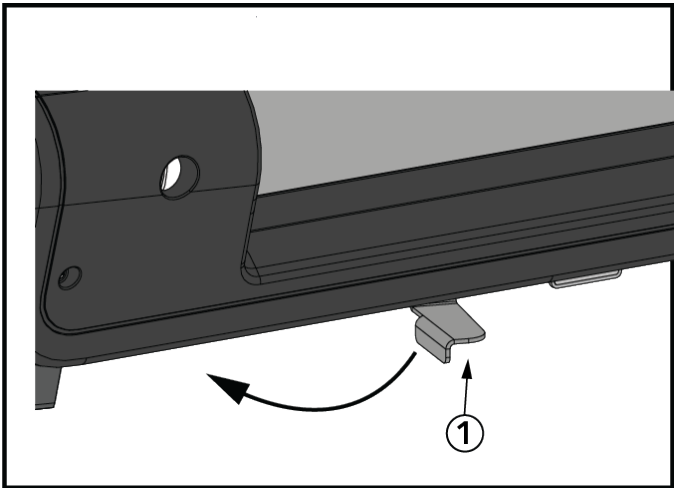

Item	Description	Qty.
1	Mobility wheel lever	1

- 2. Plug the power cord into the power outlet.

How To's

Knowledge Base

See <https://lfn.fit/KnowledgeBase> for more detailed information.

How to Adjust and Tension the Striding Belt


Do not move the treadmill or place hands under the treadmill while it is plugged into an electrical outlet!

Belt Tensioning Bolts

An 8 mm Allen wrench is required for this task. The treadmill has access holes in the rear roller guards which allow access to the tensioning bolts. These tensioning bolts make it possible to adjust the tracking and centering of the striding belt without removing the guards.

NOTE: It is extremely important that the treadmill be correctly leveled prior to any tracking adjustments. An unstable unit may cause striding belt misalignment. See *How To Stabilize the Treadmill* prior to attempting any rear roller adjustments.


Before proceeding, it is helpful to visualize the pivot point of the rear roller. Each adjustment made to one side of the roller must be met with an equal and opposite adjustment to the other side of the roller to maintain an ideal belt tension at the pivot point.

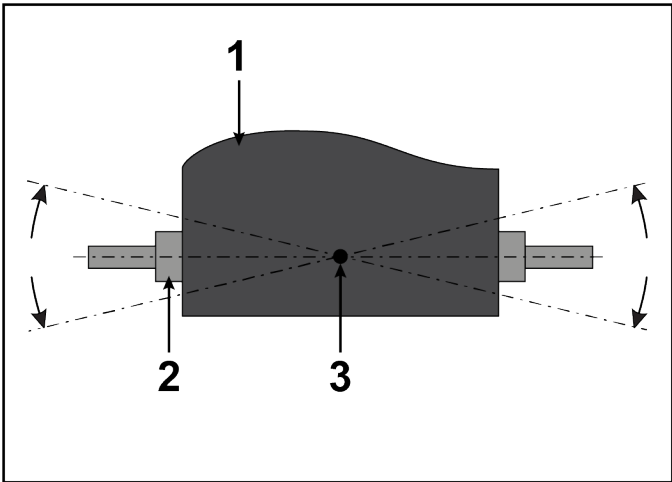

Item	Description	Qty.
1	Belt	1
2	Rear Roller	1
3	Pivot Point of Rear Roller	1

Tracking (Centering) A Striding Belt

1. Ensure treadmill is leveled correctly.
2. Locate the two access holes to the belt tensioning bolts on each of the rear roller guards.

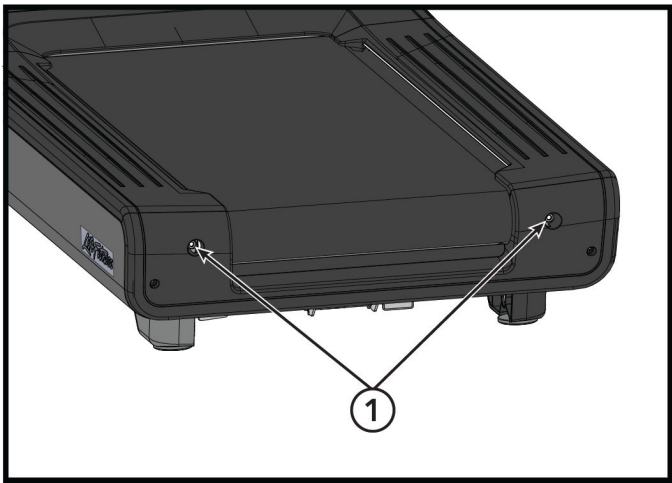

Item	Description	Qty
1	Belt Tensioning Bolts	2


3. Press **Quick Start** and set the belt speed to 2.5 MPH / 4.0 KPH.
4. If the striding belt has moved to the right, turn the right tension bolt a quarter-turn clockwise and then turns the left tension bolt a quarter-turn counter-clockwise to make the striding belt track back to the center of the roller. If the striding belt has moved to the left, turn the left tension bolt a quarter-turn clockwise and then turn the right tension bolt a quarter-turn counter-clockwise to make the striding belt track back to the center of the roller.


NOTE: If the striding belt has moved as far as to the edge of the roller (either right or left side), it must be re-centered per the above procedure.

5. Repeat the adjustments until the striding belt appears centered. Allow the machine to continue running for several minutes at 4.0 MPH / 6.4 KPH to observe if tracking remains stabilized.

NOTE: Do not exceed one full turn of the adjusting screws in either direction. If after one full turn the belt does not track properly, contact Life Fitness Customer Support. Do not overtighten the tensioning bolts while making belt adjustments. Overtightening of bolts may over stretch and damage the striding belt or roller.


Tensioning an Existing Striding Belt

1. Ensure that the striding belt has slack.
2. If the belt is too tight, loosen the two rear roller mounting bolts to the point where the drive roller is tight.
-  **CAUTION:** If the bolts are too loose, the bolt can become un-threaded. This would require the unit to be dis-assembled (See Rear Roller Replacement).
3. If striding belt is new, perform the following procedure (Walk in process):
- a. Turn treadmill on and press **Quick Start**.
 - b. Adjust speed to 2.0 - 2.5 MPH / 3.2 - 4.0 KPH.
 - c. Walk on treadmill deck from the front roller, working your way back to the rear roller and back towards the front roller while simultaneously walking left to right. Repeat this for 5 minutes.
 - d. Turn treadmill off.
4. Position the striding belt seam centered on the underside of the treadmill so it is not visible.

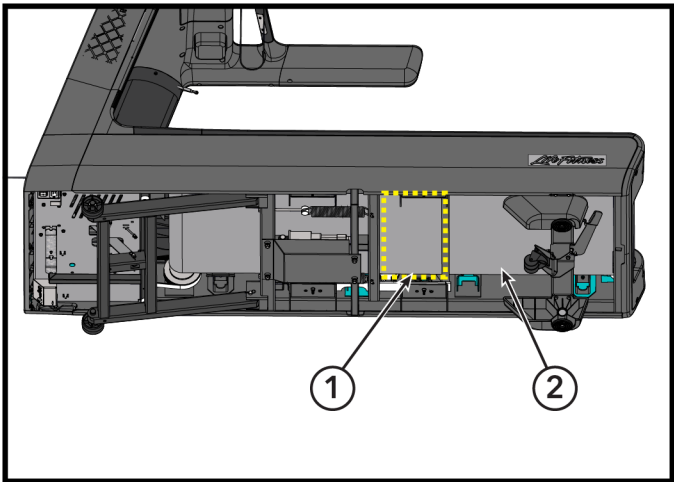

Item	Description	Qty
1	Striding Belt Seam Area	1
2	Striding Belt	1

5. Place two pieces of masking tape on the left and right side of the belt near the front roller. Use the tape side as the edge of reference.

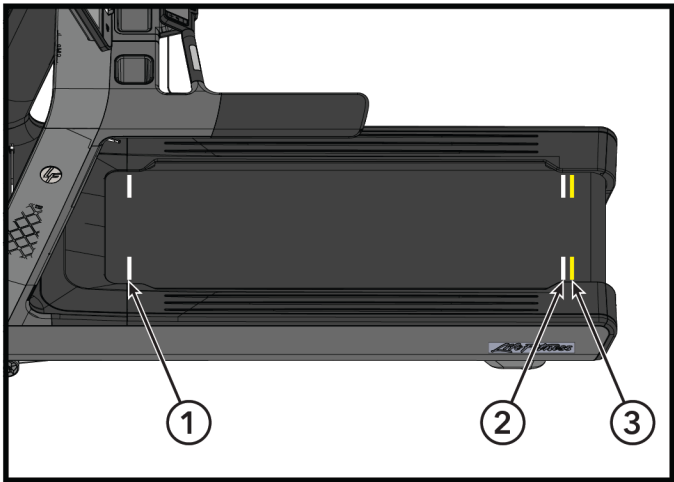

Item	Description	Qty
1	First Set of Masking Tape Near Front Roller	2
2	Second Set of Masking Tape Near Rear Roller	2
3	New Location of Tape as Striding Belt Stretches	2

6. Add two more pieces of masking tape on each side exactly 38.5 in. / 97.8 cm from the first pieces of masking tape.
7. Counting wrench rotations, stretch the belt so that the marks are now 38.75 in. / 98.4 cm on both sides.
- NOTE:** it is important to tighten the bolt a little, then switching to the other bolt. Continue alternating bolts, until both sides are tensioned to the correct amount.

Test belt tension with Stomp Test.

1. Turn treadmill on and press **Quick Start**.
2. Adjust speed to 2.5 MPH / 4.0 KPH.
3. Stand on side rails and hold handrails.
4. With one foot stomp on the striding belt to see if it slips.
5. If it slips, make minor adjustments to the striding belt tension with ¼ turns of the rear roller mounting bolts.
6. Repeat stomp test after each adjustment.
7. Continue with small adjustments until striding belt stops slipping.

How To Obtain Product Service

1. Verify the symptom and review the operating instructions. The problem may be unfamiliarity with the product and its features and workouts.
2. Locate and write down the serial number of the unit which is located on the small serial label on the back of the unit on the end cap near the wheel mount. Remove top motor cover to view the large serial number located on the base frame.
3. Contact Customer Support at <http://www.lifefitness.com>.

7. Warranty

What is Covered

This Life Fitness commercial exercise equipment product is warranted to be free of all defects in material and workmanship.

Who is Covered

The original purchaser or any person receiving the product as a gift from the original purchaser. Warranty will be voided on subsequent transfers.

How Long It is Covered

All coverage is provided by specific Product according to the guidelines listed in Warranty Information.

Who Pays Transportation and Insurance For Service

If the Product or any covered part must be returned to a service facility for repairs, We, Life Fitness, will pay all transportation and insurance charges for the first year. You are responsible for transportation and insurance charge after the first year.

What We Will Do To Correct Covered Defects

We will ship to you any new or rebuilt replacement part or component, or at our option, replace the Product. Such replacement parts are warranted for the remaining portion of the original warranty period.

What is Not Covered

Any failures or damage caused by unauthorized service, misuse, accident, negligence, improper assembly or installation, debris resulting from any construction activities in the Product's environment, rust or corrosion as a result of the Product's location, alterations or modifications without our written authorization or by failure on your part to use, operate and maintain the Product as set out in your Operation Manual ("Manual").

One type RJ45 interchangeable Network ready and Fitness Entertainment port is supplied with the Product. This port complies with the FitLinxx CSAFE specification dated August 4, 2004 stating: 4.75 VDC to 10 VDC; maximum current of 85 mA. Any Product damage caused by a load exceeding this FitLinxx CSAFE specification is not covered by warranty.

All terms of this warranty are void if this product is moved beyond the continental borders of the United States of America (excluding Alaska, Hawaii and Canada) and are then subject to the terms provided by that country's local authorized Life Fitness representative.

What You Must Do

Retain proof of purchase. use, operate and maintain the Product as specified in the Manual; notify the place of purchase of any defect within 10 days after discovery of the defect; if instructed, return any defective part for replacement or, if necessary, the entire Product for repair. Life Fitness reserves the right to decide whether or not a product is to be returned for repair.

How to Get Parts and Service

Refer to the Corporate Headquarters section of this manual for your local service contact information. Reference your name, address and the serial number of your Product (consoles and frames may have different serial numbers). They will tell you how to get a replacement part, or, if necessary, arrange for service where your Product is located.

Exclusive Warranty

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OF ANY KIND EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART. We neither assume nor authorize any person to assume for us any other obligation or liability concerning the sale of this Product. Under no circumstances shall we be liable under this warranty, or otherwise, of any damage to any person or property, including any lost profits or lost savings, for any special, indirect, secondary, incidental or consequential damages of any nature arising out of the use of or inability to use this Product. Some states do not allow the exclusion or limitation of implied warranties or of liability for incidental or consequential damages, so the above limitations or exclusions may not apply to you.

Changes in Warranty Not Authorized

No one is authorized to change, modify or extend the terms of this limited warranty.

Effects of State Laws


This warranty gives you specific legal rights, and you may have other rights which vary from state to state and country by country.

Terms of Warranty Coverage

Please use the link below to access component warranty terms:

<http://lifelitness.com/warranties>



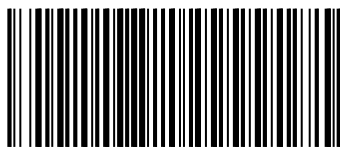

1022782-0001