

Symbio™ Incline Elliptical and Symbio™ Home Incline Elliptical

Assembly Instructions



Corporate Headquarters

Columbia Centre III, 9525 Bryn Mawr Avenue, Rosemont, IL 60018 • U.S.A.
847.288.3300 • FAX: 847.288.3703
Service phone number: 800.351.3737 (toll-free within U.S.A., Canada)
Global Website: www.lifefitness.com

International Offices

AMERICAS

North America

Life Fitness, LLC

Columbia Centre III
9525 Bryn Mawr Avenue
Rosemont, IL 60018 U.S.A.
Telephone: (847) 288 3300
Service Email:
customersupport@lifefitness.com
Sales/Marketing Email:
commercialsales@lifefitness.com

Brazil

Life Fitness Brasil

Av. Rebouças, 2315
Pinheiros
São Paulo, SP 05401-300
BRAZIL
SAC: 0800 773 8282 option 2
Telephone: +55 (11) 3095 5200 option 2
Service Email: suportebr@lifefitness.com
Sales/Marketing Email:
vendasbr@lifefitness.com

Latin America and Caribbean*

Life Fitness, LLC

Columbia Centre III
9525 Bryn Mawr Avenue
Rosemont, IL 60018 U.S.A.
Telephone: (847) 288 3300
Service Email:
customersupport@lifefitness.com
Sales/Marketing Email:
commercialsales@lifefitness.com

EUROPE, MIDDLE EAST, and AFRICA (EMEA)

Belgium, Netherlands, and Luxemburg

Life Fitness Atlantic BV

Bijdorpplein 25-31
2992 LB Barendrecht
THE NETHERLANDS
+3118064666
Service Email:
service.benelux@lifefitness.com
Sales/Marketing Email:
marketing.benelux@lifefitness.com

United Kingdom

Life Fitness UK LTD

Unit 109^a
Lancaster Way Business Park
Ely, Cambs, CB6 3NX
Telephone: General Office (+44)
1353.666017
Customer Support (+44) 1353.665507
Service Email: uk.support@lifefitness.com
Sales/Marketing Email: life@lifefitness.com

Germany, Austria, and Switzerland

Life Fitness Europe GMBH

Neuhofweg 9
85716 Unterschleißheim
GERMANY
Telephone:
+49 (0) 89 / 31775166 Germany
+43 (0) 1 / 6157198 Austria
+41 (0) 848 / 000901 Switzerland
Service Email:
kundendienst@lifefitness.com
Sales/Marketing Email:
vertrieb@lifefitness.com

Spain

Life Fitness IBERIA

C/Frederic Mompou 5,1^o1^a
08960 Sant Just Desvern Barcelona
SPAIN
Telephone: (+34) 93.672.4660
Service Email:
servicio.tecnico@lifefitness.com
Sales/Marketing Email:
info.iberia@lifefitness.com

All Other EMEA Countries and Distributor Business EMEA*

Life Fitness Atlantic BV

Bijdorpplein 25-31
2992 LB Barendrecht
THE NETHERLANDS
+3118064666
Service Email:
emeaservicesupport@lifefitness.com

ASIA PACIFIC (AP)

Japan

Life Fitness Japan, Ltd

4-17-33 Minami Aoyama 1F/B1F
Minato-ku - Tokyo 107-0062
Japan
Telephone: (+81) 0120.114.482
Fax: (+81) 03-5770-5059
Service Email: service.lfj@lifefitness.com
Sales/Marketing Email:
sales@lifefitnessjapan.com

Hong Kong

Life Fitness Asia Pacific LTD

26/F, Global Trade Square
21 Wong Chuk Hang Road
Wong Chuk Hang
Hong Kong
Telephone: (+852) 25756262
Fax: (+852) 25756894
Service Email: service.hk@lifefitness.com
Sales/Marketing Email:
marketing.hk.asia@lifefitness.com

All Other Asia Pacific countries and distributor business Asia Pacific*

Life Fitness Asia Pacific LTD

26/F, Global Trade Square
21 Wong Chuk Hang Road
Wong Chuk Hang
Hong Kong
Telephone: (+852) 25756262
Fax: (+852) 25756894
Service Email: service.ap@lifefitness.com
Sales/Marketing Email:
marketing.hk.asia@lifefitness.com

*Also check www.lifefitness.com for local representation or distributor/dealer

User and Service Documents Link

<https://lfn.fit/KnowledgeBase>

<https://lfn.fit/SupportDocuments>

Additional information is available online using the links above.

تتوفر معلومات إضافية على الإنترنت باستخدام الرابط أعلاه.

点击上面的链接可在线获取更多信息。

Flere oplysninger er tilgængelige online gennem linket ovenfor.

Bijkomende informatie is online beschikbaar via bovenstaande link.

Vous trouverez plus d'informations en ligne à l'aide du lien ci-dessus.

Zusätzliche Informationen finden Sie online über den oben angegebenen Link.

Ulteriori informazioni sono disponibili online utilizzando il link sopra riportato.

追加情報は上記リンクを使用してオンラインで利用可能です。

상기 링크를 통해 온라인에서 추가 정보를 볼 수 있습니다.

Informações adicionais estão disponíveis on-line, através do link acima.

Дополнительная информация доступна в интернете по ссылке, указанной выше.

Mediante el enlace anterior podrá acceder a información adicional en línea.

Ytterligare information finns online genom att använda länken ovan.

İnternet üzerinden daha fazla bilgi edinmek için yukarıdaki bağlantıyı kullanabilirsiniz.

هناك معلومات إضافية متاحة على الإنترنت باستخدام الرابط أعلاه.

Informazio osagarria eskuragarri dago goiko estekaren bidez.

Допълнителна информация можете да намерите онлайн, като използвате връзката по-горе.

Mitjançant l'enllaç anterior podreu accedir a informació addicional en línia.

使用上面的連結線上提供額外資訊。

Dodatne informacije možete pronaći na internetu sljedeći vezu iznad.

ከላይ የተቀመጠውን አገናኝ(ሊንክ) በመጠቀም መረጃዎች አንላይን ያገኛሉ፡፡

Lisätietoja on saatavissa verkosta käyttämällä yllä olevaa linkkiä.

Wubetumi anya nsem afoforo aka ho wo websait so denam asem a ewo atifi ho a wubemia so so.

Πρόσθετες πληροφορίες είναι διαθέσιμες online χρησιμοποιώντας το σύνδεσμο παραπάνω.

מידע נוסף אפשר לקבל באינטרנט באמצעות הקישור לעיל.

További információ elérhető online, a fenti hivatkozás segítségével.

Viðbótarupplýsingar eru fáanlegar á netinu með því að smella á tengilinn hér fyrir ofan.

Plus indicium per superum situm potes invenire.

മുകളിലുള്ള ലിങ്ക് ഉപയോഗിച്ച് ഓൺലൈനിൽ കൂടുതൽ വിവരങ്ങൾ ലഭ്യമാണ്.

Ytterligere informasjon er tilgjengelig på nettet via linken ovenfor.

Dodatkowe informacje są dostępne online pod powyższym odnośnikiem.

Informações adicionais estão disponíveis online a usar o link acima.

Informații suplimentare sunt disponibile online, utilizând link-ul de mai sus.

Dodatne informacije dostupne su na mreži putem gornjeg linka.

Ďalšie informácie sú dostupné online na vyššie uvedenom odkaze.

Table of Contents

Additional Information

Link to Additional Information Online	4
---	---

Getting Started

Safety Instructions	5
Consignes de Sécurité	7
Mobility Wheel	9
How to Stabilize the Incline Elliptical	10
Electrical Power Requirements	11

Product Overview

Product Features	12
Connections	13
How to Use the Cross-Trainer	13
Mounting and Dismounting the Cross-Trainer	13
Qi® Wireless Induction Charger	14
How To Adjust Smart Lighting	15

Assembly

Link to Additional Information Online	17
Hardware	17
Tools Required	18
Assembly Procedure	18

Specifications

Product Specifications	29
--	----

Service and Technical Data

Preventive Maintenance Schedule	30
Preventive Maintenance Tips	30
Approved and Compatible Cleaners	30
Troubleshooting the Polar® Heart Rate Chest Strap	31
Troubleshoot the Lifepulse™ Sensors	32
Troubleshooting - Wireless Charger	32
How To's	32

Warranty

What is Covered	33
Who is Covered	33
How Long It is Covered	33
Who Pays Transportation and Insurance For Service	33
What We Will Do To Correct Covered Defects	33
What is Not Covered	33
What You Must Do	33
How to Get Parts and Service	33
Exclusive Warranty	33
Changes in Warranty Not Authorized	34
Effects of State Laws	34
Terms of Warranty Coverage	34

Life Fitness® is a registered trademark.

Gym Wipes® is a registered trademark of the 2XL Corporation. PureGreen 24 is a trademark of Pure Green. Polar® is a registered trademark of Polar Electro Inc.

© Copyright 2025, Life Fitness, LLC. All Rights Reserved. Life Fitness, Hammer Strength, Cybex, ICG and SCIFIT are registered trademarks of Life Fitness, LLC and its affiliated companies and subsidiaries. Disclaimer: Images and specifications are current as of the date of publication and are subject to change.

Columbia Center III - 9525 Bryn Mawr Ave., Rosemont, IL 60018 • 847-288-3300

www.lifefitness.com • 1022786-0001 AC • 2025

1. Additional Information

Link to Additional Information Online

In addition to the content provided in this manual, please scan the QR code for further and updated information.

Commercial

Life Fitness Symbio Incline Elliptical Commercial Install Information



<https://lfn.fit/SymbioInclineEllipticalInstall>

Home

Life Fitness Symbio Incline Elliptical Home Install Information



<http://lfn.fit/SymbioInclineEllipticalHomeInstall>

2. Getting Started

Safety Instructions

 Read all instructions before use.



CAUTION: Any changes or modifications to this equipment could void the product warranty.



WARNING: Health-related injuries may result from incorrect or excessive use of exercise equipment. Life Fitness STRONGLY recommends seeing a physician for a complete medical exam before undertaking an exercise program, particularly if the user has a family history of high blood pressure or heart disease, is over the age of 45, smokes, has high cholesterol, is obese, or has not exercised regularly in the past year. If, at any time while exercising, the user experiences faintness, dizziness, pain, or shortness of breath, he or she must stop immediately.



WARNING: To reduce the risk of burns, fire, electric shock, or injury, it is imperative to connect each product to a properly grounded electrical outlet.



WARNING: Heart rate monitoring systems may be inaccurate. Over exercising may result in serious injury or death. If you feel faint, stop exercising immediately.



WARNING: Do not use for stretching and do not attach straps or other devices.



WARNING: Keep batteries out of reach of children.

Some chest straps may contain a removable battery.

- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
- If you suspect your child has swallowed a battery, immediately call your local poison control for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Tell others about the risk associated with button batteries and how to keep their children safe.



WARNING: Ensure that there is at least 1 ft. / 0.3 m of clearance in front of the Cross-Trainer and at least 2 ft. / 0.6 m on the side.



WARNING: The Cross-Trainer is not equipped with a free-wheeling feature. Therefore, the product cannot be stopped immediately.



WARNING: This product can expose you to chemicals including 1,3-butadiene, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.



DANGER: To reduce the risk of electrical shock or injury from moving parts, always unplug product before cleaning or attempting any maintenance activity.

- Life Fitness does not warrant nor guarantee that component parts used in the manufacture of products offered under the Life Fitness are latex-free. Users of these products must take all necessary precautions to prevent accidental contact that could lead to an adverse latex reaction.
- Never operate the product if it has a damaged power cord or electrical plug, or if it has been dropped, damaged, or even partially immersed in water. Contact Customer Support Services.
- Position the product so that the power cord plug to the wall is accessible to the user. Make sure that the power cord is not knotted or twisted and that it is not trapped under any equipment or other objects.
- If the electrical supply cord is damaged, it must be replaced by the manufacturer, an authorized service agent, or a similarly qualified person to avoid a hazard.
- Always follow the console instructions for proper operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge unless they have supervision or been given instruction concerning the use of the appliance by a person responsible for their safety.
- Do not use this product outdoors, near swimming pools or in areas of high humidity.
- Never operate the product with the air openings blocked. Keep air openings free of lint, hair, or any other obstructing material.
- Never insert objects into any opening in these products. If an object should drop inside, turn off the power, unplug the power cord from the outlet, and carefully retrieve it. If the item cannot be reached, contact Customer Support Services.

- Never place liquids of any type directly on the unit, except in an accessory tray or holder. Containers with lids are recommended.
- Do not use these products in bare feet. Always wear shoes. Wear shoes with rubber or high-traction soles. Do not use shoes with heels, leather soles, cleats or spikes. Make sure no stones are embedded in the soles.
- Keep all loose clothing, shoelaces, and towels away from moving parts.
- Do not reach into, or underneath, the unit or tip it on its side during operation.
- This equipment is not intended for use by children. Keep children under the age of 14 away from the machine.
- Do not allow other people to interfere in any way with the user or equipment during a workout.
- Allow LCD consoles to "normalize" with respect to temperature for one hour before plugging the unit in and using.
- When the product is not in use, Life Fitness recommends unplugging the product. Disconnect from the electrical outlet when not in use, and before putting on or taking off parts.
- Use these products for their intended use as described in this manual. Do not use attachments that have not been recommended by the manufacturer.
- Free standing equipment shall be installed on a stable and leveled surface.
- Do not stand or sit on the rear plastic covers of the Cross-Trainer.
- Do not stand on center tube of the Cross-Trainer.
- The individual human power required to perform an exercise may be different than the mechanical power displayed on the Cross-Trainer.
- Never face backward while using the Cross-Trainer.
- Use caution when mounting or dismounting the Cross-Trainer. Before mounting, use the moving arms to bring the pedal nearest to you to the lowest position. Use the stationary handlebars whenever additional stability is required. While exercising, hold onto the moving arms.
- Read all warnings on each product prior to starting a workout.
- If warnings are missing or damaged, please contact Customer Support Services immediately for replacement warning labels. Warning labels are shipped with every product and should be installed before product is used. Life Fitness is not responsible for missing or damaged warning labels.

Consignes de Sécurité



Veuillez lire toutes les instructions avant usage.



ATTENTION : Toute modification apportée à cet équipement pourrait en annuler la garantie.



AVERTISSEMENT : Des problèmes de santé peuvent survenir en cas d'une utilisation incorrecte ou excessive de l'équipement. Life Fitness Recommande VIVEMENT aux utilisateurs de passer un examen médical complet avant d'entamer un programme d'entraînement, et tout particulièrement dans les cas suivants : antécédents familiaux d'hypertension (pression sanguine trop élevée) ou de pathologies cardiaques, utilisateurs de 45 ans ou plus, tabagisme, hypercholestérolémie (taux de cholestérol sanguin trop élevé), obésité, absence d'exercice physique depuis un an ou plus. Si, pendant l'usage de l'appareil, l'utilisateur éprouve un malaise, des vertiges, des douleurs ou des difficultés à respirer, il doit s'arrêter immédiatement.



AVERTISSEMENT : Pour réduire les risques de brûlures, d'incendies, de décharges électriques ou de blessures, il est essentiel de brancher chaque appareil sur une prise électrique correctement mise à la terre.



AVERTISSEMENT : Les systèmes de surveillance de la fréquence cardiaque peuvent être inexacts. Un exercice trop intensif peut entraîner des blessures graves, voire mortelles. En cas de malaise, interrompez immédiatement la séance d'entraînement.



AVERTISSEMENT : Ne pas utiliser pour des étirements et ne pas y attacher des sangles ou autres dispositifs.



AVERTISSEMENT : Tenir les piles hors de portée des enfants.

Certaines sangles de poitrine peuvent contenir une pile jetable.

- L'ingestion de la pile peut provoquer des blessures graves voire la mort en moins de 2 heures en raison du risque de brûlures chimiques et de perforation de l'œsophage.
- Si vous pensez que votre enfant a avalé une pile, contactez immédiatement le centre anti-poison local pour obtenir des conseils spécifiques.
- Contrôlez l'appareil et assurez-vous que le compartiment pour pile est bien fermé, par exemple que la vis ou toute autre fixation mécanique est bien serrée. Ne pas utiliser le produit si le compartiment n'est pas bien fermé.
- Éliminer les piles bouton immédiatement et de manière sûre. Les piles bouton sont une source de danger.
- Informez les tiers des risques associés aux piles bouton et de la manière dont ils doivent agir pour protéger leurs enfants.



AVERTISSEMENT : Veillez à laisser un dégagement d'au moins 30 cm (1 pied) devant le Cross-Trainer et d'au moins 60 cm (2 pieds) sur les côtés.



AVERTISSEMENT : Le Cross-Trainer n'est pas équipé d'une option roue libre. Par conséquent, il ne peut être arrêté instantanément.



DANGER : Pour réduire les risques de chocs électriques ou de blessures en raison des pièces mobiles, débranchez toujours les produits avant de les nettoyer ou de procéder aux tâches d'entretien.

- Life Fitness ne garantit pas que les composants utilisés dans la fabrication des produits proposés dans la Life Fitness sont exempts de latex. Les utilisateurs de ces produits doivent prendre toutes les précautions nécessaires pour éviter un contact accidentel qui pourrait entraîner une réaction indésirable au latex.
- Ne faites jamais fonctionner le produit dont la fiche ou le cordon d'alimentation sont altérés ni aucun appareil qui serait tombé, aurait été endommagé ou même partiellement plongé dans l'eau. Contactez le service à la clientèle.
- Placez l'appareil de façon à ce que l'utilisateur ait accès à la fiche du cordon d'alimentation. Assurez-vous que le cordon d'alimentation n'est pas noué ou tordu et qu'il n'est pas coincé sous un autre appareil ou sous tout autre objet.
- Si le cordon d'alimentation électrique est endommagé, il doit être remplacé par le fabricant, par un réparateur agréé ou par une personne qualifiée afin d'éviter tout danger.
- Pour un fonctionnement correct, suivez toujours les instructions de la console.
- Cet appareil n'est pas destiné à être utilisé par des personnes ou des enfants présentant des capacités physiques, sensorielles ou mentales réduites, ou un manque d'expérience et de connaissances, sauf en cas de supervision ou d'instructions relatives à son utilisation par une personne responsable de leur sécurité.
- N'utilisez pas ce produit à l'extérieur, près d'une piscine ou dans des endroits très humides.
- N'utilisez jamais le produit avec les ouvertures d'air bloquées. Maintenez les bouches d'aération exemptes de peluches, de cheveux ou de toute autre obstruction.
- N'introduisez jamais d'objet dans les ouvertures de cet appareil. Si un objet tombe dans l'appareil, mettez ce dernier hors tension, débranchez le cordon d'alimentation et récupérez l'objet avec précaution. Si vous ne pouvez pas l'atteindre, contactez le service d'assistance à la clientèle.

- Ne placez jamais de liquides d'aucune sorte directement sur l'appareil, sauf si vous disposez d'un support ou d'un plateau pour accessoires. Nous vous recommandons de n'utiliser que des récipients pourvus d'un couvercle.
- N'utilisez pas ces produits avec les pieds nus. Portez toujours des chaussures. Portez des chaussures à semelles en caoutchouc ou antidérapantes. N'utilisez pas de chaussures à talon, à semelle en cuir, à crampons ou à pointes. Assurez-vous qu'aucun caillou ne s'est incrusté dans les semelles.
- Éloignez les vêtements amples, les lacets de chaussure et les serviettes des parties mobiles de l'appareil.
- Ne placez pas les mains à l'intérieur ou sous l'appareil. Ne le faites pas basculer sur le côté durant son fonctionnement.
- Cet équipement n'est pas destiné à être utilisé par les enfants. Tenez les enfants âgés de moins de 14 ans à l'écart de la machine.
- Ne laissez aucune personne gêner l'utilisateur ou le fonctionnement de l'appareil pendant l'exercice.
- Laissez les consoles LCD s'adapter à la température ambiante pendant une heure avant de brancher l'appareil et de l'utiliser.
- Life Fitness recommande de débrancher le produit quand il n'est pas utilisé. Débranchez-le systématiquement après son utilisation et avant l'ajout et le retrait de pièces.
- Utilisez cet équipement uniquement aux fins auxquelles il est destiné et de la manière décrite dans le présent manuel. N'utilisez pas d'accessoires non recommandés par le fabricant.
- L'appareil utilisé de manière autonome doit être installé sur une surface stable et plane.
- Ne vous mettez pas debout ni assis sur les caches en plastique situés à l'arrière du Cross-Trainer.
- Ne vous mettez pas debout sur le tube central du Cross-Trainer.
- La puissance nécessaire à chaque utilisateur pour effectuer un exercice peut différer de la puissance mécanique affichée sur le Cross-Trainer.
- Ne montez jamais à l'envers sur le Cross-Trainer.
- Montez et descendez du Cross-Trainer avec la plus grande précaution. Avant de monter, placez la pédale située de votre côté en position basse, en vous aidant des bras mobiles. Utilisez les poignées fixes lorsque vous avez besoin de renforcer votre équilibre. Pendant les exercices, tenez les bras mobiles.
- Lisez les avertissements sur chaque produit avant de commencer à vous entraîner.
- Si certaines étiquettes d'avertissement sont manquantes ou endommagées, contactez immédiatement le service d'assistance à la clientèle. Nous vous en fournirons de nouvelles. Les étiquettes d'avertissement sont expédiées avec les appareils et doivent être installées avant utilisation de ces derniers. Life Fitness n'est pas responsable des étiquettes manquantes ou endommagées.

Mobility Wheel


A mobility wheel is located underneath the rear of the unit. Engaging the mobility wheel allows the unit to be moved into final position or for cleaning and service.

 **CAUTION:** Mobility wheel should not be used on asphalt or gravel surfaces, damage to mobility wheel may occur.

 **WARNING:** Shock and electrocution hazard.



- Unplug unit and let sit 10 minutes before cleaning or performing maintenance.
- Electrical charge can remain in unit after unplugging.
- Keep water and liquids away from electrical parts.

1. Remove mobility access plug from the rear shroud.

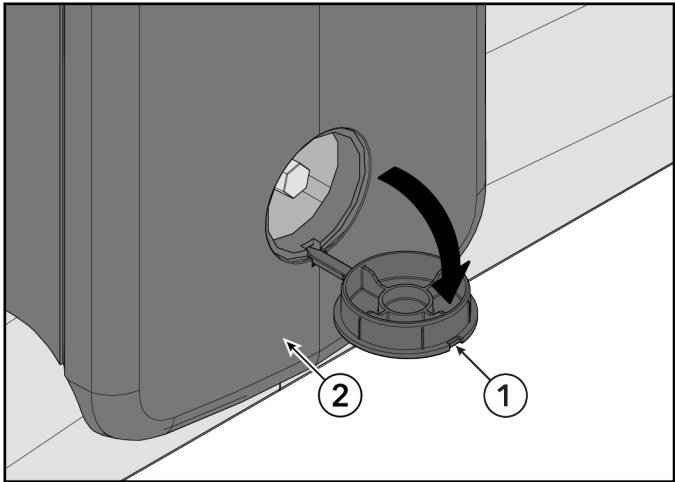

Item	Description	Qty.
1	Mobility Access Plug	1
2	Rear Shroud	1

2. Turn drive shaft clockwise using a 13 mm deep socket wrench to deploy mobility wheel.

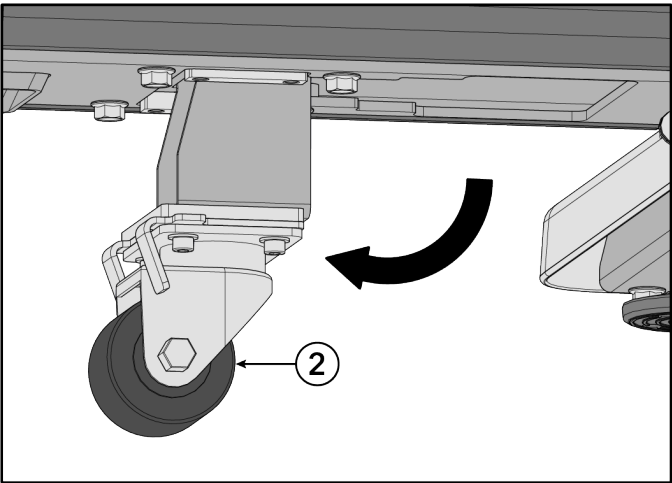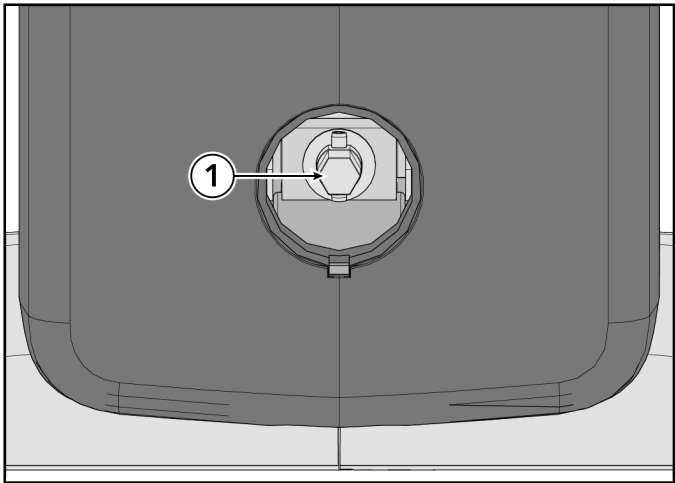


Item	Description	Qty.
1	Drive Shaft	1
2	Mobility Wheel	1


3. Move unit into final position.
4. Turn drive shaft counter-clockwise to retract mobility wheel.
5. Press mobility access plug into rear shroud.

How to Stabilize the Incline Elliptical

Read the entire manual before setting up the incline elliptical. After following all Safety Instructions, move the unit to the location where it will be used. Allow 1 ft. / 30 cm of clearance in front of the incline elliptical and at least 2 ft. / 60 cm on the side. It should be easy to mount the incline elliptical from the side.

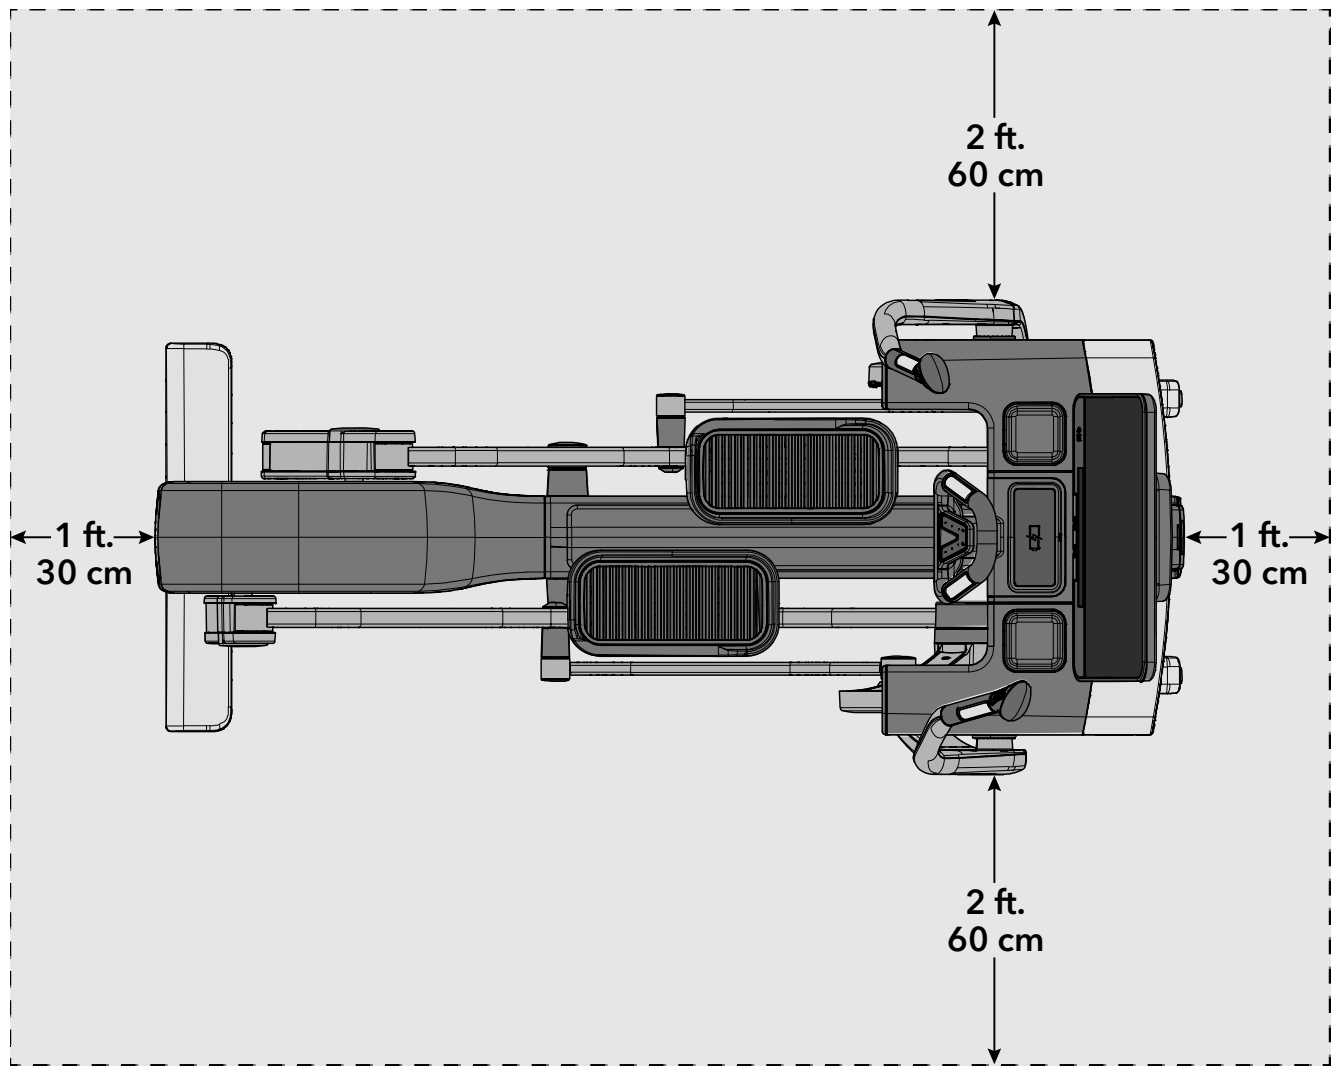

After placing the unit in position, check the unit’s stability by attempting to rock it from side to side. Any slight rocking indicates that the unit must be leveled. Determine which foot is not resting completely on the floor. Loosen the jam nut with an open-end M17 wrench and rotate the leg leveler to lower it. Verify that the unit is stable. Repeat the adjustment as necessary until the unit no longer rocks. Lock the adjustment by tightening the jam nut against the stabilizing bar.

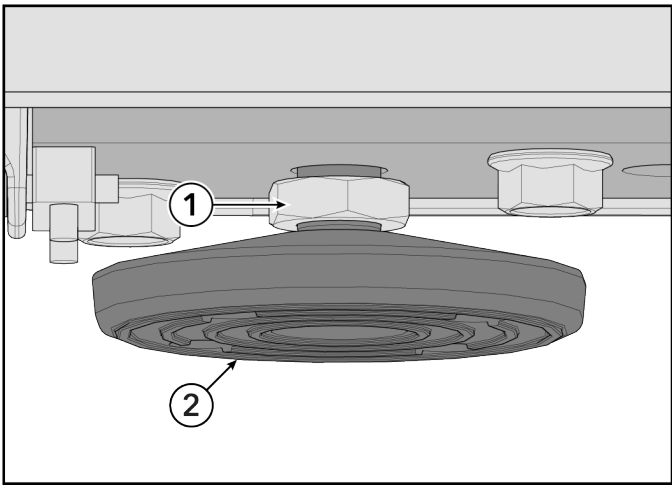

Item	Description	Qty.
1	Jam Nut	2
2	Leg Leveler	2

Electrical Power Requirements



WARNING: Use only the supplied AC power line cord. Do not use any modification to connect to a 2-prong outlet. Product must be connected to a properly rated 3-prong outlet.

Supply Voltage	Frequency	Input Current
100 - 240 VAC	50 - 60 Hz	3.5 A


Outlet Voltage	Commercial Units Outlet & Breaker (Amps)	Consumer / Home Units Outlet & Breaker (Amps)
120 VAC	20 (no more than 4 cross-trainers per breaker)	15 (no more than 3 cross-trainers per breaker)
230 VAC	12 (no more than 4 cross-trainers per breaker)	12 (no more than 3 cross-trainers per breaker)

NOTE: Do not modify the plug provided with this product. If the plug does not fit into an available electrical outlet, have a proper outlet installed by a qualified electrician.

NOTE: Make sure the AC power line cord is securely connected to the base unit. A loose connection may result in the unit not receiving power.

3. Product Overview


Product Features

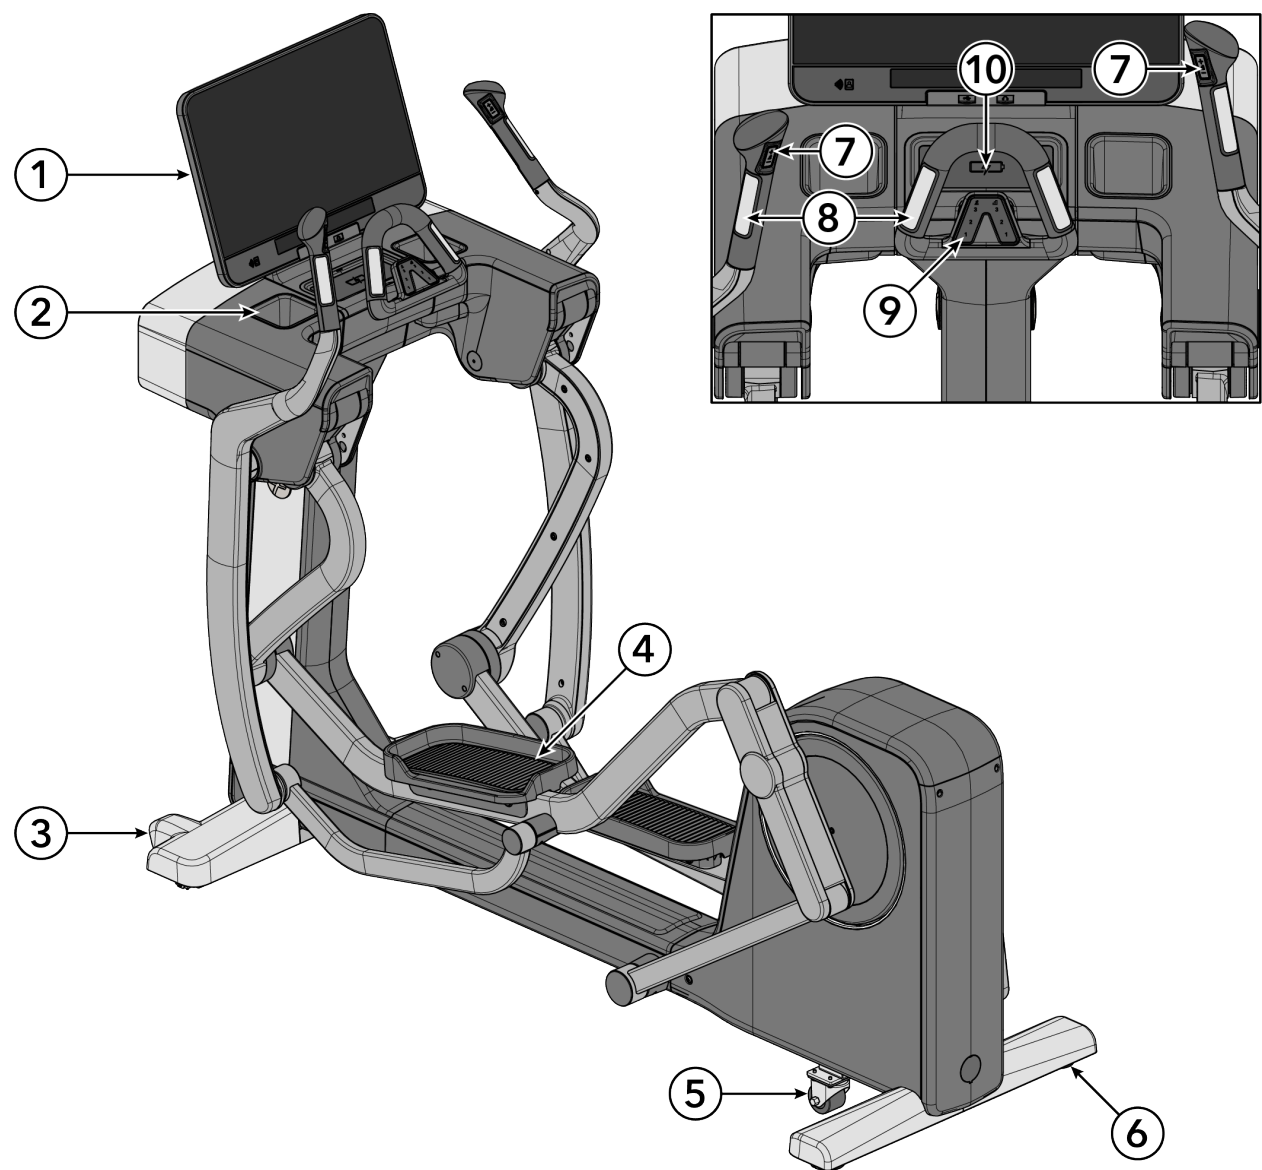

Item	Description	Qty.
1	Console	1
2	Cup Holder	2
3	Wheel	2
4	Pedal	2
5	Mobility Wheel	1
6	Leg Leveler	2
7	Thumb Switch	2
8	Contact Heart Rate Sensors (4 Upper / 4 Lower)	8
9	Activity Zone	1
10	Accessory Tray with Qi® Wireless Induction Charger	1

Connections

The following connection receptacle is located at the front of the incline elliptical.

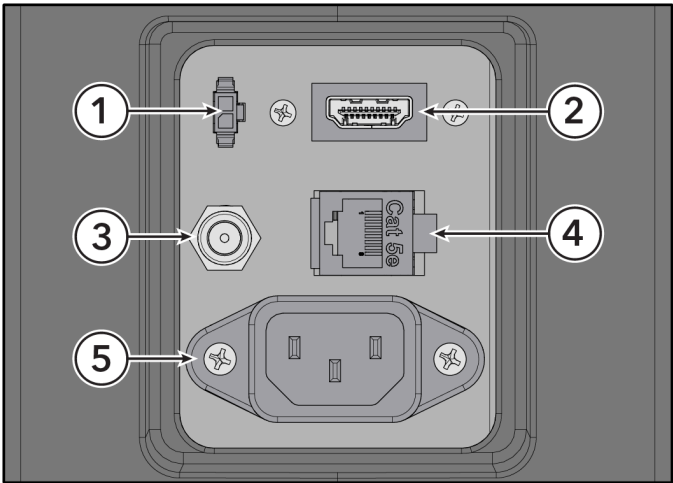

Item	Description
1	IR
2	HDMI
3	Coax
4	Ethernet
5	Power Input

How to Use the Cross-Trainer

Place feet anywhere on the pedals that feel comfortable. Many users put their toes 1-2" from the front edge of the pedals and 0.5-1" from the inside edge of the pedals. However, the pedals are large enough to allow a range of foot positions depending on preference. Using a combination of upper body strength with the moving handles and lower body strength at the feet, begin to rotate the pedals in a forward motion like walking. The cross-trainer can be used in a slow motion like walking or a faster motion like jogging and running. A typical usage speed is 50 - 60 revolutions of the pedals per minute. The user can concentrate more or less force on the moving handles to vary the degree of upper and lower body recruitment. The stationary bullhorn handles can also be used instead of the moving handles, to focus the effort on the lower body only. For added variation, the cross-trainer can be used in a backwards motion.


Mounting and Dismounting the Cross-Trainer

Before mounting, use the moving arms to bring the pedal nearest you to its lowest position. Grasp the stationary handles and carefully step on the pedals. To dismount, rotate the pedals so the pedal you are stepping off is in the lowest position. Step off the pedals while still holding the stationary handles. Then let go of the handles.

Qi® Wireless Induction Charger

How to use:

1. Place your device on the wireless rubber charging station indicated with the charging symbol.

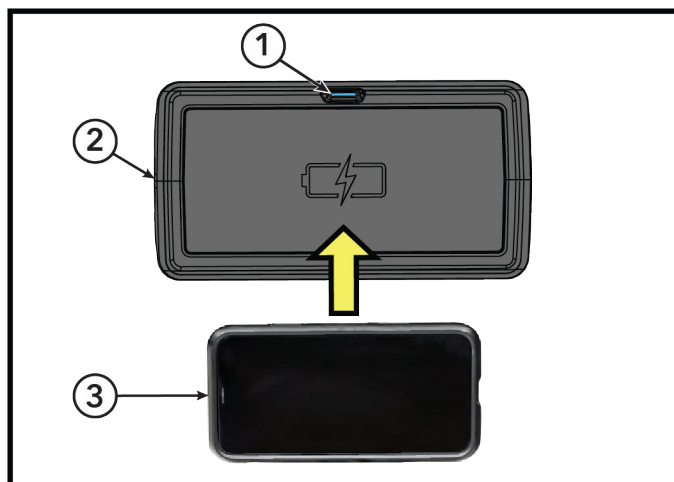

Item	Description	Qty
1	Blue Indicator Light	1
2	Wireless Charging Station	1
3	Phone	1

2. If your device supports Qi Wireless Charging, the blue indicator light will turn blue along with a notification on your mobile phone that the device is charging.

NOTE: See **Product Specifications** for Qi Wireless Induction Charger specifications.

NOTE: For troubleshooting information see [Troubleshooting - Wireless Charger](#).


Disclaimers and Precautions:

- Supports both Android and Apple Devices and their fast charge power profiles.
- The Wireless Charger is designed for phone charging only. It is not guaranteed to charge other peripheral devices like AirPods or Smart watches.
- Do not place the mobile phone on the wireless charger when conductive materials, such as metal objects and magnets, are placed between the mobile phone and the wireless charger. The mobile phone may not charge properly or may overheat, or the mobile phone and the cards may be damaged.
- Do not place the mobile phone on the wireless charger with a credit card or radio frequency identification (RFID) card (such as a transportation card or a key card) placed between the back of the mobile phone and the mobile phone cover.
- Keep credit cards and RFID cards (such as transportation or key cards) away from charging area.
- If a phone case stores credit cards or other RFID based cards, remove phone case before using wireless charger.
- Depending on the location of the mobile phone's wireless charging coil, your mobile phone may not charge properly. Adjust your mobile phone as needed until the charging indicator light is on and / or your mobile phone indicates it is charging.
- Wireless charging may not work properly if you have attached a thick case to your mobile phone. If your case is thick, remove it before placing your mobile phone on the wireless charger.
- If you connect a charger to the mobile phone during wireless charging, the wireless charging feature will be unavailable.
- If you are using your phone with a connected headset, place the phone in the landscape position. Placing your phone in the portrait position may move its charging coil out of position to charge.
- If you are using an attached wireless charging case on your mobile phone, never place just the case on the charging pad. This may overheat the charging pad and / or the case, and has a risk of fire and injury.
- The wireless charger does not have a power switch.


How To Adjust Smart Lighting

The base is equipped with lighting that can be tuned On or Off, has three brightness setting, and 16 colors.

1. Select **Language** icon from Attract Screen to access the **Select Language** screen.

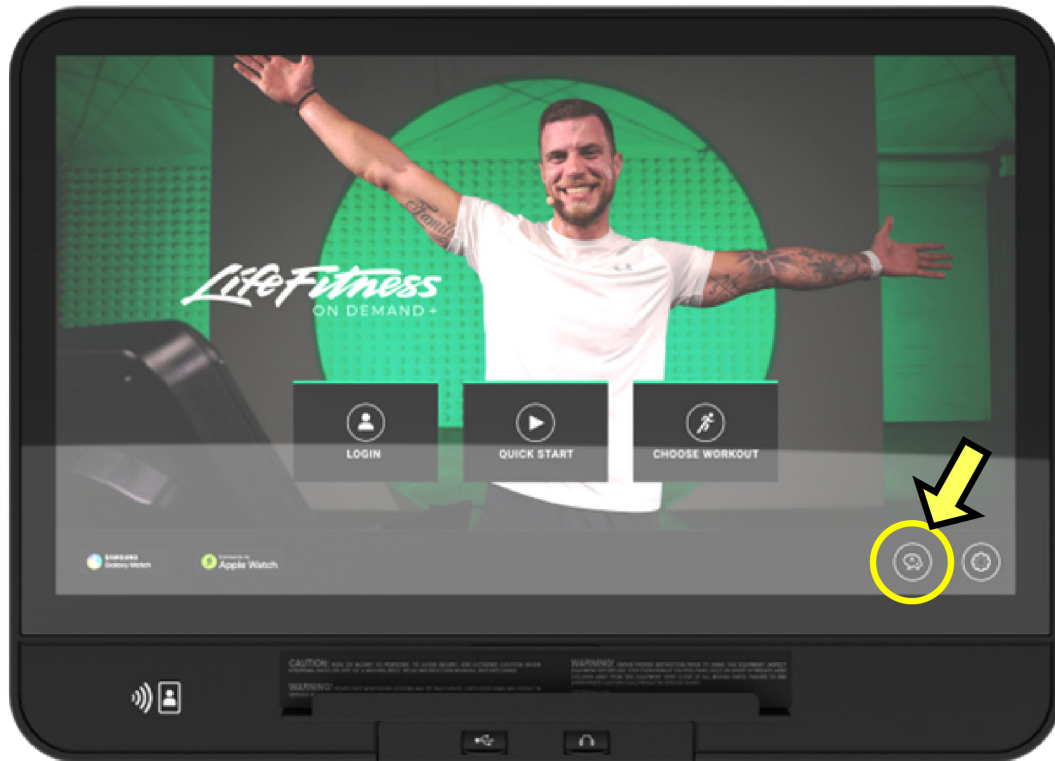


2. Tap the bottom part of the **Select Language** screen in the following sequence: **Lower-Left, Lower-Right, Lower-Left, Lower-Right**.

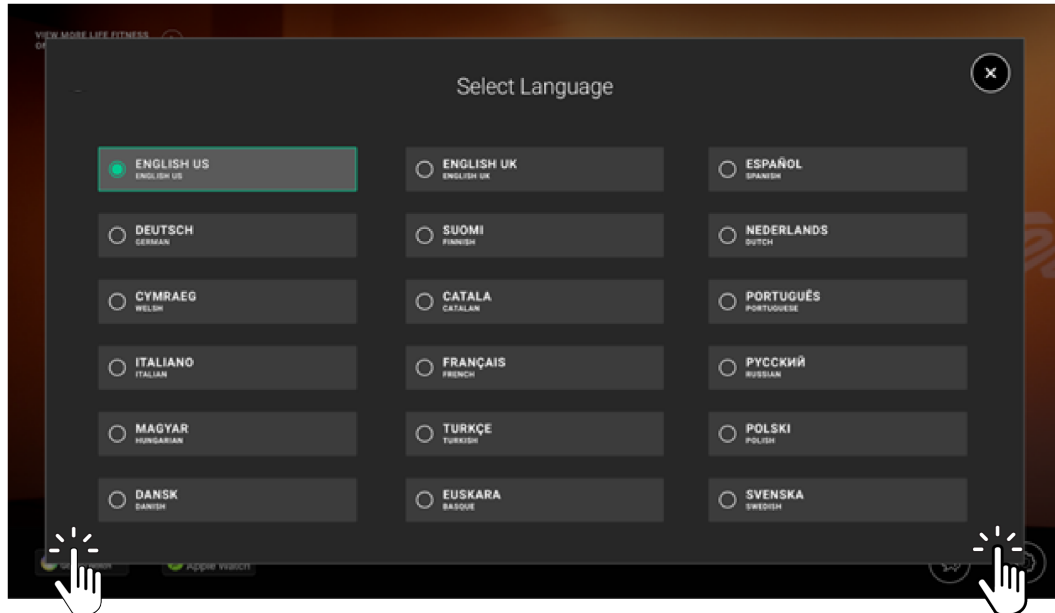

NOTE: Make sure you tap INSIDE the black square!

3. Navigate through the System Options menu to **Configuration > Manager**.

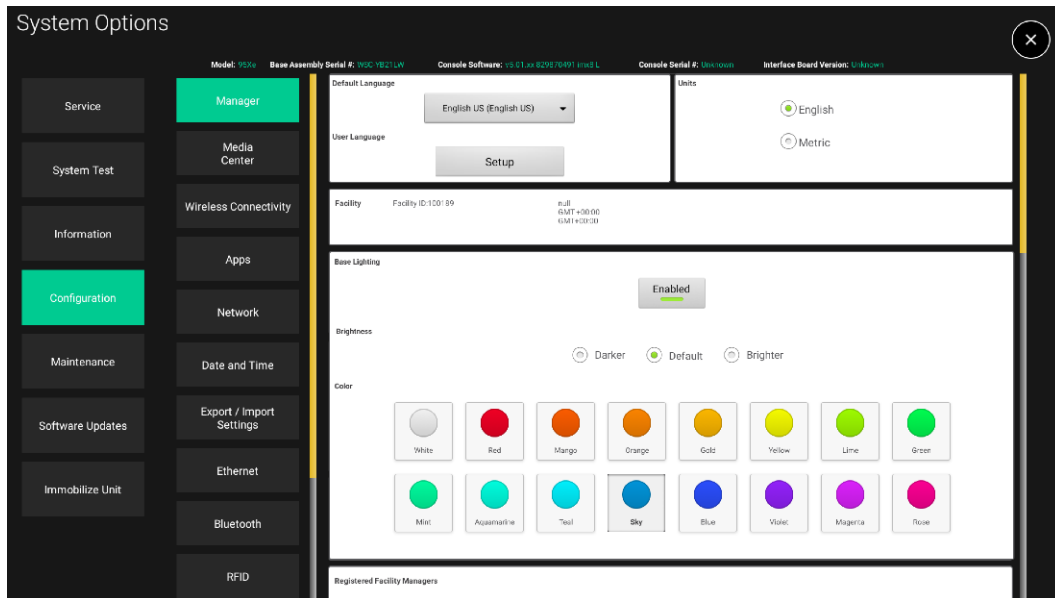

4. Scroll down to **Smart Lighting**.
5. Toggle the **Enabled** button to turn lights On or Off.
6. Adjust the **Brightness** as needed.
7. Adjust the **Color** to your choice of 16 colors.

4. Assembly

Link to Additional Information Online

In addition to the content provided in this manual, please scan the QR code for further and updated information.

Commercial

Life Fitness Symbio Incline Elliptical Commercial Install Information



<https://lfn.fit/SymbioInclineEllipticalInstall>


Home

Life Fitness Symbio Incline Elliptical Home Install Information



<http://lfn.fit/SymbioInclineEllipticalHomeInstall>

Hardware

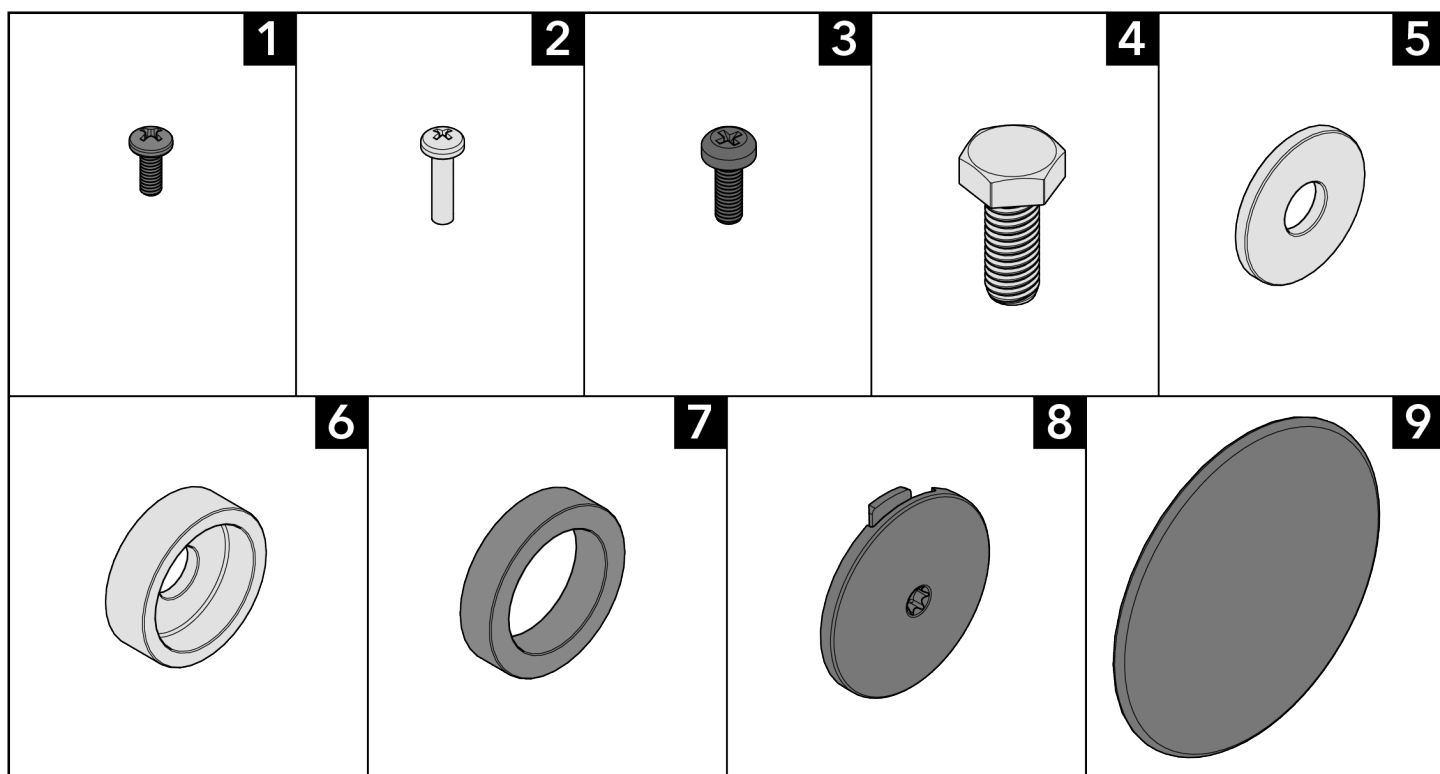

Item	Description	Qty.
1	Screw: M4 x 0.7 x 10, PHL, PH, ST, BZ	4
2	Screw: M4 x 0.7-6G6G x 16, ISO, PHL, PAN, MS, ST, ZN	5
3	Screw: M5 x 0.8 x 14, PHL, PAN, MS, ST, BZ	6
4	Screw: M10 x 1.5 6G x 25 UNS, Hex Cap, ST, ZS, Patch	4
5	Washer: M10 x 31 x 3, SPC, ST	2
6	Washer: M10 x 32 x 10, 25mm, SPC, ST	2
7	Washer: M25 x 35 x 2.5, SPC, ST	2
8	Inside Bridge Cap	2
9	Coupler Link Cap	2

Tools Required

- 13 mm deep socket
- 17 mm socket wrench
- T30 Torx wrench
- #1 Phillips screwdriver
- #2 Phillips screwdriver
- Torque screwdriver
- Torque wrench
- Diagonal cutter

NOTE: Do NOT use impact drivers to install screws.


Assembly Procedure

Two people are recommended for this procedure.

TIP: Read and understand all instructions thoroughly before assembling this unit. Check all items carefully. If there is damage, see the Customer Service section of this manual for proper procedure to return, replace, or reorder parts.


Install Handlebar Assemblies

1. Remove zip-tie from handlebar bearing assembly using a diagonal cutter.

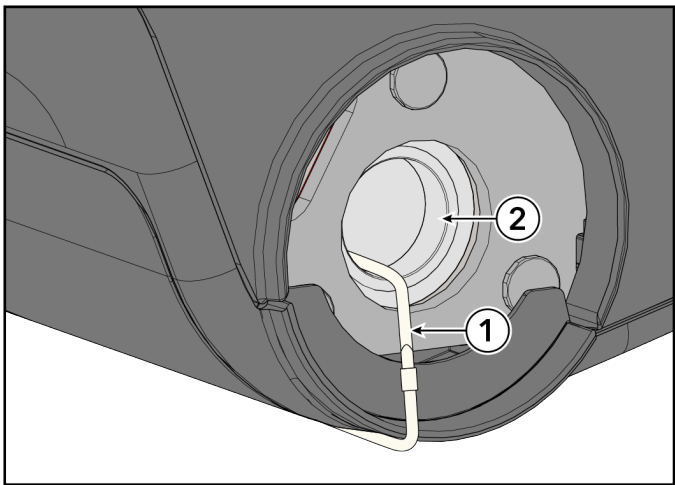


Item	Description	Qty.
1	Zip-Tie	1
2	Handlebar Bearing Assembly	1

NOTE: Cable access door will drop down once zip-tie is removed.

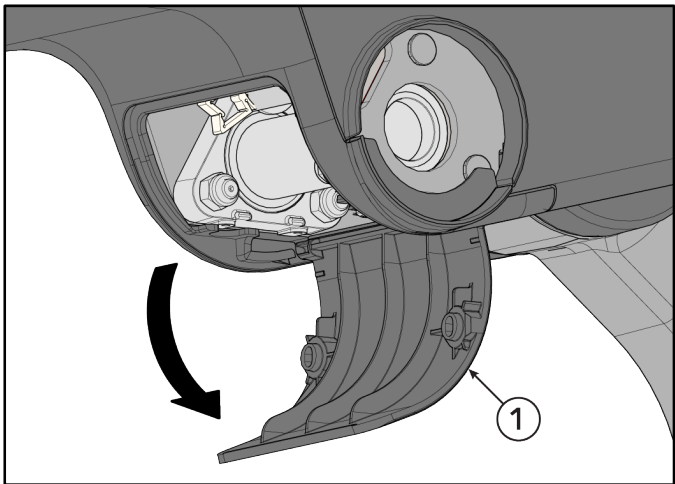

Item	Description	Qty.
1	Cable Access Door	1


2. Slide spacer washer onto bottom pivot shaft of handlebar assembly. Lift and align coupler link with bottom pivot shaft of handlebar assembly.

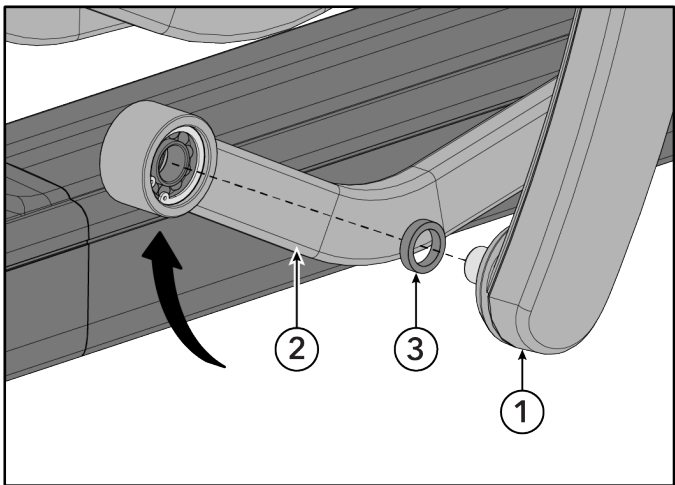

Item	Description	Qty.
1	Handlebar Assembly	1
2	Coupler Link	1
3	Washer: M25 x 35 x 2.5, SPC, ST	1


3. Slide pivot shafts of handlebar assembly through handlebar bearing assembly and coupler link.

NOTE: Insert handlebar assembly only halfway through handlebar bearing assembly.

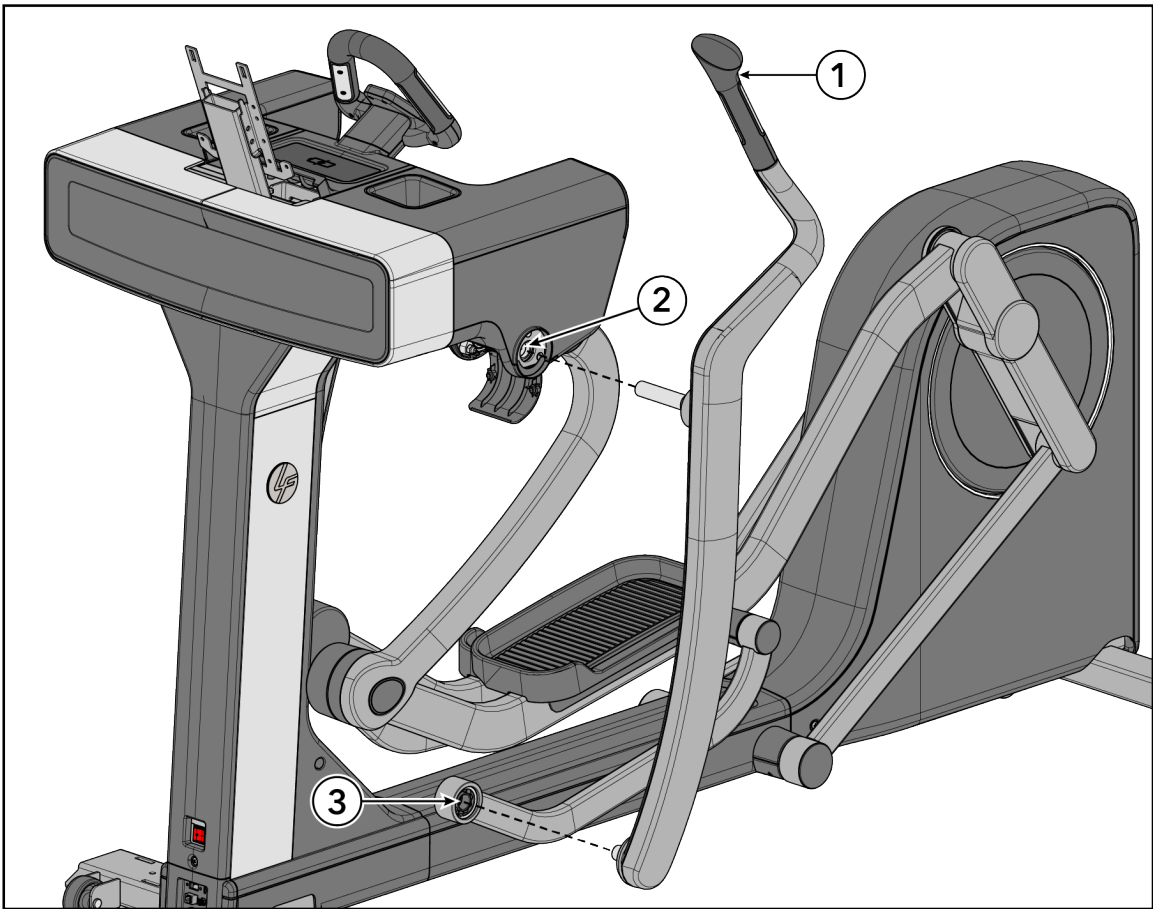

Item	Description	Qty.
1	Handlebar Assembly	1
2	Handlebar Bearing Assembly	1
3	Coupler Link	1


4. Slide cables from handlebar assembly through wire hole on bridge.

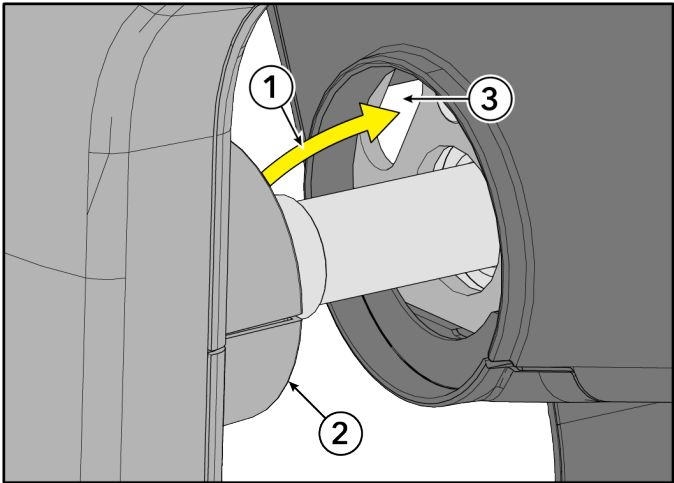

Item	Description	Qty.
1	Cables	2
2	Handlebar Assembly	1
3	Wire Hole	1

5. Slide handlebar assembly fully through handlebar bearing assembly.

6. Install screw and washer securing handlebar assembly to bridge using a 17 mm socket wrench.

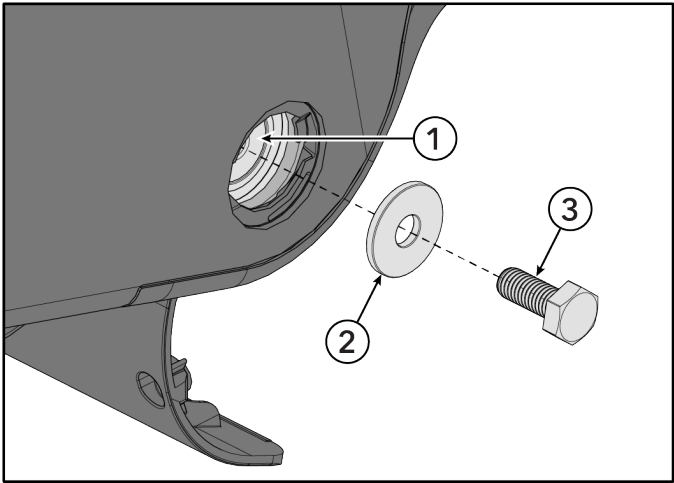


Item	Description	Qty.
1	Handlebar Assembly	1
2	Washer: M10 x 31 x 3, SPC, ST	1
3	Screw: M10 x 1.5 6G x 25 UNS, Hex Cap, ST, ZS, Patch	1




Tighten hardware to 11.8 ft-lb / 16 Nm.

7. Install inside bridge cap to bridge by placing in slot and turning a quarter turn. Tighten using a T30 Torx bit until you hear a snap/click sound.

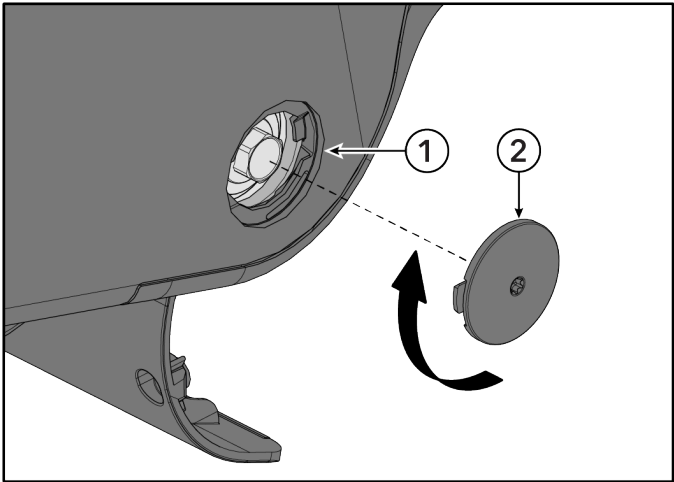

Item	Description	Qty.
1	Bridge	1
2	Inside Bridge Cap	1

8. Install screw and cupped washer securing handlebar assembly to coupler link using a 17 mm socket wrench.

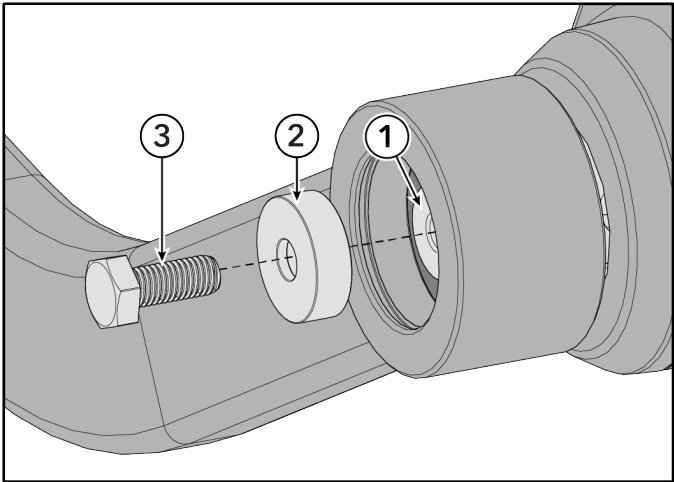


Item	Description	Qty.
1	Handlebar Assembly	1
2	Washer: M10 x 32 x 10, 25mm, SPC, ST	1
3	Screw: M10 x 1.5 6G x 25 UNS, Hex Cap, ST, ZS, Patch	1





Tighten hardware to 11.8 ft-lb / 16 Nm.

9. Press coupler link cap onto coupler link.
- NOTE:** Make sure cap is flush with coupler hub.

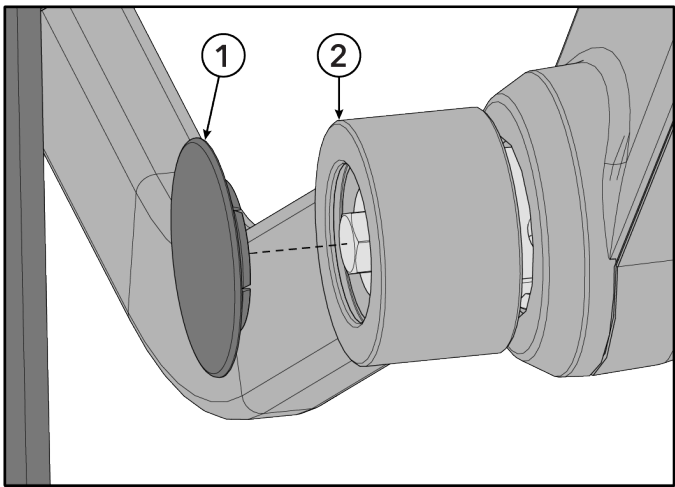

Item	Description	Qty.
1	Coupler Link Cap	1
2	Coupler Link	1


10. Connect cables in cable access door. After connecting cables, press cables into cable clips on cabling bracket.

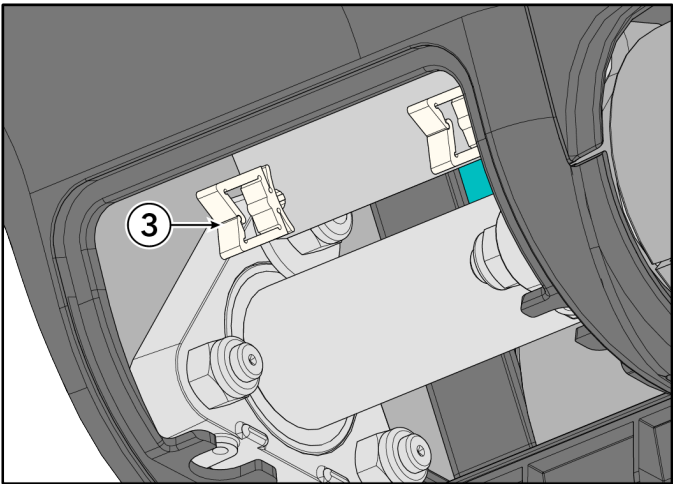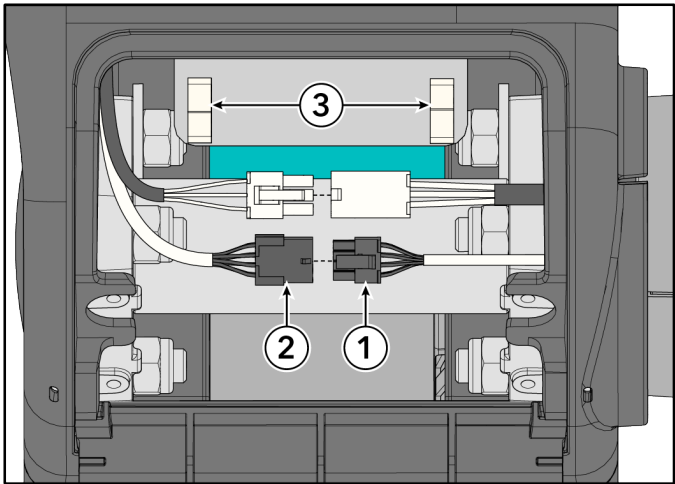

Item	Description	Qty.
1	Handlebar Assembly Cables	1
2	Bridge Cables	1
3	Cable Clips	2

11. Close cable access door.

12. Install screws securing cable access door to bridge using a Phillips screwdriver.

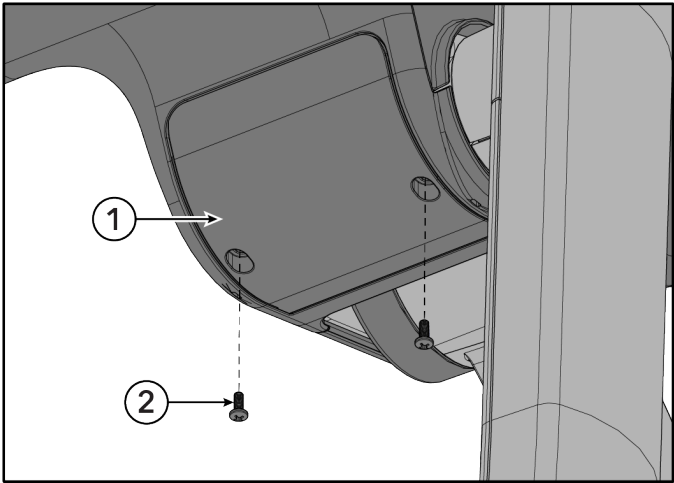

Item	Description	Qty.
1	Cable Access Door	1
2	Screw: M4 x 0.7 x 10, PHL, PH, ST, BZ	2




Tighten hardware to 0.8 ft-lb / 1.1 Nm.

13. Repeat Steps 1-12 to install opposite handlebar assembly.


Install Stabilizer Castings

1. Press front stabilizer castings down onto front stabilizer until Tinnerman clips snap into place.

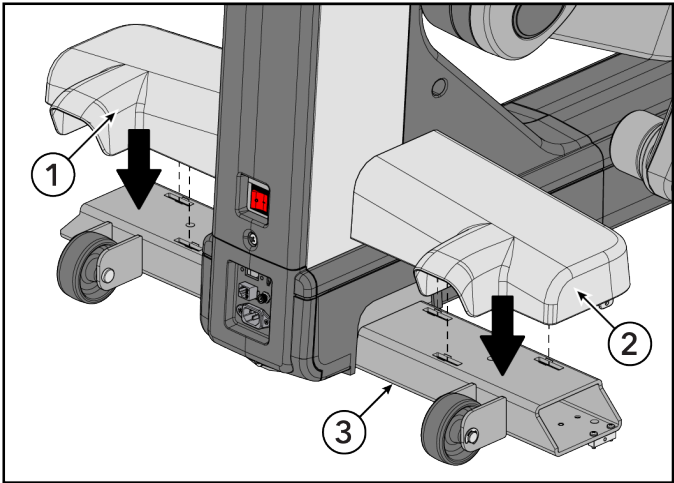


Item	Description	Qty.
1	Front Stabilizer Casting, Right	1
2	Front Stabilizer Casting, Left	1
3	Front Stabilizer	1

2. Slide front stabilizer castings towards center of unit.

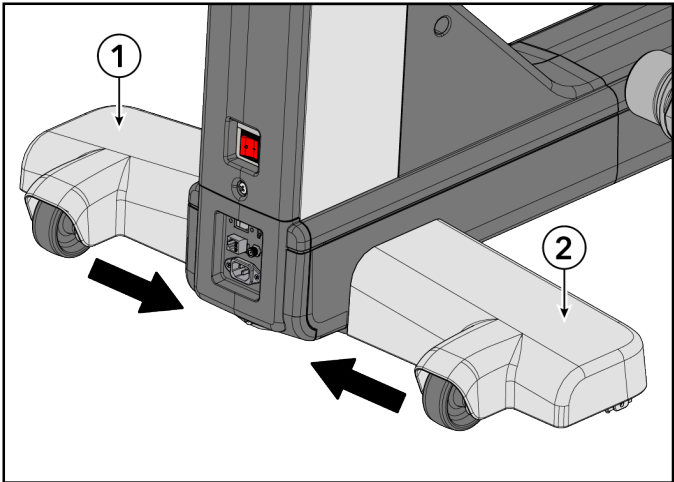

Item	Description	Qty.
1	Front Stabilizer Casting, Right	1
2	Front Stabilizer Casting, Left	1

3. Install screws securing front stabilizer castings to front stabilizer using a Phillips screwdriver.

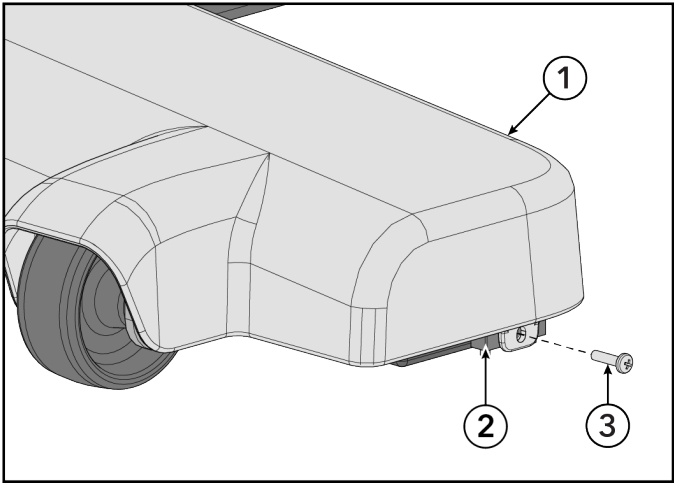


Item	Description	Qty.
1	Front Stabilizer Casting	2
2	Front Stabilizer	1
3	Screw: M4 x 0.7-6G6G x 16, ISO, PHL, PAN, MS, ST, ZN	2




Tighten hardware to 0.8 ft-lb / 1.1 Nm.

4. Slide rear stabilizer castings onto rear stabilizer. Press towards center of unit.

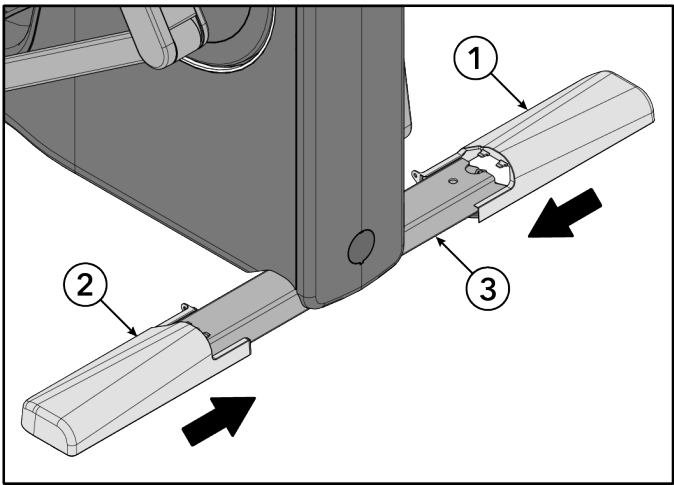

Item	Description	Qty.
1	Rear Stabilizer Casting, Right	1
2	Rear Stabilizer Casting, Left	1
3	Rear Stabilizer	1

5. Install screws securing rear stabilizer castings to rear stabilizer using a Phillips screwdriver.

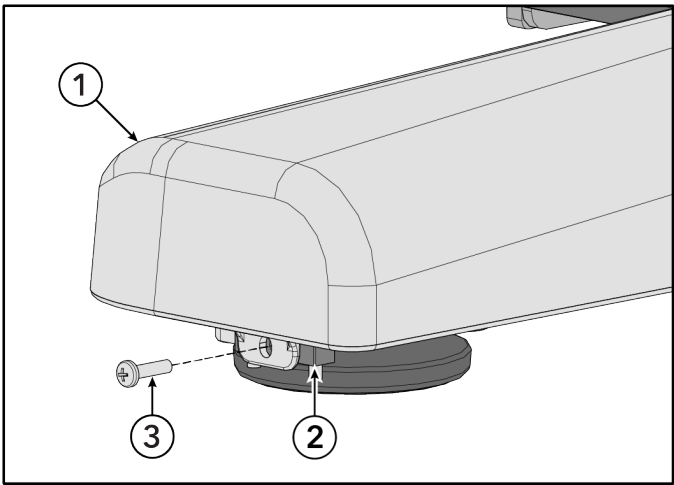


Item	Description	Qty.
1	Rear Stabilizer Casting	2
2	Rear Stabilizer	1
3	Screw: M4 x 0.7-6G6G x 16, ISO, PHL, PAN, MS, ST, ZN	2



Tighten hardware to 0.8 ft-lb / 1.1 Nm.

6. Install screw securing stabilizer castings together using a Phillips screwdriver.

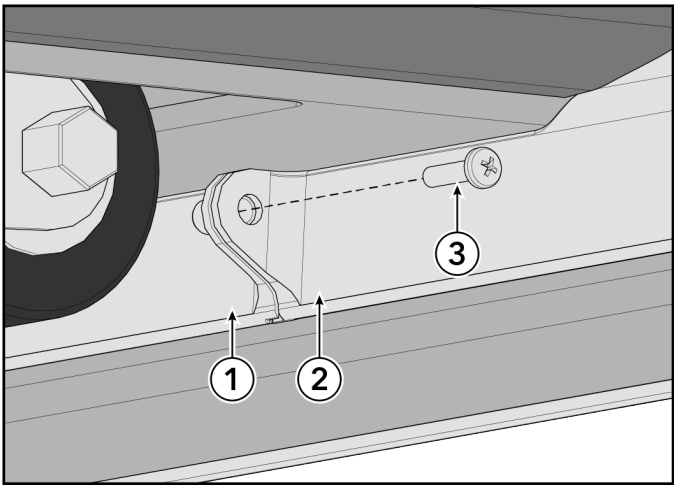


Item	Description	Qty.
1	Rear Stabilizer Casting, Right	1
2	Rear Stabilizer Casting, Left	1
3	Screw: M4 x 0.7-6G6G x 16, ISO, PHL, PAN, MS, ST, ZN	1



Tighten hardware to 0.8 ft-lb / 1.1 Nm.

Install Console


1. Route specified cables up front of console weldment and over notch at top. Route remaining cables to left side of console weldment.

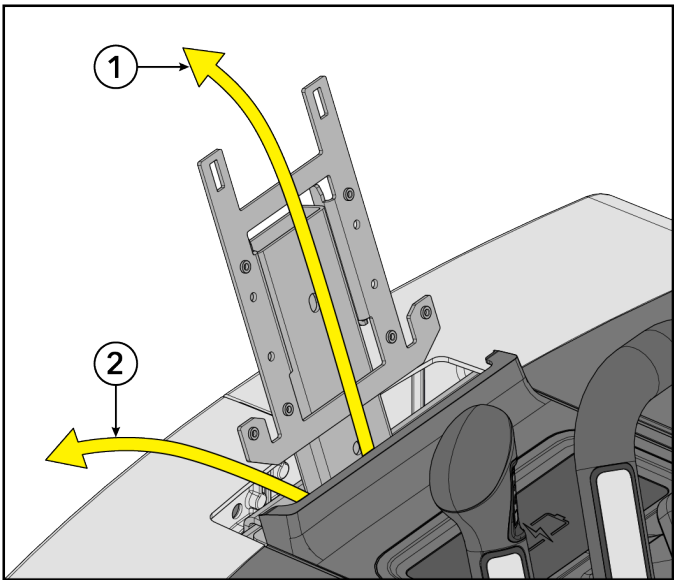

Item	Description	Qty.
1	Wireless Charger Coax HDMI IR Ethernet	5
2	Base Power Base Comm Fitcore / Activity Zone	3

2. Slide console down over tabs on console weldment.


NOTE: Hold cables down over notch at top of console weldment when positioning console.

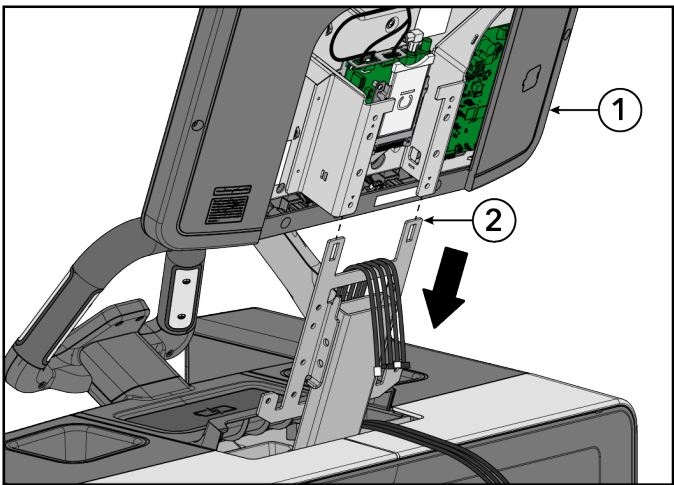

Item	Description	Qty.
1	Console	1
2	Console Weldment	1

3. Install screws securing console to console weldment using a Phillips screwdriver.

NOTE: Triangles on console frame indicate screw installation locations.

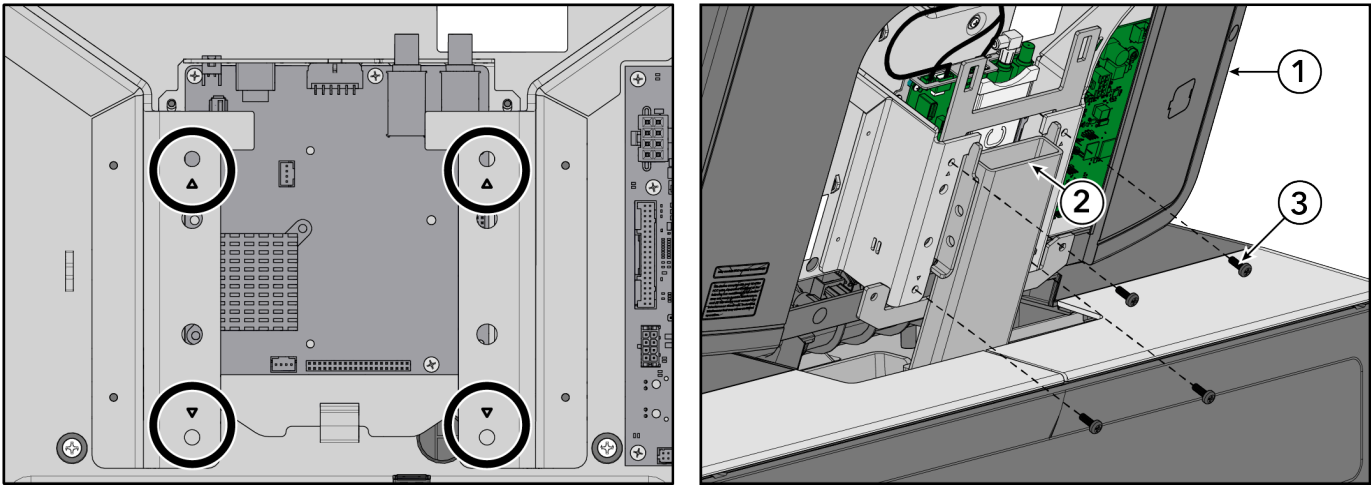


Item	Description	Qty.
1	Console	1
2	Console Weldment	1
3	Screw: M5 x 0.8 x 14, PHL, PAN, MS, ST, BZ	4



Hand tighten hardware.

4. Tighten hardware to 2.2 ft-lb / 3 Nm.


Base to Console Cable Connections

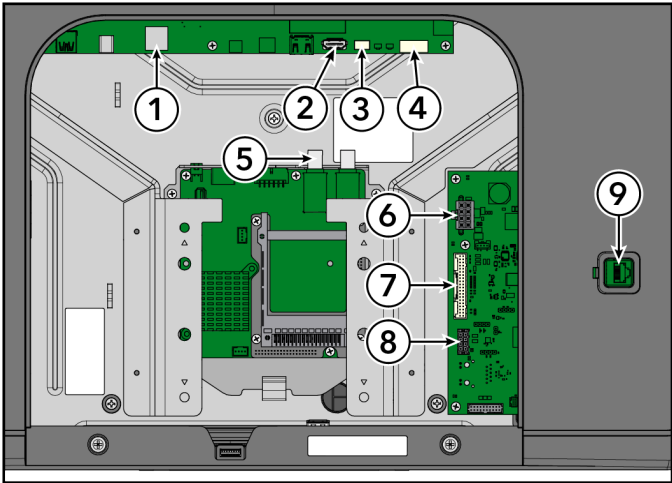

Item	Description
1	Ethernet
2	HDMI
3	IR
4	Wireless Charger
5	Coax
6	Base Power
7	Activity Zone / Lifepulse / Handlebars
8	Base Comm
9	CSAFE


Install Console Rear Shroud

1. Set console rear shroud into bridge opening.

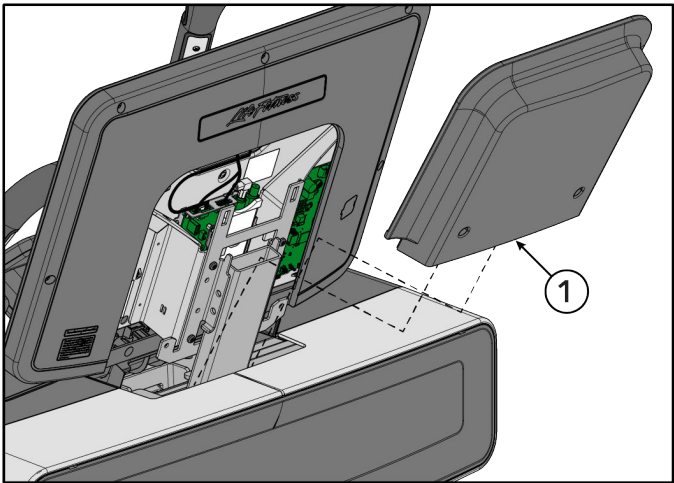


Item	Description	Qty.
1	Console Rear Shroud	1

ATTENTION: Make sure cables are placed behind tab on console weldment before installing console rear shroud.

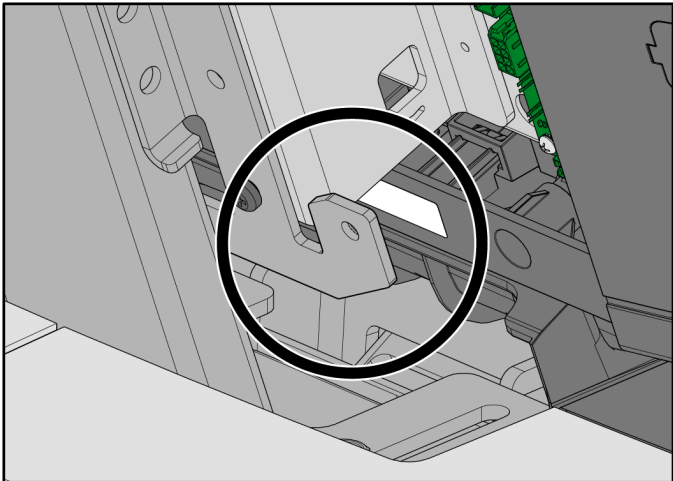


2. Tip console rear shroud forward until Tinnerman clips snap into place in console weldment.

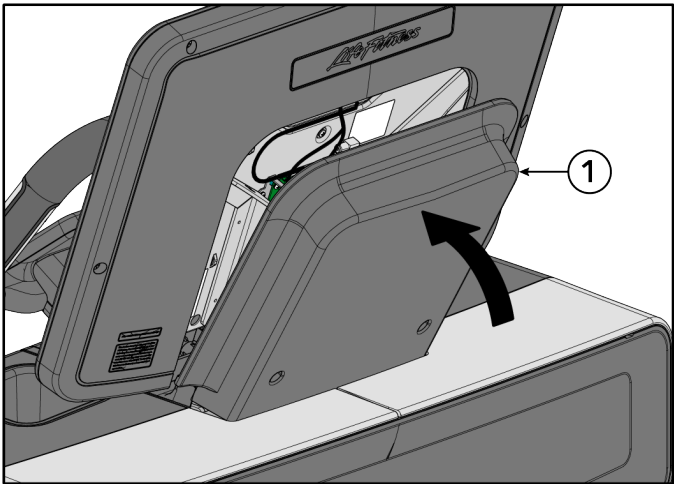

Item	Description	Qty.
1	Console Rear Shroud	1

3. Install screws securing console rear shroud to console weldment using a Phillips screwdriver.

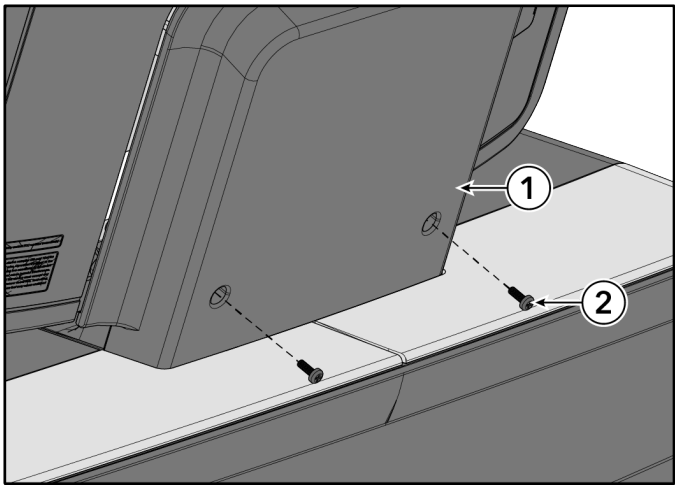

Item	Description	Qty.
1	Console Rear Shroud	1
2	Screw: M5 x 0.8 x 14, PHL, PAN, MS, ST, BZ	2



Tighten hardware to 1.1 ft-lb / 1.5 Nm.

Test Unit For Proper Operation

5. Specifications

Product Specifications

Designed Use	Heavy / Commercial, EN ISO 20957, Class SA Symbio Incline Elliptical
	Home, EN ISO 20957, Class HA Symbio Home Incline Elliptical
Maximum User Weight	400 lbs. / 181 kg
Drive Type	Generator
Incline Levels	15
Resistance Levels	26
Lighting	- Keypads on handlebars and Activity Zone - Crank ring - Life Fitness logo in back of console - Life Fitness bug on monocolumn
Lighting Colors	16 colors; 3 brightness levels
Console	24" diagonal
Wireless Communication	Bluetooth, NFC, Apple and Samsung Watch compatibility, ANT+, RFID, Wireless Connectivity
On-Demand+	Over 500 classes and courses
Power Requirements	See Electrical Power Requirements Section
Heart Rate Monitoring Systems	Patented Lifepulse™ digital contact heart rate and Polar® telemetry compatible heart rate monitoring system Compatible with ANT+ and Bluetooth heart rate monitoring devices Chest strap heart rate monitor included with home units
Wireless Charging	Qi Wireless Induction Charging: - Charging area: 50 mm x 80 mm (approximately 2 in. x 3 in.) - Charging response time: less than 3 seconds - Maximum output: 10 W - Charging protocol compatibility: Qi Fast Charging

	Physical Dimensions (with console)
Length	81.4 in. / 206.8 cm
Width	37.5 in. / 95.3 cm
Height	68.2 in. / 173.2 cm
Weight	670 lbs. / 304 kg

6. Service and Technical Data

Preventive Maintenance Schedule

Item	Weekly	Monthly	Biannually
Activity Zone	Clean		Inspect
Console Mounting Bolts			Inspect
Console / Overlays	Clean		Inspect
Cup Holders / Accessory Trays	Clean	Inspect	
Frame	Clean		Inspect
Front Stabilizer Pads			Inspect
Handles - Moving and Stationary	Clean	Inspect	
Hardware			Inspect
Lifepulse Sensors	Clean / Inspect		
Metallic Covers	Clean		Inspect
Moving Linkages	Clean	Inspect	
Pedals	Clean	Inspect	
Plastic Covers	Clean	Inspect	
RDS TecSPaks			Inspect
Rear Leg Levelers		Inspect / Adjust	
Smart Lighting LED's			Inspect
Wireless Charging Pad	Clean	Inspect	

Preventive Maintenance Tips

NOTE: Safety of the equipment can be maintained only if the equipment is examined regularly for damage or wear. Keep the equipment out of use until defective parts are repaired or replaced. Pay special attention to parts that are subject to wear, as outlined below.

REMARQUE : Pour assurer la sécurité du matériel, il convient de l'inspecter régulièrement afin de déceler tout signe d'usure ou d'endommagement. N'utilisez pas l'appareil avant d'avoir réparé ou remplacé les pièces défectueuses. Portez une attention toute particulière aux pièces qui s'usent, comme indiqué ci-dessous.

The following preventive maintenance tips will keep the product operating at peak performance:

- Locate the product in a cool, dry place.
- Clean the display console and all exterior surfaces with an approved or compatible cleaner (see Approved and Compatible Cleaners) and a microfiber cloth.
- Long fingernails may damage or scratch the surface of the console; use the pad of the finger to press the selection buttons on the console.
- Clean the top surface of the pedals regularly.
- Clean the housing and moving arms thoroughly on a regular basis.

NOTE: When cleaning the exterior of the unit, a non-abrasive cleaner and soft cotton cloth are strongly recommended. At no time should cleaner be applied directly to any part of the equipment.

Approved and Compatible Cleaners

Two preferred cleaners have been approved by reliability experts: PureGreen 24 and Gym Wipes. Both cleaners will safely and effectively remove dirt, grime and sweat from equipment. PureGreen 24 and the Antibacterial Force formula of Gym Wipes are both disinfectants that are effective against MRSA and H1N1.

PureGreen 24 is available in a spray which is convenient for gym staff to use. Apply the spray to a microfiber cloth and wipe down the equipment. Use PureGreen 24 on the equipment for at least 2 minutes for general disinfection purposes and at least 10 minutes for fungus and viral control.

Gym Wipes are large, durable pre-moistened wipes to use on the equipment before and after workouts. Use Gym Wipes on the equipment for at least 2 minutes for general disinfection purposes.

Contact Customer Support Services to order these cleaners (1-800-351-3737 or email: customersupport@lifefitness.com).

Mild soap and water or a mild non-abrasive household cleaner can also be used to clean the display and all exterior surfaces. Use a soft microfiber cloth only. Apply the cleaner to the microfiber cloth before cleaning. DO NOT use ammonia or acid based cleaners. DO NOT use abrasive cleaners. DO NOT use paper towels. DO NOT apply cleaners directly to the equipment surfaces.

Troubleshooting the Polar® Heart Rate Chest Strap

Heart rate reading is erratic or absent entirely

Probable Cause	Corrective Action
Belt transmitter electrodes are not wet enough to pick up accurate heart rate readings.	Wet the belt transmitter electrodes.
Belt transmitter electrodes are not laying flat against the skin.	Ensure the belt transmitter electrodes are laying flat against the skin.
Belt transmitter needs cleaning.	Wash the belt transmitter with mild soap and water.
Belt transmitter not properly set up.	Setup of the belt transmitter is accomplished by initially bringing it with in 1 foot / 30.5 cm of the receiver. The receiver is in the console. After the heart rate is displayed on the console the range is extended to 3 feet / 91.4 cm.
Chest strap battery is depleted.	Contact Customer Support Services for instructions on how to have the chest strap replaced.

Abnormally elevated heart rate readings

Probable Cause	Corrective Action
Electromagnetic interference from: • Television sets and / or antennas • Cell phones • Computers • Cars • High voltage power lines • Motor driven exercise equipment	Move the exercise equipment a few inches away from the probable cause, or move the probable cause a few inches away from the exercise equipment, until the heart rate readings are accurate.

Troubleshoot the Lifepulse™ Sensors

If the heart rate reading is erratic or missing, do the following:

- Dry the hands to prevent slipping.
- Apply hands to the sensors that are set into the moving handlebars.
- Grasp the sensors firmly.
- Apply constant pressure around the sensors.

Troubleshooting - Wireless Charger

A blue LED indicator is located on the front of the wireless charger rack. Reference the table below for description and LED indicator status.

Status	Description		LED Indicator
Start Up	Console is powered ON.		ON
Standby	Charger is waiting for a device to be placed on.		OFF
Charging	Charger is currently charging a correctly placed device.		ON
Charge Complete	Charger completed charging a device.		ON
Charging Error	Possible Errors: 1. A foreign object (RFID card, magnets, metal objects, etc.) is detected on the charger coils. 2. The phone case is too thick. 3. Wireless charger is damaged.	Corrective Actions: 1. Remove foreign object from wireless charger. Reposition your phone. 2. Remove the phone case. Place phone on wireless charger. 3. Contact Life Fitness Customer Support Services.	OFF

How To's

Knowledge Base

See <https://lfn.fit/KnowledgeBase> for more detailed information.

How to Obtain Product Service

1. Verify the symptom and review the operating instructions. The problem may be unfamiliarity with the product and its features and workouts.
2. Locate and write down the serial number of the unit which is located on the top right of the front stabilizer.
3. Contact Life Fitness Customer Support Services at <http://www.lifefitness.com>.

7. Warranty

What is Covered

This Life Fitness commercial exercise equipment product is warranted to be free of all defects in material and workmanship.

Who is Covered

The original purchaser or any person receiving the product as a gift from the original purchaser. Warranty will be voided on subsequent transfers.

How Long It is Covered

All coverage is provided by specific Product according to the guidelines listed in Warranty Information.

Who Pays Transportation and Insurance For Service

If the Product or any covered part must be returned to a service facility for repairs, We, Life Fitness, will pay all transportation and insurance charges for the first year. You are responsible for transportation and insurance charge after the first year.

What We Will Do To Correct Covered Defects

We will ship to you any new or rebuilt replacement part or component, or at our option, replace the Product. Such replacement parts are warranted for the remaining portion of the original warranty period.

What is Not Covered

Any failures or damage caused by unauthorized service, misuse, accident, negligence, improper assembly or installation, debris resulting from any construction activities in the Product's environment, rust or corrosion as a result of the Product's location, alterations or modifications without our written authorization or by failure on your part to use, operate and maintain the Product as set out in your Operation Manual ("Manual").

One type RJ45 interchangeable Network ready and Fitness Entertainment port is supplied with the Product. This port complies with the FitLinxx CSAFE specification dated August 4, 2004 stating: 4.75 VDC to 10 VDC; maximum current of 85 mA. Any Product damage caused by a load exceeding this FitLinxx CSAFE specification is not covered by warranty.

All terms of this warranty are void if this product is moved beyond the continental borders of the United States of America (excluding Alaska, Hawaii and Canada) and are then subject to the terms provided by that country's local authorized Life Fitness representative.

What You Must Do

Retain proof of purchase. use, operate and maintain the Product as specified in the Manual; notify the place of purchase of any defect within 10 days after discovery of the defect; if instructed, return any defective part for replacement or, if necessary, the entire Product for repair. Life Fitness reserves the right to decide whether or not a product is to be returned for repair.

How to Get Parts and Service

Refer to the Corporate Headquarters section of this manual for your local service contact information. Reference your name, address and the serial number of your Product (consoles and frames may have different serial numbers). They will tell you how to get a replacement part, or, if necessary, arrange for service where your Product is located.

Exclusive Warranty

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OF ANY KIND EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART. We neither assume nor authorize any person to assume for us any other obligation or liability concerning the sale of this Product. Under no circumstances shall we be liable under this warranty, or otherwise, of any damage to any person or property, including any lost profits or lost savings, for any special, indirect, secondary, incidental or consequential damages of any nature arising out of the use of or inability to use this Product. Some states do not allow the exclusion or limitation of implied warranties or of liability for incidental or consequential damages, so the above limitations or exclusions may not apply to you.

Changes in Warranty Not Authorized

No one is authorized to change, modify or extend the terms of this limited warranty.

Effects of State Laws


This warranty gives you specific legal rights, and you may have other rights which vary from state to state and country by country.

Terms of Warranty Coverage

Please use the link below to access component warranty terms:

<http://lifelitness.com/warranties>



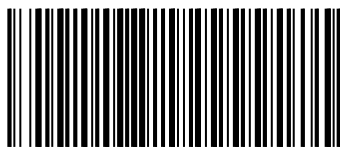

1022786-0001